

THE DISTILLATION OF RESINS

AND THE PREPARATION OF

ROSIN PRODUCTS, RESINATES, LAMP-BLACK,
PRINTING INKS, TYPEWRITING INKS, ETC.

TRANSLATED FROM THE GERMAN OF

VICTOR SCHWEIZER

SECOND ENGLISH EDITION

REVISED AND RE-WRITTEN BY

H. B. STOCKS, F.I.C., F.C.S.

WITH SIXTY-EIGHT ILLUSTRATIONS

LONDON

SCOTT, GREENWOOD AND SON

(E. GREENWOOD)

8 BROADWAY, LUDGATE, E.C., 4

1917


[The sole right of translation into English rests with Scott, Greenwood and Son]

638.5

117

First English Edition, 1907

Second English Edition, Revised and Re-written, June, 1917

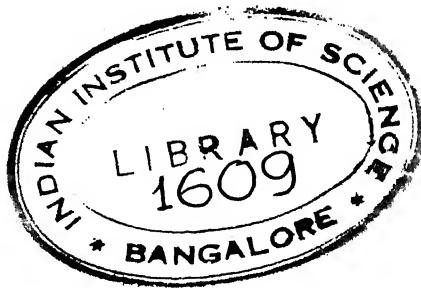

PREFACE.

THIS work is devoted to a description of the methods of distillation as applied to resins, more particularly of common rosin (colophony) with its resulting products, rosin spirit, rosin oil, etc., and the fossil resins as used in varnish manufacture.

In order to make the work more comprehensive it was thought advisable to give an outline of the preparation of resins from the natural turpentine and also of the purification of the fossil resins. The plant used in the various processes, including steam distillation, are figured and described.

As rosin oils are used very largely in the manufacture of printing inks, the methods of preparing the latter may be said to come within the scope of this work, as also the production of the various carbon pigments, lamp-black, vegetable-black, gas-black, etc., which are also used in this industry.

The constant growth in the use of the typewriter has resulted in a great demand for typewriter necessities, such as typewriter inks, manifolded papers, etc. As

these are related to printers' inks the author has considered it of sufficient interest to include them.

The preparation of many products from rosin, such as rosin soaps, rosin lakes, rosin lake pigments, and resinates, together with the application of rosin for sizing purposes, are also fully described.

The author ventures to hope that those who are interested in rosin and its products will find among the pages of this book something that may be useful.



TABLE OF CONTENTS.

	PAGES
PREFACE	v-vi
INTRODUCTION.	
RESINS AND THEIR USES	1-2
CHAPTER I.	
RESINS: THEIR SOURCES AND PROPERTIES. Resins Proper—Oleo-Resins— Gum Resins	3-12
CHAPTER II.	
ROSIN OR COLOPHONY. Collection of Rosin—Distillation of Crude Rosin by Steam—Brewers' Pitch	13-20
CHAPTER III.	
HARD RESINS. Amber—Copal	21-26
CHAPTER IV.	
DISTILLATION OF THE HARD RESINS. Drying Copal—The Electric Thermo- meter—The Distillation of the Resin—Losses Occurring During the Distillation of Copals—Distillation of Hard Resins with Superheated Steam—Dissolving the Distilled Resins—Filtering the Resin Solutions —Products of the Distillation of the Hard Resins—Change which takes Place in Resins on Heating	27-44
CHAPTER V.	
THE MANUFACTURE OF ILLUMINATING GAS FROM ROSIN. Purification of Rosin Gas	45-50
CHAPTER VI.	
ROSIN OILS. The Manufacture of Rosin Oils on a Large Scale—Plant for Distilling Rosin—Apparatus for Superheating Steam—Combined Dis- tilling Rectifying Apparatus—Vacuum Apparatus—The Process of Rosin Distillation—The Yield of Crude Products in Rosin Distillation	51-69
CHAPTER VII.	
THE NATURE OF THE CRUDE PRODUCTS. The Chemical Constituents of Rosin Oil	70-72
CHAPTER VIII.	
THE RECTIFICATION OF ROSIN OIL. The Purification of Rosin Oil—The Purification of Pinoline or Camphene—The Purification of the Heavy Rosin Oils—The Herrburger Purification Method—The Kramer and Flammer Purification Method—The W. Kelbe Purification Method— The Hoffman Purification Method—Distillation of Rosin with Alkalis— The Manufacture of Cod Oil—The General Properties of Rosin Oils— Rosin Oil Varnishes	73-86

CHAPTER IX.

	PAGES
THE MANUFACTURE OF PATENT LUBRICANTS. Manufacture of Patent Blue Cart Grease—Patent Coloured Cart Grease—Patent Yellow Cart Grease —Patent Black Cart Grease—Making Cart Grease with Soluble Rosin Soap—Filling of Patent Cart Greases	87-93

CHAPTER X.

ROSIN SOAPS OR RESINATES. Manufacture of Ordinary Rosin Soap—The Insoluble Rosin Soaps—Rosinate of Alumina—Rosinate of Zinc	94-104
--	--------

CHAPTER XI.

THE MANUFACTURE OF RESINATE VARNISHES. Resinate Paints—Enamels— Alumina Enamel—Bismuth Enamel—Lead Enamel—Iron Enamel— Uranium Enamel—Chromium Enamel—Cadmium Enamel—Cobalt Enamel—Metal Enamels—Platinum Enamel—Gold Enamel—Rosinate Pigments Proper	105-116
---	---------

CHAPTER XII.

THE MANUFACTURE OF LAMP-BLACK AND LAMP-BLACK PIGMENTS. Making Carbon-black from Resinous Woods—Purification of Lamp-black	117-123
--	---------

CHAPTER XIII.

LAMP-BLACK CHAMBERS. The Beginning of the Process—Resin Lamp-black —Making Lamp-black from Liquids—Making Lamp black from Rosin Oil—Making Lamp-black from Liquid Fats—Universal Feed for the Lamps—Making Flame Lamp-black—Purification of Flame Lamp-black —Chemical Purification of Lamp-black—Carbon Pigments of Other Origin—Bone or Ivory Black—Vine Black—Yeast Black	124-164
---	---------

CHAPTER XIV.

MAKING LAMP-BLACK PIGMENTS. Paint Mills—Roller Machines	165-168
---	---------

CHAPTER XV.

MANUFACTURE OF PRINTING INKS. Printing Inks—Boiling the Linseed Oil —Testing the Boiling Oil—Thick Oil—Boiled Oil and Rosin—Recipes— Tinted Printing Inks—Making Printing Inks—Mixing Machines—The Rolling Cask—Mixing and Kneading Machines—Printing Inks of Special Composition—Oleic Acid Inks—Rösl's Oleic Acid Ink—Artus's Oleic Acid Ink—Coal-tar Oil Inks—G. Thenius's Printing Ink	169-186
---	---------

CHAPTER XVI.

OTHER LAMP-BLACK INKS. Manufacture of Indian Ink—Lithographic Inks and Chalks—Recipes for Lithographic Inks—Lithographic Chalks	187-193
--	---------

CHAPTER XVII.

INKS FOR TYPEWRITING MACHINES. Typewriter Ribbons—The Inks—Ink- ing the Ribbons—The Inking Apparatus—Making Carbon Papers— Carbon Paper—Ink for Carbon Paper—Rubber Stamp Inks—Indelible Stamping Inks—Stamp Ink for Glass	194-204
---	---------

INDEX	205-212
-----------------	---------

INTRODUCTION.

RESINS AND THEIR USES.

THE resins are a class of organic substances derived for the most part from vegetable sources. They may be classified into three groups:—

1. The Resins Proper.
2. The Oleo-Resins or Balsams.
3. The Gum Resins.

The first group includes amber, copal, kauri, common resin, sandarac, mastic, and shellac, used in varnish manufacture, etc., gum benzoin and accroides, used for fumigation or in incense. The second group includes gum thus or scrape—the natural turpentine of the pine, Canada balsam, Venice turpentine, Strasburg turpentine, Chios turpentine, also Peruvian balsam and Tolu balsam, used in incense and medicines; while the third group includes ammoniacum, olibanum, and asafœtida, employed for similar purposes.

The chief use of the resins is in varnish manufacture, but common rosin is employed for a variety of purposes, e.g. in soap-making, in the manufacture of resinates, as a sizing material in paper manufacture, and for many other purposes.

So long as the inhabitants of the Continent confined themselves to working only the products of trees grown in their own countries, the value of colophony or common rosin was by no means realized, but on the opening up of the immense pine forests of the United States and Canada its value became appreciated, and large quantities of high-grade rosin were shipped to Europe so that in a very short time it dominated the market and has done so ever since, the only other source of any importance being France.

The increase in the supply of common rosin and the consequent reduction in price naturally led to greater attention being

paid to its properties and its utilization, the result being that to-day it is used in a number of industries, some of them being very large, and more than one entirely dependent upon it. In the early period of the industry it was distilled in the same way as coal for the manufacture of illuminating gas, but although suitable for this purpose and yielding a large percentage of gas of high illuminating power, it could not compete with coal in the matter of price, therefore it very soon ceased to be used for this purpose. It was found, however, that in the dry distillation of rosin both a volatile spirit and a heavier oil were obtained, which under the names of rosin spirit and rosin oil are now used to a very large extent.

Rosin has acid properties and is capable of combining with alkalies, the resulting compounds being soluble in water. These compounds resemble soaps in some of their properties, hence they are known as rosin soaps, and large quantities of rosin are employed in soap manufacture. On addition of salts of the heavy metals to solutions of the alkaline rosins, precipitates of insoluble rosins are formed. These can be used in place of the more expensive resins in the manufacture of varnishes, and, together with colour bases, also in the production of colour lakes.

The preparation and distillation of common rosin naturally occupies a considerable portion of the present work, but, in order to make it more complete, chapters are added upon the distillation of the varnish resin and oleo-resins, and their application in various industries.

The sources of the various resins and their properties are given in the following chapter.

CHAPTER I.

RESINS: THEIR SOURCES AND PROPERTIES.

As before stated, resins may be divided into three classes: Resins Proper, Oleo-Resins, and Gum Resins.

1. *Resins Proper*.—The resins are exudation products of various trees found either in the “fossil” state in the soil or sub-soil or as exudation products of living trees; they are yellowish, brownish, or reddish in colour and varying from transparent to opaque. They are usually brittle and break with a conchoidal fracture, often exhaling a slight odour resembling turpentine. They differ somewhat in physical and chemical properties, but the specific gravity in all cases is only slightly above that of water. The “fossil” resins are the hardest and most difficult to dissolve. The acid character of resins is usually well marked; they contain besides resin acids, resin esters, resin alcohols, and neutral bodies known as resenes, and in some cases hydrocarbons.

2. *Oleo-Resins*.—The oleo-resins are exudation products, either natural or induced by incision, from a variety of trees. In their fresh condition they are viscous liquids with pleasant odours, in some cases resembling turpentine, in others aromatic. On exposure to air they gradually harden by loss of their volatile constituents, and by oxidation to form soft solids, or in some cases even hard crystalline masses. They may be colourless, yellowish, brown, or nearly black. Usually they contain resin acids and essential oils, but the aromatic balsams contain benzoic and cinnamic acids, esters of these acids, and other constituents.

3. *Gum Resins*.—The gum resins likewise form exudations or are obtained by incisions, cutting, or burning various plants. They exude in the form of milky fluids which harden to warty masses or tears. They are brittle or tough, white, yellow, or brown, and consist of resin and other acids, esters, and carbohydrates or gums.

RESINS PROPER.

Amber.—Amber is the oldest of the resins, being found in a stratum of blue earth belonging to the cretaceous system. It is supposed to have been derived from a species of conifer which has been named *Pinites succinifer*. The chief deposits are at Palmniken, near Königsberg, in Eastern Prussia, where it is mined under the monopoly of the German Government. It is also obtained by dredging off the coast at Kurischer Haff, near to Memel, and is collected on the shores of the Baltic, being washed ashore by the sea.

Amber is a very hard and brittle resin, varying in colour from pale yellow to deep brown. It is sometimes perfectly clear and transparent, but usually more or less cloudy or opaque. It occurs mostly in small flat pieces, but sometimes larger pieces are found. The best pieces are used for ornamental work, pipe mouthpieces, and beads, the smaller fragments in varnish manufacture.

Amber has a specific gravity of 1.065 to 1.094 and melts at 310° to 320° C. It is a difficult resin to manipulate, but amber varnish is the most durable varnish in existence, and naturally fetches a very high price. It is, however, now rarely used.

Copals.—There are many kinds of copal, usually distinguished by the names of the localities from which they are obtained. Perhaps the best of these is Zanzibar copal, East African copal, or animi. This is usually found in the "fossil" condition in the soil at a depth of 1½ to 3 feet, and when raised is covered with a red earth, which after removal by scraping and washing leaves the resin with a peculiar reticulated surface, which, owing to its appearance, has received the name of "goose skin". Zanzibar copal is found in small flat rounded pieces of a light yellow to deep brown colour, transparent or slightly clouded. It is very hard, has a specific gravity of 1.06 to 1.07, and melts between 220° and 250° C. Another variety of Zanzibar copal is obtained from living trees—said to be *Trachylobium Mossambicense*—and is inferior in quality, melting at about 140° C.

West African copal is also found in the "fossil" or "semi-fossil" condition, and is regarded to be the product of *Guibortia copallifera*, forests of these trees having at one time covered the areas where the resin is now found. The resins are usually found

embedded in a red earth, while a red crust frequently adheres to them. This is removed by washing and scraping. Several varieties of this copal are known commercially, being distinguished by the names of the districts from which they are obtained.

Sierra Leone copal is found in irregular more or less angular fragments which are either colourless or faintly yellow, clear and transparent, very hard, with a specific gravity of 1.054 and a melting-point of 250° to 275° C. Angola copal occurs in flat rounded or discoidal pieces covered with a red crust. The cleaned resin is usually colourless but sometimes yellow, has a specific gravity of 1.065 and melts at 245° C. Benguelo copal is similar to that from Angola, but rather harder, is yellowish or reddish, has a specific gravity of 1.065, and melts at 180° C. Gaboon copal is in round flat masses, some of which are smooth on the surface, others covered with a crust; it has a pale brown colour and is transparent. Loango copal occurs in cylindrical fragments, some being white, others red, the red variety being regarded as the harder of the two. Congo copal has a melting-point of 190° C. Accra copal is more recent and softer; melting-point, 120° to 180° C.

Kauri Resin is sometimes classed as a copal; it is the product of *Dammara Australis*, and is found in a "fossil" state in the North-Eastern portion of the Auckland Provincial District of New Zealand. It is sometimes found in large blocks weighing up to as much as 110 lb.; the pieces are angular or nodular. Colour, pale yellow or brown, transparent, cloudy or opaque. Has a slight odour, resembling that of rosin. Specific gravity, 1.06 to 1.08. Softens at 55° C. and melts freely at 150° C.

South American or Demerara Copal is the product of *Hymenaea Courbaril*, a native of British Guiana. It is a "fossil resin" found in the soil and sometimes occurs in large masses up to 12 lb. It is usually covered with a crust, but the resin itself is clear and transparent, has a specific gravity of 1.03, and melts at 240° to 250° C.

Manila Copal.—There are two varieties of copal from the Philippine Islands, the one hard and melting at a high temperature, the other soft and more readily affected by heat. According to Weiss the former is from *Dammara orientalis* and the latter from *Pateria Indica*. The hard copal appears in rounded pieces,

pale yellow in colour, transparent to opaque; specific gravity 1.062 and melting-point 110° to 121° C. The soft copal occurs in large irregular masses, yellow or brown in colour, softening at 105° C. and melting entirely at 140° C.

Sandarac is obtained from *Callitris quadrivalvis*, a tree indigenous to Northern Africa. The resin exudes naturally, but is also obtained by incision, and is collected only in the province of Haha, Morocco, and is exported from Mogador. The sandarac occurs in cylindrical usually more or less curved rods, or in tears; it has a very faint yellow colour, almost white, is opaque or translucent, brittle, melting-point 150° C., specific gravity 1.038 to 1.092.

Dammar.—The term dammar includes resins from several distinct species of trees. They are usually known by the names of the islands or districts from which they are obtained, e.g. Padang, Borneo, Singapore, Pontianak, Sumatra, Batyan.

Singapore dammar is obtained from the Amboyna pine—*Dammara orientalis*. It is white or pale yellow in colour, friable, and has a slight agreeable odour. The specific gravity of this resin is 1.062 to 1.123, and its melting-point 127° to 150° C. Rock dammar is derived from two species of Hopea, *H. odorata* from Burma and *H. micrantha* from Malacca, Sumatra, and Borneo. The former occurs in rounded pieces of a pale yellow colour, the latter is darker coloured and somewhat harder. Sal dammar comes from *Shorea robusta*, a native of the country bordering on the Himalayas; it is also found in Bengal, Borneo, etc. The resin is in the form of cream-coloured long rods, opaque. Specific gravity 1.097 to 1.123. Black dammar is the product of several species of *Canarium* (principally *C. strictum*) growing in India, Burma, Rangoon, and the Malay States. It is obtained by incision, also by cutting down the tree, and firing the roots; after a time it oozes from the cut surface. It occurs in large black or brownish-black masses, but is transparent in thin flakes; its specific gravity is 1.09.

Mastic is the product of *Pistacia lentiscus* which grows in Spain, Portugal, Italy, Greece, and the islands of the Eastern Mediterranean, also in Northern Africa. The supply comes chiefly from Chios, and is obtained by incision of the trees. The resin appears in the form of yellowish or pale greenish translucent tears, sometimes in cakes. It is very brittle, has a pleasant

aromatic odour when fresh, softens at 80° C., and melts at 105° to 120° C. Its specific gravity is 1.04 to 1.07.

Accroides or Acaroid Resin.—There are two varieties of accroides, distinguished as red and yellow. They are obtained from several species of *Zanthorrhæa*, natives of Australia. The red variety is obtained from *Z. australis*, and the yellow from *Z. bastilis*. *Z. arborea* also yields this resin. The accroides resins are somewhat peculiar, consisting of an agglomeration of different coloured resins, red, brown, green, yellow, in large masses, so that it resembles a granitic rock in appearance. It is opaque, very brittle, and has a pleasant odour, resembling benzoin. It contains cinnamic, benzoic, and paracoumaric acids.

Shellac.—Shellac differs in its origin and in its properties from all the other resins. It is deposited as a secretion on several species of trees by an insect, *Coccus lacca*, which feeds upon the tree and surrounds itself with this material which is elaborated in its body. Large numbers of these insects and the larvæ are imbedded in this lac which covers the twigs. After swarming, the twigs are removed (stick lac), the lac scraped or beaten off, boiled with water to remove dye, melted, and strained through cloth. It is then drawn into thin sheets, which, after breaking up, are known as shellac. The coarser varieties, known as button lac and ruby lac, are more impure and are also adulterated with large quantities of rosin. Shellac is produced in large quantities in various parts of India, in Siam, Assam, Burma, and the Shan States. Pure shellac is in the form of thin orange-coloured scales. Ruby shellac is in thicker scales of a dark red colour. Button lac is brown and appears in thick discs like buttons. It is hard and brittle; specific gravity 1.139 to 1.214, melting point 77° to 83° C.

Rosin or Colophony.—This is the residual solid matter left in the still after the distillation of crude turpentine for the production of oil of turpentine. Most of the rosin on the market is American rosin from *Pinus Australis* and other species of pine, but a considerable quantity is also obtained in France from *P. pinaster*. During the last few years rosin and turpentine have been produced in India from *Pinus Kasya*. The rosin while still in a hot and fluid condition is run direct from the still into roughly constructed barrels in which it soon solidifies, forming a solid block. The rosin varies in colour from very pale yellow to dark brown or black, according to the quality of the turpentine

and the method of distillation. It is transparent, very brittle, easily pulverized, and readily breaks to pieces even by a slight beat, such as that of the hand. It softens below the boiling-point of water and is quite fluid at 100° C. Specific gravity 1·044 to 1·100.


Elemi.—Manila elemi is the product of *Canarium commune*, and is collected in the Philippine Islands. It is quite fluid when fresh but usually appears as a soft brittle solid with a peculiar vitreous but dull appearance. It is yellowish or greenish in colour, more or less mottled, opaque, and has an odour resembling turpentine. It softens at 75° to 80° C. and is quite fluid at 120° C. Specific gravity 1·018 to 1·088. Elemi is employed in the manufacture of printing inks and also of varnishes.

Several resinous products resembling elemi are obtained in Africa; for instance "Luban matti," from *Bosuellia Freriana*, is a similar product obtained in Somaliland.

Gum Benzoin.—This well-known balsamic resin is obtained in Siam from the *Styrax benzoin*. This is the finest quality of benzoin. Other varieties derived from the same tree or from other species of *Styrax* are known as Palembang, Sumatra, Padang, and Penang benzoin, being obtained from the localities named. Siam benzoin is usually very free from impurities, and occurs in the form of reddish-yellow tears or brown masses with a cream-coloured or white interior. The other varieties show more or less impurities; they are in greyish-brown masses with cream-coloured or white almond-shaped masses (amygdules) imbedded. The resin is soft and brittle, has a very pleasant odour of incense, and very easily melts on heating, giving off white fumes of benzoic acid together with some volatile oil. This resin contains benzoic acid, both free and combined as esters, and is used as the source for the preparation of pure medicinal benzoic acid and for other pharmaceutical purposes; it is also used in the manufacture of French polish.

OLEO-RESINS.

Gum Thus or American Frankincense.—This is the natural turpentine of the long leaf pine (*Pinus Australis*), which grows extensively in the United States. Similar products are, however, produced from other species of pine. Gum thus exudes in the

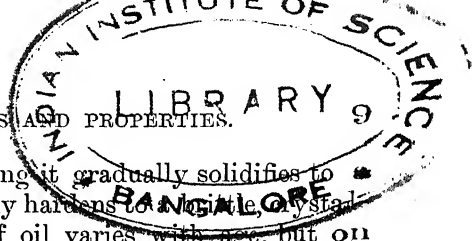

form of a thick fluid, but on standing it gradually solidifies to soft yellow mass which subsequently hardens to a brittle, glassy line, opaque mass. The amount of oil varies with age, but on distillation from 15 to 20 per cent is obtained. This is pure oil of turpentine.

French or Bordeaux Turpentine, also called "Gallipot," is the natural turpentine obtained from *Pinus maritima*, which grows extensively in Gironde, Garonne, and South of France. It resembles gum thus in most of its properties.

Russian Turpentine is the oleo-resin obtained from the Scotch fir (*Pinus sylvestris*). On distillation it yields a turpentine with a heavier odour than the American and French varieties, for which reason the distillate requires careful rectification.

Finland Turpentine comes from the same source as the Russian variety.

German Turpentine is derived either from *Pinus sylvestris* or from *P. rotunda*.

Austrian Turpentine is the product of *Pinus laricio*.

Jura Turpentine, also known as spruce turpentine, comes from the spruce *Picea vulgaris*. It contains about 32 per cent of essential oil.

Hungarian Turpentine is from *Pinus pumilio* or from *Picea montana*.

Strasburg Turpentine or *Alsace Turpentine* is obtained from the silver fir, *Pinus picea* or *pectinata* (*Abies excelsa*). It has an agreeable odour, somewhat resembling that of lemons.

Venice or Larch Turpentine is the oleo-resin of the larch, *Larix decidua* or *L. Europaea* (*Pinus larix*). It is collected principally in the Tyrol. It is a very viscous liquid of a yellowish or greenish-yellow colour and characteristic pleasant turpentine odour. It contains about 15 per cent of essential oil, 70 per cent of rosin, and 15 per cent of resenes.

Chios Turpentine is obtained from a species of *Pistachia* (*P. terebinthina* or *P. vera*), growing in Chios and other islands of the Eastern Mediterranean. Its specific gravity is about 1.050.

Canada Balsam, *Balsam of Fir*, or *Balsam of Gilead* is obtained from the balsam fir (*Abies Canadensis*, *A. balsamea*) growing in North America. The product is almost solid at the ordinary temperature but forms a viscous liquid on gentle heat-

ing; it is transparent and very pale yellow, almost colourless, with an odour somewhat like that of turpentine. On distillation it yields 15 to 25 per cent of an essential oil and leaves a clear glassy resin.

Copaiba Balsam is obtained in various districts in South America from *Copaifera multijuga*, also from *C. Langsdorffii* and *C. coriacea*. There are several varieties known as Maturin, Maranham, Maracaibo, Para, and Cartegena balsams. It is a viscous liquid with a pale yellow, golden-yellow, or brown colour. Specific gravity 0.916 to 0.969, yields 40 to 60 per cent of an essential oil on distillation.

African or Illurin Balsam is a similar although inferior product, sometimes used as an adulterant of the genuine article. This is also probably derived from a species of *Copaifera*. The specific gravity of Illurin balsam is 0.985 to 1.000.

Storax; Liquid Storax is the product of *Liquidambar orientalis*, a tree growing in Asia Minor. It is a thick, viscous liquid with a yellowish or greyish colour and an agreeable odour like that of vanilla. Another variety of storax is obtained in America from *Liquidambar styraciflua*.

Balsam of Tolu is obtained from *Myroxylon tolwisera* (*Tolwisera balsamum*), growing in Colombia, Tolu, and Venezuela. When recently obtained it is in the form of a yellow transparent liquid, but it changes quickly to a yellowish-brown friable solid. It has a very pleasant incense-like odour, and contains both benzoic and cinnamic acids as well as aromatic esters. It has a specific gravity of 1.137 to 1.150 and melts at 60° to 65° C.

Balsam of Peru is obtained from *Myroxylon Pereira*, growing in West Central America. The balsam is fluid at first but becomes solid on keeping. Colour, dark reddish-brown, transparent, and has an odour of vanilla. Specific gravity 1.175 to 1.150. Contains esters of benzoic and cinnamic acids.

GUM RESINS.

Dragon's Blood is the product of *Calamus draco* (*Demonorops draco*), a native of Eastern Asia. This product appears as a red friable mass on the fruit of the tree and is obtained by shaking off. It is melted and cast into rolls. Dragon's blood comes from Singapore, Batavia, and other ports in Asia. It is a brownish-

black vitreous mass yielding a blood-red powder. Its specific gravity is 1.16 to 1.2. On heating it melts at 120° C. and is stated to yield benzoic acid.

Gamboge is derived from *Garcinia morella* and other species of *Garcinia*, natives of Siam and Ceylon. The gum resin appears in the form of pipes or cylindrical pieces $\frac{3}{4}$ to 3 inches diameter, being cast into hollow bamboo canes. It is pale yellow or reddish-yellow in colour, vitreous appearance, opaque, brittle. It is used as a water-colour pigment, forming a yellow emulsion with water.

Guaiacum.—This is a peculiar gum resin from *Guaiacum officinale*, a tree growing in the West Indies. It is in the form of greenish-brown resinous masses, opaque except in thin films where it is seen to be transparent. It melts at about 85°. *Guaiacum* is mostly used in medicine, and is also a useful test for blood and what are known as oxydases with which it yields a bright blue colour. It contains 87 to 96 per cent of resin soluble in alcohol, 3 to 10 per cent of true gum, and about 2 per cent of mineral matter.

Frankincense or *Indian Olibanum* is an aromatic gum resin obtained from *Boswellia Carterii* and *B. serrata* which grow in British Somaliland and the Hadramut of Arabia. It is in the form of a transparent golden-yellow semi-fluid product which slowly hardens and then appears as small tears or granules which are brittle, dull yellow in colour, and covered with a fine dust.

Bdellium.—The African bdellium is obtained in Senegal from *Commiphora Africana*. It is in the form of oval or round masses with a fatty lustre. On warming becomes soft and plastic. East Indian bdellium is derived from *Balsamodendron Indicum* and appears in rough masses agglomerated together, similar to myrrh in appearance, dull and dark brown in colour, more or less contaminated with impurities.

Myrrh.—The ordinary myrrh known as Herabol myrrh is obtained in Abyssinia and Arabia from *Balsamodendron Myrrha*. It is in the form of yellowish-brown or reddish masses with a greasy lustre. Specific gravity 1.12 to 1.18. Has a strong odour and persistent bitter taste. Contains 57 to 59 per cent of gum, some resin, and 7 to 8 per cent of a volatile oil. Bisabol myrrh is obtained from *Balsamea erythera*, a native of Somaliland. The

drug resembles the preceding but has a less powerful taste. It contains 42 per cent of gum, 21 per cent of resin, 7·8 per cent of essential oil, and small quantities of bitter principle, water, and impurities.

Asafœtida is a gum resin derived from *Ferula narthex*, *F. scorodosma*, and other species which grow principally in Persia. It occurs in the form of tears or in masses often very impure or largely adulterated with sand and stones. When pure it contains 60 per cent of resin, 25 per cent of gum, about 6 per cent of a peculiar ethereal oil, and other constituents.

Galbanum is obtained from *Ferula galbaniflua* and allied species growing in Persia. It occurs in tears or masses of a grey, yellow, or greenish colour, with a waxy lustre. Contains resin 63·5 per cent, gum, etc., 27 per cent, ethereal oil 9·5 per cent.

Ammoniac or *Ammoniacum* is obtained from *Dorema ammoniacum*, growing in Persia. The gum resin appears as greyish-white tears or masses which are yellowish on the surface, brittle. The African ammoniac is from *Ferula communis* (*F. tingitana*), a native of Morocco. This is in the form of small dark granular or tear-like conglomerations, brittle. Contains resin 65 per cent and gum 12 to 26 per cent.

Scammonium, *Scammony*.—This is obtained from *Convolvulus scammonia*, a native of Syria, and is exported from Aleppo and Smyrna. Scammony occurs in the form of greenish-grey opaque masses, or black lumps, waxy lustre, and has a disagreeable flavour. Specific gravity 1·142 to 1·160. The drug contains a peculiar resin—scammonin—to which its medicinal properties are due. There is also a Mexican scammony from *Ipomea orizabensis*.

Euphorbium is from *Euphorbia resinifera* and other species of *Euphorbia*, natives of Morocco. It is in the form of yellow lumps with a dull lustre, easily powdered, very disagreeable burning taste. Contains a resin soluble in ether about 27 per cent, resin insoluble in ether 14 per cent, "Euphorbin" 35 per cent, gum and salts 22 per cent.

CHAPTER II.

ROSIN OR COLOPHONY.

AMONG resins in general, rosin from pine trees is the most important, by reason of the fact that it occurs in larger quantities than any other resin, so that it forms the raw material of several large industries. There is a whole family of trees, all of which yield rosin, but all of them do not belong to the genus *Pinus*, although that genus gives far more of the product to commerce than do trees belonging to the genera *Larix* and *Abies*. The following is an account of the chief trees from which we obtain rosin.

Pinus sylvestris, *P. vulgaris*, or *P. nigra*, the common pine (the Scotch fir), occurs in many varieties and is specially common in Alpine countries. This tree is the chief source of German and Russian rosin. The pines native to the limestone Alps are specially rich in rosin. They are known to botanists as *Pinus nigricans*.

French rosin also comes from *P. nigricans*, but most of it is obtained from *P. maritima* (the maritime pine), which is specially common on the south-west coast of France, and of which large forests are there cultivated.

American rosin, now of the greatest importance to all rosin industries, comes from the swamp pine, *P. palustris* or *P. Australis*, which forms gigantic forests in the United States and in Canada. The quantity of American rosin placed annually upon the markets of the world is enormous. Thanks to the skilled manner in which it is obtained, the American is quite as good as any European product, and the vast output enables it to be sold at a price which has excluded the competition of European sorts in many places.

Besides the above-mentioned trees, many other conifers yield resins, but we prefer to use the half-liquid balsams containing

the resins as they are, without further preparation. These balsams are usually known as fine turpentine. The chief kinds are: Venice turpentine, from the trunk of a larch, *Larix decidua*; Hungarian turpentine from *Pinus pumilio*, obtained by cutting off the ends of the twigs and gathering the liquid which flows from the wounds; Carpathian turpentine, or Cedro balsam, which is the product of *Pinus cembra*; Strasburg turpentine, obtained from the white pine, *Abies alba* or *Abies excelsa*; Canadian turpentine, or Canada balsam, from the balsam pine, *Abies balsamea*; and lastly Chios turpentine, or Cyprus turpentine, from *Pistacia terebinthina* and *P. vera* of the Grecian Archipelago.

Ethereal oil and resin can be obtained from any of these, but as already stated, the products are put on the market as they flow from the trees, and are used in that condition, and not as raw materials for the preparation of secondary products.

COLLECTION OF ROSIN.

In the trees, rosin often occurs in special vessels, known as rosin-ducts, the rosin in these appearing to take no part in the life-processes of the tree. We occasionally also find larger receptacles in the tree, called rosin pouches. These do not usually contain rosin, but are filled with a semi-fluid balsam consisting of essential oil and rosin.

Most of the crude turpentine is obtained by cutting the tree somewhat deeply and collecting the product as it flows out. In general the bark is removed from about a quarter of the circumference of the tree, and to a height of 40 to 60 inches. A dish-shaped cavity is then cut at the foot of the trunk, and thin slips of wood, which are fixed slantingly in the stripped part of the tree, lead the outflow into the cavity, from which it is removed from time to time. Another method is to fix cups to the tree below the cuts into which the turpentine flows, and from which it is removed from time to time. This method is not so destructive to the tree as cutting a box in the trunk.

During the summer a yellow tough sticky mass with an aromatic smell oozes from the stripped part of the trunk. This mass is chiefly composed of a solution of rosin in essential oil. When the sap retreats in the late autumn the flow ceases till

next spring, when the bark is removed higher up. In the course of years, the trunk becomes partly deprived of its bark up to a height of 17 to 20 feet. Many trees will yield for twenty years. Finally, however, the summer outflow becomes so small that it no longer pays to exploit the tree further.

The crude rosin, when poured into casks, divides into two layers, a small watery layer containing albuminous matter and mineral salts, and a far deeper lower stratum having a strong balsamic odour. The lower stratum consists of essential oil, rosin, and various other bodies which are to be regarded as accidental impurities. Splinters of bark and wood, the acicular leaves of the tree, as well as earth and stones, are usually found among these impurities. The watery layer is rejected as useless. To obtain pure rosin from the other product it is subjected to distillation, when the essential oil passes over and is condensed. The rosin remaining in the still is in a fused state and filtered while still liquid, so as to remove from it the vegetable and mineral debris above mentioned. The lower stratum is brown and thick.

In former times the distillation was always executed with very primitive apparatus. With the more modern plant a much better quality of oil of turpentine and a much paler and less decomposed rosin are obtained. The old apparatus consisted of a copper still heated over an open fire. In such a plant when the water and turpentine had distilled off, the residual rosin assumed a thick and viscid consistency, and since it is a very bad conductor of heat, it was practically impossible, with an open fire, to prevent those parts of the rosin which were in contact with the bottom and sides of the still from undergoing decomposition. This not only darkened the rosin but caused the turpentine to be contaminated with rosin oils resulting from the decomposition.

DISTILLATION OF CRUDE ROSIN BY STEAM.

The most suitable process for distilling crude turpentine is with superheated steam. Under ordinary pressure water boils at 100° C., the boiling-point of turpentine being 160° C. Hence steam at this temperature, i.e. under pressure, is able to drive off all the oil of turpentine. This temperature always gives a very pale yellow resin. But turpentine oils volatilize in

water-vapour at much lower temperatures. Therefore if we make the crude rosin fluid by heating it to 100°C ., and then blow steam through it, the steam will carry off all the turpentine. The rosin can then be dried in the still, and filtration alone is required to obtain it in a perfectly pure state. The use of superheated steam has the further advantage that it enables very large stills to be used. Many are in use which are capable of holding 10 tons of crude rosin at a time, and as four distillations can be

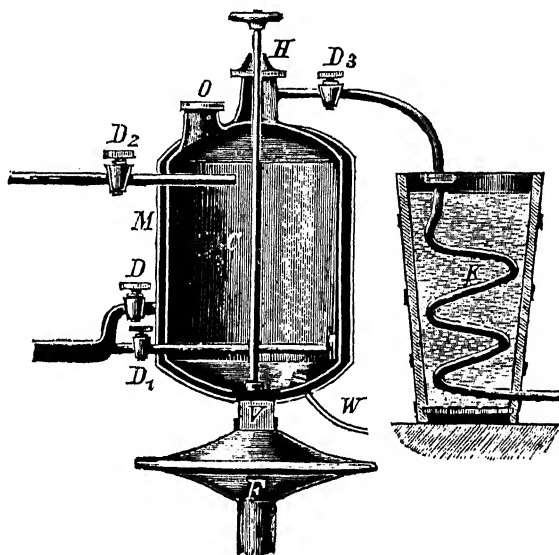


FIG. 1.

completed daily, 40 tons a day can be handled with a single still of this capacity.

Fig. 1 shows the construction of a steam still for the distillation of crude turpentine.

The cylinder *C*, made of stout iron plate, is enclosed in a second iron cylinder *M*, the intermediate space being about 4 inches wide. When the steam-cock *D* is opened, steam enters this cavity, and rapidly heats up the contents of *C*. There is a second tap *D*₁, whereby steam can be admitted to the interior of *C* through a flat coil having a number of small holes on its underside. A second cock *D*₂, admits steam to the upper part of the

interior of C, where the pipe has a plain opening. A large opening O is provided at the top of C for charging the still; this is filled with a steam-tight cover. In the middle of the top of C is the hat-shaped dome H. Through this passes a rod governing the valve V attached to its lower end. A thread is cut in the rod which works in a nut closing H, so that on turning the rod by the small wheel shown, the valve V can be either closed upon or lifted from its seat, so as to run the resin into the filter F. The cock D₃ regulates the tube leading from the still to the worm K in the condenser. The filter F is screwed to the bottom of the still, and consists of two conical iron vessels fixed base to base, and holding a wide-meshed piece of wire gauze over which a linen cloth is stretched.

When C has been about three parts filled with the crude rosin through O steam is admitted first to the jacket. The rosin in C rapidly becomes liquid. The condensed water is drained from the jacket by the pipe W. When the rosin is all melted, D₁ is opened, which sends the steam into C where it streams through the resin from the holes in the coil. This at once causes a distillate to appear in the receiver,¹ consisting of oil of turpentine and water. This part of the process is continued until nothing comes over but water, whereupon D₁ is shut. The operator then waits until water ceases to flow from the worm. This shows that the rosin in C is dry. He then shuts D₃ and lifts the valve V by the wheel above H, and at the same time the cock D₂ is very gradually opened. The pressure of the steam thus admitted forces the fused rosin through the filter. It is of very great importance to admit the steam above the rosin gradually, for a too sudden application of pressure would probably tear the filter cloth. The pressure is regulated by means of D₃ in such a way as to produce a uniform flow through the filter into the receptacle below it. When nearly all the rosin has run out, D₂ and V are shut, and the still at once filled with a fresh charge of crude turpentine. The second and subsequent distillations occupy less time than the first, the apparatus being already hot when the crude material is introduced.

When the temperature of C is sufficiently high distillate begins to flow from the worm, it has at first a milky appearance, being

¹ Not shown in the figure. It receives the condensed products from K.

an emulsion of oil of turpentine in water. On standing in the receiver this milky liquid separates into two sharply defined layers, water below and turpentine above. After this separation has taken place the water is drained off through a cock in the bottom of the receiver.

This method of separating the turpentine and water cannot, however, be recommended. Oil of turpentine absorbs oxygen from the air with great avidity, and by so doing it thickens, becomes yellow, and acquires great bleaching power, as it contains the absorbed oxygen, at first in the form of peroxides. If an organic

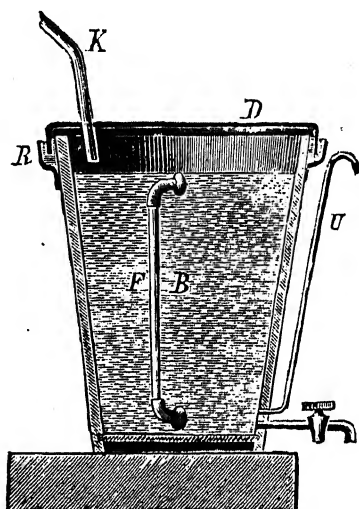


FIG. 2.

dye is dissolved in oil of turpentine which has been left for some time in contact with the atmosphere, it will be found that the dye is nearly entirely bleached by the peroxide in the oil. A very simple apparatus is shown in Fig. 2, whereby this injurious action of the air can be entirely prevented.

B is the vessel in which the distillate is received. Its upper edge is provided with an iron gutter R, running around it. The gutter is about $1\frac{1}{2}$ inches wide and 4 inches deep. This gutter receives the edge of the cover D. The end K of the worm passes through a hole in D. A gauge glass is fixed to the side of B, so that the amount of liquid in B can be at once per-

ceived. A tube U is fitted in the bottom of B, and opens freely as shown, with a downward curve. At the beginning of the distillation R is filled with clean water so as to make the cover air-tight. But K does not fit air-tight into the hole in D, for the air must be allowed to escape from B, as it becomes filled with the distillate. After a time the height of the distillate is such that water commences to flow from U and then flows away continually as fast as it distils over. When the oil of turpentine has accumulated in B until little else is present the contents are allowed to stand for a few days to ensure a perfect separation, after which the small amount of water remaining is run out by a cock at the bottom of B.

The first accumulation of turpentine on the surface of the water partly evaporates, its vapour affording a complete protection to the liquid portion from any traces of oxygen present. The oil of turpentine is thus obtained perfectly colourless, free from absorbed oxygen, and having strong refractive power and an aromatic smell.

The rosin which has passed the filter forms on cooling a pale yellow mass, occasionally showing a reddish tinge. It is usually as transparent as glass, and has neither smell nor taste. It is, however, very brittle, and soon loses its transparency with the shocks it experiences in transport, owing to its becoming traversed by numberless small cracks.

Pure rosin dissolves freely in essential oils and in caustic soda or potash lye. When it is boiled with a solution of carbonate of soda or potash, the sylvic acid present expels their carbonic acid, forming a soda or potash rosin soap. Hence its use in soap-making. It is also used for the manufacture of rosin oil, for making varnishes and resinate colours; and, when burnt in a limited supply of air, it yields a lampblack which is remarkable for its fine sub-division and lustrous black colour, in both of which respects it excels many other forms of the pigment; rosin also yields an illuminating gas of much greater candle-power than coal-gas.

The residue in the filter of course retains a little of the rosin; this, however, is not wasted as the material can be used to great advantage as a fuel. As already stated, it is virtually impossible to prevent decomposition of the rosin in the still when the latter is heated over a naked fire. In this way is produced, often

in considerable quantities, a black, easily fusible mass known as pitch. The only use for this material is in caulking wooden ships. It was formerly used by shoemakers for waxing their thread.

BREWERS' PITCH.

Much rosin is used for the preparation of this substance. It is used in breweries to produce a smooth lining inside casks whereby they are made impermeable and much easier to clean. Brewers' pitch consists of rosin mixed with substances which are likely to have no effect upon the taste and aroma of the beer.

The simplest way of making a good brewers' pitch is to fuse pure American rosin with careful stirring to prevent the rosin from burning to the bottom of the pan. During the stirring sufficient rectified oil of turpentine is gradually added to render the mass free from brittleness when cold. In using the pitch a new cask is heated with a blast of hot air; when thoroughly heated a suitable quantity of melted pitch is poured in and spread over the sides of the cask by rolling the latter about until the material is quite cold. To repitch a cask the old pitch is fired, allowed to burn some time, extinguishing by putting the head on the cask; and repitched in the same way as a new cask.

Many makers of brewers' pitch use a proportion of rosin oil instead of rectified oil of turpentine to make the mass supple. The rosin oil used must be rectified, since the crude oil would impart a penetrating smell to the beer. Others give the necessary suppleness to the rosin by fusing it with a soap made by boiling part of the rosin with caustic soda lye. Many recipes for making brewers' pitch include the addition of soot or ochre, or of beeswax. Such additions are not only absolutely superfluous, but are very injurious to the beer kept in the casks. This is especially true of soot, which contains not only carbon but appreciable quantities of empyreumatic bodies of characteristic taste and smell, eminently calculated to spoil the flavour of beer.

CHAPTER III.

HARD RESINS.

MOST of the resins used in industry are wanting in hardness and can be easily scratched with the finger nail. Such resins are commonly called soft resins, a generic term which includes a large number of resins. Ordinary rosin is one of the soft resins, but it is of course harder than the balsams which have only a semi-solid character at ordinary temperatures.

There are a few resins much harder than rosin, these are therefore called the hard resins. Two of these are never found other than in the fossil form, i.e. as masses buried in the earth. They are true resins, and of vegetable origin, although the plants from which they were formed are now extinct. They include amber and certain kinds of the large and important group known as the copals. Both amber and copal are of the greatest commercial importance, since from them varnishes are made superior to all others in durability and resistance to atmospheric and chemical influences.

AMBER.

This fossil resin is called Bernstein in Germany, owing to its inflammability. The power which it has of attracting light bodies when rubbed excited great interest among the civilized nations of antiquity, and our word electricity is derived from the Greek word for amber, "elektron". Aristotle had a perfectly correct idea of the origin of amber, which he declared to be the resin of a tree, but after his time many fables were circulated on the subject. Some declared it of animal origin, others stated that it was condensed "sun-ether," others again that it was a wax produced by a kind of ant. No scientific proof of the vegetable origin of amber was forthcoming until the end of the eighteenth century.

The reason for the great variety of opinion as to the origin of

amber, as well as of the singularity of the theories, is to be sought in the fact that it was known to the ancient nations of Western Asia and was an important article of trade with them. When we remember that all the amber these people had came from the countries on the Baltic, we easily see that many false legends were likely to accumulate around a substance brought such great distances, as it was to the interest of every dealer in it to keep its origin a secret. Even the Romans who carried their arms into the heart of Germany had no knowledge of the origin of amber, which they called *succinum*.

When once the vegetable origin of amber had been clearly established greater interest was taken in the deposits of it, and researches in them added largely to our knowledge of fossil insects, as numbers of these have been found perfectly preserved in the resin.

As regards the plant or plants which produced the amber, they were undoubtedly coniferous, but it is yet undecided whether the genus was *Pinus* or *Picea*. Provisionally, the name *Pinites succinifer* has been given to the tree which produced amber. It is supposed that that part of the earth's surface now covered by the Baltic was a mountainous country rich in limestone towards the end of the Cretaceous period. The climate of this mountainous country was tropical as shown by the plants found fossil in the district. The forests covering the mountains consisted principally of conifers among which were large numbers of the amber-tree.

In the course of years resin was formed in large quantities in these primeval forests and, falling to the ground, remained unaltered after the trees had perished and been replaced by younger ones; in time immense quantities of amber appear to have accumulated. When this portion of the land became covered by the sea, the whole of the vegetation perished. The trunks of the trees were swept away by the waves and the amber remained buried in the sea-sediment. This in time became a hard rock, known from its colour as blue earth, and it is to be regarded as the original amber-bearing stratum. In later geological changes, occurring in the brown coal period, the blue earth was displaced to a large extent, and the so-called "striped sand" was laid down. In this, too, we find amber embedded. Amber is also found in the Sarmatian and North German plains, and as here it is a long way from the

sea, we infer that it was brought thither from the north by the ice of the glacial period, and left behind on the melting of the ice. Amber is also found in Sicily and in Burma.

Storms cast up amber on the coasts of the Baltic. It is also dredged for off the coast. At present, however, by far the largest part of the amber of commerce is obtained by mining in the alluvial deposits on the shores of the Baltic and washing the sand and mud away from the amber.

Crude amber has usually a reddish brown crust covered with a yellow dust. It is considered that this crust is a result of decomposition of the amber proper, produced by the action of the water. It is removed from the larger pieces by scraping before they are put upon the market. Commercial amber appears either transparent with a characteristic yellow colour, or as a mass partly transparent and partly streaked and clouded with turbid portions. The transparent part is the compact amber, while the other portion owes its appearance to a multitude of tiny air bubbles entangled in the resin.

A large number of kinds and qualities of amber are recognized in the trade. The larger the pieces and the more beautifully they are marked, the higher the price, but when it is merely a question of working up the resin into varnish, these considerations naturally do not apply, and for such purposes the smaller pieces and also the shavings (*rasura succini*) obtained when the large pieces are turned on the lathe to make pipe-mouthpieces and ornamental objects are employed.

Amber is the hardest of all resins, but its specific gravity varies somewhat widely. Pieces may be found on the one hand lighter than water, having a specific gravity of 0.98 only, while others may be as high as 1.2. Hence some specimens float in the sea, and some sink.

As regards chemical composition, amber must be regarded as a mixture of at least three different resins, while small quantities of bituminous bodies are also present. Another invariable constituent is succinic acid. The three resins can be fairly easily separated by their different solubilities in alcohol, ether, and chloroform. As a whole, amber is insoluble in any known solvent. Amber will endure heating to far higher temperatures than any other resin, but even with every precaution it cannot be run without undergoing a partial decomposition in the form of a dry

distillation; giving off amber oil (*oleum succini*), and leaving behind a residue known as amber colophony, which will dissolve in various solvents, and serves for the preparation of amber varnishes. These varnishes cannot be made from the undecomposed amber as that is insoluble. There is one important difference between the heating of rosin and heating amber. The rosin oils given off by rosin are of great commercial value, and are prized for their own sakes. The amber oil is of no use by itself, and is only worth collecting to add to the varnish made from the residue of the distillation. The residue of the rosin distillation, pitch, is of very little use; so that in the one case the material is heated for the sake of the volatile constituents of the resin, and in the other for the sake of the non-volatile portion of it.

Tschirch and Aweng state that amber contains 70 per cent of the succino-resinol ester of succinic acid, 28 per cent of free succino-abietic acid ($C_{50}H_{120}O_3$) and 2 per cent of the bornyl ester of succino-abietic acid.

COPAL.

The second of the hard resins, copal, is one of great importance to the varnish trade. Of amber there is only one sort, and the only differences lie in the size and beauty of the pieces, but there is a considerable number of kinds of copal. The reason for this is that many different plants yield copal, so that it is produced in varying degrees of hardness and solubility and differing in other properties as well. The primary distinction made in commerce is that between hard and soft copals.

No absolute line of demarcation can, however, be drawn between hard and soft copals. The hardness of both lies between that of calc spar and that of gypsum; they scratch the latter and are scratched by the former. Some of the South American copals are, however, so soft that they are scratched by gypsum. These are the softest kinds we know, and ought really not to be classed as copals. The specific gravity of the copals also varies greatly. The lightest are scarcely heavier than water, having a specific gravity of 1.045. In the heaviest the specific gravity may be as high as 1.139.

Although much of the copal is yielded by still living trees, quantities of it, including the best sorts, are found in fossil condition in the earth; it may be that the trees producing these kinds

belong to an earlier geological period and that they are now extinct. This fossil copal which occurs in pieces from the size of a pea to the size of the hand, is found in West Africa (Sierra Leone, Benguela, and Angola), in a special stratum consisting of sand, loam, and marl, which occurs at an average depth of 10 feet. It is probable that this stratum is not the original burying place of the copal, but that the latter has been carried to its present situation by floods and buried in the sediment from the water. If this opinion is correct, the occurrence of copal is analogous to that of amber, and the copal is undeniably fossil.

The different varieties of copal are described in Chapter I.

The most valuable of the copals are the East African sorts. They are the hardest of all, and have the highest melting-point.

The African copals are the chief hard copals, but they show a good deal of variety, and much practice is necessary to enable one to distinguish the various kinds with certainty by the eye.

East Indian copal is either colourless or yellow, or dark red, and usually has a warty exterior. The West African copals dug out of the ground are sometimes crusted over with loam and sand. Hard copals can be polished, and the ground surfaces resemble those of amber similarly treated.

The soft copals come from South America (West Indian copal). They occur in pieces from the size of a pea to that of the fist, and having a spherical or tear-like shape. They may be milky white or pale yellow and transparent. Their hardness is so small that even hard rubbing with a coarse woollen cloth will wear down the copal perceptibly. New Zealand copal behaves in a similar way, as do many kinds of Manilla and Borneo copal.

The great variety in the copals is well seen in their behaviour to heat. While the soft sorts begin to melt as low as 180°C. , the hardest kinds require as much as 240° .

Soft copals can be dissolved in chloroform or in absolute alcohol, but to get a clear solution it is essential to powder the copal finely and to soak it in ether till it has completely swollen up. As, however, both chloroform and absolute alcohol are expensive solvents, they are rarely used in the preparation of copal varnishes, and copal will easily dissolve in the ordinary varnish solvents when it has been run or melted, i.e. subjected to a partial dry distillation which drives off certain volatile bodies.

The great differences in the temperatures required to run the

different kinds of copal, make it essential to ascertain on a small scale the heat required by a new sort of copal, before treating it in large quantities.

According to Tschirch and Stephan, Zanzibar copal contains 80 per cent of trachyloic acid $(C_{54}H_{85}O_3)(OH)(COOH)_2$, about 4 per cent of isotrachyloic acid, about 10 per cent of essential oil and small proportions of two resenes, α and β -copalresene.

CHAPTER IV.

DISTILLATION OF THE HARD RESINS.

THE object of distilling the hard resins—amber and copal—is to obtain a product soluble in oil and turpentine with as little loss as possible, and therefore the operation differs very materially from that of the distillation of common rosin in which as much of the distillate (rosin oil) as possible is desired, and as little residue or pitch which is of little value.

The distillate from the hard resins is not of much value, and can only be utilized by mixing it with the varnish. In short, the loss of weight must be brought as low as is consistent with making the residue soluble. Another point which requires attention is that the residue should be of as light a colour as possible, for then only will it give a pale varnish, pale varnishes being much more prized than dark ones. As copal naturally occurs of all colours from pale yellow to a dark reddish brown, it is advisable to sort the resin into three kinds according to colour and to work up the three grades separately. Seeing that both amber and copal are bad conductors of heat, it is of importance to distil together pieces of about the same size. To obtain such pieces the copal must be broken up by a suitable machine, such as is represented in Fig. 3.

This mill consists of two rotating discs having triangular teeth on their circumference, and the distance between which is adjusted according to the size of the pieces of resin required. The mill delivers small lumps of uniform size, but on account of the brittleness of the resin a portion is broken smaller than intended and there is also a good deal of dust produced. The output of the mill must, therefore, be sifted by the machine shown in Fig. 4.

The brushes attached to the roller remove the dust from the pieces to which it adheres rather closely. The smaller pieces and the dust which pass through the sieves are worked up separately.

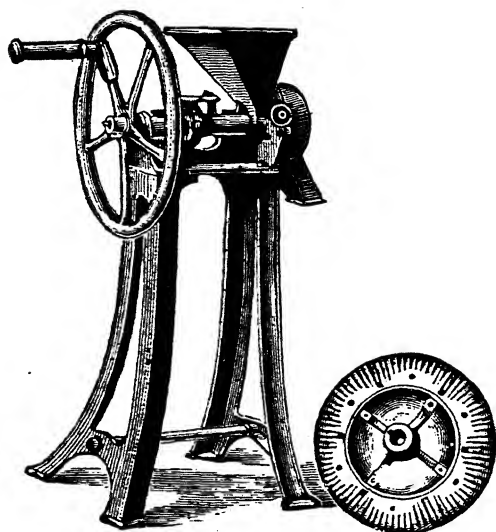


FIG. 3.

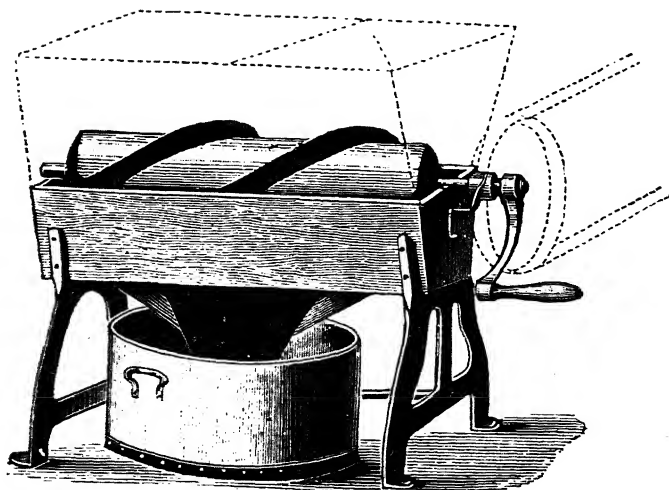


FIG. 4.

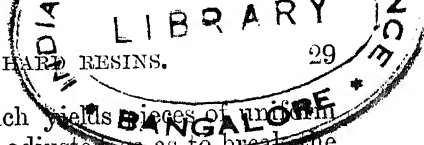


Fig. 5 represents a copal mill which yields pieces of uniform size with very little dust. It can be adjusted so as to break the resin into fragments as small as a lentil or as large as a bean, while the small amount of powder produced is easily separated by sifting.

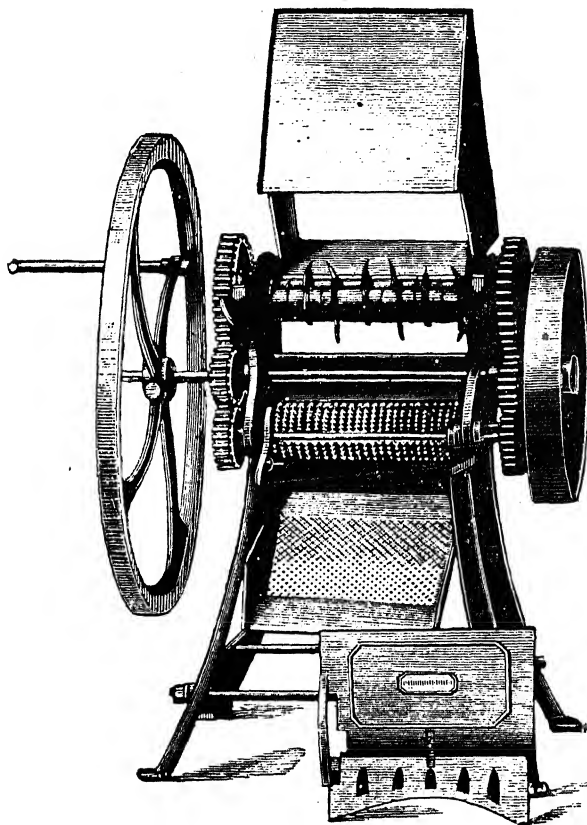


FIG. 5.

DRYING COPAL.

Certain copals have the property of becoming soluble after an exposure for three or four days to a high temperature. As, however, this temperature is never below 180° C., the word "drying" seems unsuitable. "Roasting" would be better. The



process can be carried out both with small pieces and with powder, but it must not be done in metal vessels which darken the copal very considerably. The vessels most suitable are large and very shallow pans of stone-ware or porcelain, or enamelled iron in which there is no chance of the resin coming in contact with the metal. The apparatus required is one in which a temperature of 180° to 200° C. can be kept up continuously. It should be possible to bring the temperature up to 300° when the apparatus will serve for the treatment of amber.

The apparatus shown in Fig. 6 is an excellent one for this purpose. In construction it greatly resembles that of a muffle

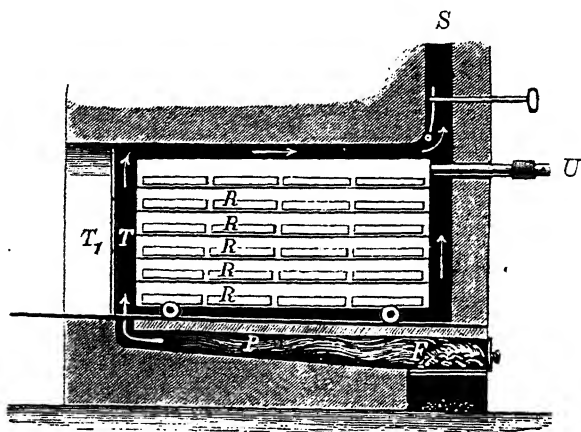


FIG. 6.

furnace such as is used for enamelling. It consists of a masonry or brick-work chamber with a thick earthenware floor *P* below which is the fire *F* stoked with coke. At the end of the chamber furthest from the grate there is an opening in the floor, through which the furnace gases enter the chamber and pass in the direction indicated by the arrows through the chamber and out through the chimney *S*. A damper *R* put into the chimney near the outlet of the combustion gases insures accurate regulation of the draught in the fire, and hence of the temperature attained in the chamber. The chamber contains a box of thick iron plate, nearly filling the space so that the sides of the box are only a few inches from the walls, and the box is therefore constantly enveloped by

the hot gases from the fire. This box, which is provided with an airtight door at T, rests on four small wheels running on rails so that it can easily be withdrawn from the chamber. A second door T₁ closes the end of the chamber and is luted with clay inside. The tube U leading from the box can be screwed on to a condensing worm so as to collect the volatile products. The inside of the box is fitted with shelves of strong wire netting on which the vessels containing the resin are placed. To make the greatest possible use of the space these vessels are quadrangular and shallow, and the copal is placed in them to a depth of 1 or 2 inches. The depth must not be too great as the dust of the copal cakes the mass whereby the drying is delayed, but the depth may be increased if the copal-powder is mixed with its own weight or thereabouts of clean white sand, which has no action on the copal and makes it porous. When the copal is dissolved the sand remains, and after filtering off can be used again for the same purpose.

THE ELECTRIC THERMOMETER.

In order to regulate the temperature of the box an electrical thermometer is fixed in the centre of it, this is connected to a bell which rings as soon as the heat reaches the proper degree. When the bell rings the damper is partly closed to prevent any further rise of temperature. A very simple but effective thermometer of this kind is illustrated in Fig. 7.

This consists of an ordinary mercury thermometer with the upper end open, through which a platinum wire nearly fitting the bore is inserted into the tube. A platinum wire is also fused into the bulb so as to come into contact with the mercury. When the thermometer is to be used the upper wire is adjusted in the tube so that its lower end stands opposite the mark on the scale showing the temperature which is not to be exceeded, say 200° C. One wire is connected with the negative pole of a battery, the other to the bell and then to the positive pole. As long as the tempera-

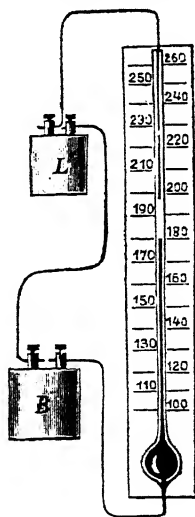


FIG. 7.

ture determined is not reached the mercury leaves the circuit open, but as soon as it touches the upper wire the circuit is made, the bell rings and continues to ring until the temperature has fallen, and the mercury has severed contact with the upper wire thus interrupting the current.

As soon as the box is filled with dishes full of copal the doors are luted, and it is run into the chamber by means of the rails. The chamber having been closed the fire is lighted, and a good fire is made at once as it takes some time to heat up the chamber and the box. The fire is kept up until the electric bell rings, whereupon the damper is nearly shut and the fire is modified, the heat being as high as possible without starting the bell again. The tube D having been connected with a condensing worm a small quantity of distillate is collected which never exceeds 2 to $2\frac{1}{2}$ per cent of the weight of the copal treated. It is composed almost entirely of pure water, and so long as that is the case it is evident the heat has not been excessive, for had it been otherwise the distillate would have contained oils resulting from the decomposition of the resin.

No change is perceptible in the roasted copal, but it has become much more easily soluble. As the distillate in a properly conducted operation is practically nothing but water, we might ascribe the previous insolubility of the copal to its containing water. Nevertheless, experiments have shown that the roasting has other effects on the copal than a mere desiccation. On drying copal powder over sulphuric acid *in vacuo* we find that after a few weeks the copal has lost several per cent in weight, and that the sulphuric acid has gained in weight to a corresponding extent. Hence the loss is attributable to the evaporation of water from the copal and the gain to its absorption by the acid. In this experiment every trace of water is abstracted from the resin. But nevertheless this drying of the copal at the ordinary temperature does not render it any more soluble than it was before. This experiment shows therefore that the lengthy roasting causes a change in the constitution of the copal with a consequent increase in solubility.

The apparatus used for roasting the copal can also be employed for the distillation of the resin; by more strongly heating after the distillation of the water a yellowish oil follows and floats upon the water which preceded it. These drops consist of

volatile products of distillation produced by the decomposition of the copal by heat. The fire is in this case regulated in such a way that the oil distils over at a uniform rate and the distillation is kept up until as much oil as may be desired has passed over. To prevent the iron of the box and the shelves in it from being attacked by the vapour of the copal oil, whereby the oil itself would be made of a dark colour, it is a good plan to varnish the whole of the interior with the best thick amber varnish before the box is first put into use. This protects the iron permanently from the vapours.

As rather a high temperature is required for the distillation of copal and a still higher one, i.e. up to 400° C., for amber, the iron box needs to be carefully made, for this reason it is constructed of strong boiler plate and riveted hot.

THE DISTILLATION OF THE RESIN.

If copal or amber is subjected to distillation to render it easily soluble, care must naturally be taken that the process is not carried further than is necessary to secure the object in view. Over-distillation results in a loss of resin, for which the oil obtained will by no means compensate.

Although it cannot be denied that the various copals behave very differently on distillation, and that more oil must be distilled from a hard than from a soft copal to obtain sufficient solubility, yet there is a limit which may be taken as common to all the sorts of copal. Most manufacturers consider that the loss of weight on the copal should not exceed 25 per cent. As it is impossible to stop the distillation at various periods to ascertain the loss the copal has undergone, some other means must be found of gauging the percentage lost. This is done by estimating the amount of oil in the distillate, and from this the condition of the copal in the still is inferred.

LOSSES OCCURRING DURING THE DISTILLATION OF COPALS.

The losses which occur on heating copal for varnish making vary according to the temperature and the time of heating. The following figures are given in the "Farben Zeitung":—

	Per cent.
Hard Manila	11.7 to 16.5
Red Angola	16.6 to 21.6
Sierra Leone	17.2
Zanzibar	32.0
Amber	30.0

while Violette found the losses to be

Calcutta copal	23.0 to 26.0
Manila	25.0
Zanzibar	23.0

Violette has made careful determinations of the changes in the solubility of copal brought about by distillation for various periods of time, and it is from his experiments that we are enabled to fix the weight most suitable for rendering the copal soluble. The following figures give Violette's results for 100 lb of copal:—

Loss in weight, lb.	Oil obtained, lb.	Behaviour of the residue due to oil of turpentine.
3	3	Insoluble.
9	8.5	"
10.5	10.2	"
16	15.7	"
20	19	Slightly soluble.
22	21.3	More soluble.
25	24.5	Very soluble.
28	27.1	"
30	29	"
32	31	"

An examination of these figures shows that the yield of oil is in most cases somewhat less than the loss of weight in the copal. The reason of this is that some of the products of the distillation consist of gases which escape into the atmosphere. The further the distillation is carried the greater the proportion of gaseous products. With a total loss of 25 per cent (just the proper limit to make copal soluble), the loss in gas is only $\frac{1}{2}$ per cent, while with a loss of 28 per cent it is $\frac{2}{10}$ per cent, and with one of 30 per cent, 1 per cent. We may consider, therefore, that the copal has been rendered sufficiently soluble when the weight of oil distilled over is one-quarter of that of the original resin. Beyond this limit it is useless to proceed, for thereby is duly diminished the yield of soluble product without securing any compensating advantage. To hit the point properly the same weight of copal

or amber should always be taken for distillation, and the receiver should be of a corresponding size. This receiver must be graduated so that the amount of distillate in it will show at once how much of the resin has been decomposed. The best receiver is a tall glass cylinder graduated in the following way, assuming that 100 kilograms of copal are distilled at a time:—

Put exactly 1250 c.c. of water into the cylinder and mark the level of the water on the outside with a glazier's diamond. Then put in 1250 c.c. more and mark the new level in the same way, and proceed in the same manner until 30 litres of water have been put into the receiver. Each division of the scale on the glass will then correspond with sufficient accuracy to 1 per cent of the copal. The volatile oil produced by the distillation of the copal has a specific gravity of about 0.8, so that 1 per cent of the 100 kilograms of copal, viz. 1 kilogram of oil, corresponds to 1250 c.c. of water. For amber also, supposing a distillation of 100 kilograms at each batch, we proceed exactly in the same manner, but making the marks of the cylinder for 1111 c.c. of water instead of 1250, as the specific gravity of the volatile oil of amber is 0.9.

DISTILLATION OF HARD RESINS WITH SUPERHEATED STEAM.

The distillation of the hard resins can also be performed by means of superheated steam, which has the advantage that all danger of overheating the resin and so producing a dark residue can be avoided, also that as soon as the result is achieved the resin can be at once removed from further exposure to the heat. An apparatus in which resins can very conveniently be distilled by superheated steam is shown in Fig. 8.

The still C consists of an oval cylinder made of strong copper-plate. The interior of this is painted over before the still is used for the first time with the best amber varnish. The still has two outlet pipes, D and K. The former carries the volatile products to the condenser, while the latter, in which there is a wire sieve, is used for drawing off the melted resin. The other end of the cylinder has a tightly-fitting lid which is luted on during work. The cylinder C is enclosed within a larger one C_1 , leaving a free space between them of a few inches across. C_1 is of iron, covered with asbestos to prevent loss of heat. Superheated steam enters

the jacket through the tube *W* and leaves it by *W*₁, which also serves for the escape of condensed water. The apparatus is inclined so that the fused resin, after the operation, can easily be removed through *K*.

When the apparatus is ready for use the steam is passed in at *W* until the first drops of distillate appear, the contents of the still have then been brought to the temperature at which the decomposition begins, and the flow of steam is regulated so that the distillation proceeds at a uniform rate. When the process is over the steam is shut off, and the whole apparatus allowed to get quite cool before being opened. The still may be large enough to take from 10 to 15 kilograms of resin for each charge; the

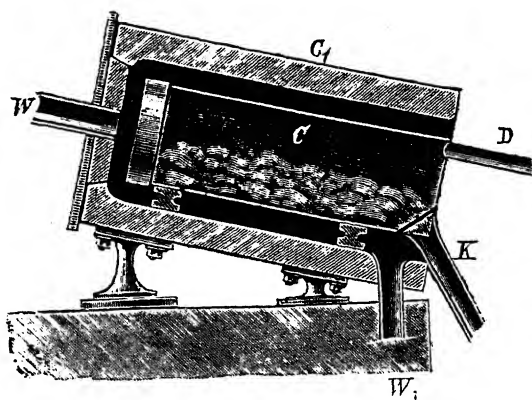


FIG. 8.

distillation of this quantity is soon finished. Even when working on a larger scale, it is best not to have a larger still, several of the smaller size being more convenient so that work need not be stopped for the still to cool. If six stills are started one after another the first is generally cool enough to be recharged by the time the sixth is started and can be recharged and restarted. In this way the distillation proceeds uninterruptedly, and only one still being idle at a time, a considerable saving in steam is effected, a point of much importance.

An apparatus which gives good results with an open fire, especially with amber, is shown in Fig. 9.

The boiler is set in an inclined position in a fireplace. In the boiler is the agitator, the axle of which passes through a stuffing

box at the top of the boiler. The top also carries a pressure gauge *f*, a safety valve *e*, and an outlet pipe *m* for the vapours. At the lowest part of the boiler at *k* are the sieve and overflow pipe for the melted resin; *b* is the manhole for charging in the amber.

Having fired up, steam at two atmospheres, pressure is admitted through the tube *d* to drive all the air out of the boiler. The stirrer is kept going throughout the operation, and the vola-

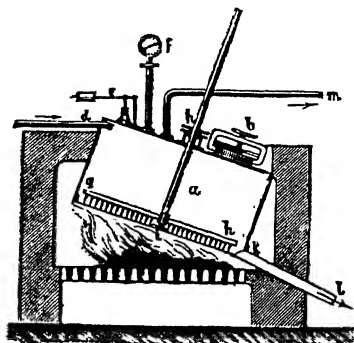


FIG. 9.

tile oils escape by *m*, while the fused amber is flowing out at *k*. The stirrer is not of much service. As long as the amber is well below the temperature at which it begins to decompose, the pieces are kept moving, but when that temperature is reached the whole of the amber becomes a single tenacious mass which the stirrer can with difficulty move. It is thus somewhat superfluous at this stage to attempt to use it.

DISSOLVING THE DISTILLED RESINS.

After distillation for a sufficient time the resins dissolve fairly easily in solvents, but there are difficulties in the way of obtaining the solutions perfectly clear. In many cases an apparently finished solution contains appreciable quantities of resin which are not really dissolved but simply swollen up. Nothing is gained by grinding the resin beforehand, for in that case it swells up even more and forms a tough mass which comes into surface contact only with the solvent.

To secure proper contact between the resin and the solvent,

both must be kept in constant movement. To do this many factories use the shaking machine represented in Fig. 10.

The frame *bb* supports the horizontal axle *c*, which can be rotated by means of the flywheel *h*. This axle has two cranks *d* and *d'* set 180° apart. The cranks support the vessel *a* in an inclined position. This vessel is partly filled through the opening *g* with broken resin and solvent till it is two-thirds full. The wheel is then turned so as to lift first one end of *a* and then the other, so that its contents are being continually thrown from one

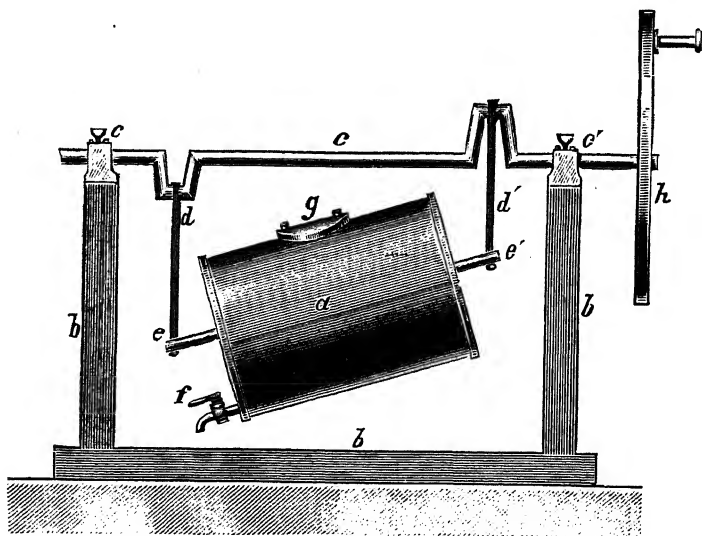


FIG. 10.

end to the other. This brings resin and solvent into intimate contact and effects rapid solution. After a time a sample is drawn off into a glass by the tap *f*. When the sample is a thick slightly opalescent liquid, the process may be regarded as finished and the vessel *a* is emptied either into the filter or the clearing vat.

Although this apparatus answers fairly well it requires a great deal of power, the whole weight of *a* and its contents having to be constantly moved. This serious drawback can be avoided by using the apparatus shown in Fig. 11.

The cylindrical dissolving chamber *C* is jacketed with another cylinder *C*₁, the jacket space being a few inches wide. Steam is

admitted to the jacket by the pipe D, the steam and condensed water escaping through W. The upper end of C is provided with an opening O for filling in the resin. The solvent is run in by means of the funnel L. In the middle of C there is a vertical spindle A turned by the two bevel wheels at K. This spindle carries a number of horizontal rods arranged spirally round it.

Having put in the solvent the stirrer is set in motion and the powdered resin introduced in a thin stream. When it is all in, the opening O is closed and steam admitted to the jacket. The stirrer prevents any resin from sinking to the bottom, the joint action of the stirring and the heat finishing the solution very quickly.

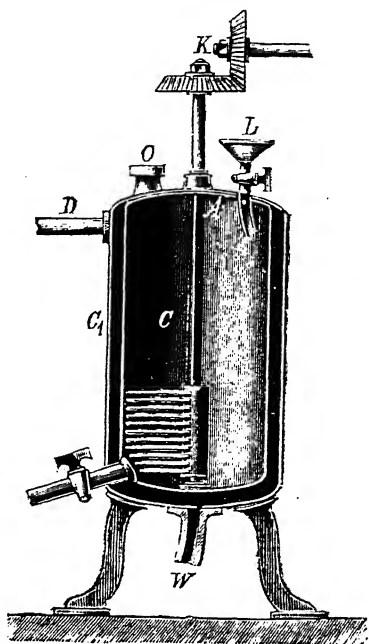


FIG. 11.

As soon as a sample shows a satisfactory appearance the steam is shut off, O is opened and C is emptied. This description will show that the apparatus requires only sufficient power to keep the stirrer in constant motion, and this is not great even when the apparatus is on a very large scale. To dissolve the resins in volatile solvents, such as oil of turpentine for example, the apparatus shown in Fig. 12 can be employed.

The vessel K is filled with a solution of common salt in which the dissolving chamber T dips. In T is the stirrer R, and the cover of the vessel is fastened on air-tight with the clamps S. Through the cover passes the end *a b* of the worm in F. The worm opens freely at its upper end and is kept surrounded with cold water.

The resin and turpentine are heated together by boiling the salt solution which has a higher boiling point than water, the heat being assisted by the motion of the stirrer. The turpentine

escaping as vapour from T is condensed in the worm and flows back again. Solution is still more rapid if paraffin wax is used instead of brine in the outer pan. The temperature can then be brought to 160° C., the boiling point of oil of turpentine.

FILTERING THE RESIN SOLUTIONS.

As already mentioned, we might consider solution complete as soon as a sample shows that the dissolving vessel contains a slightly opalescent liquid. But a simple experiment will show that the

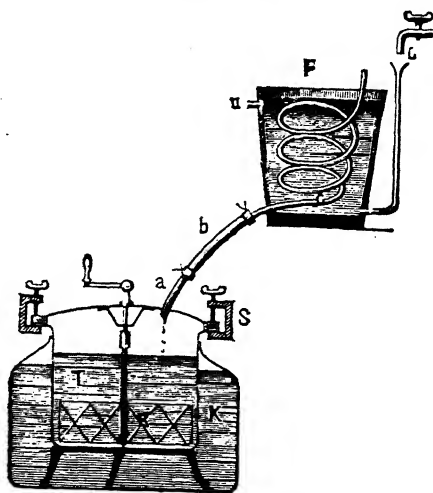


FIG. 12.

solution is anything but complete. Under the most favourable circumstances a solution is obtained in which a certain amount of the resin is floating in a very swollen-up condition. If the solution is placed in a tall jar of white glass, which is stoppered and put in a place where it cannot get shaken, after several days the upper part of the liquid will become quite clear, but that below the clear part shows more and more turbidity the lower it is. After a few weeks the largest part of the solution will have become quite clear and transparent, and a slimy tenacious mass will be seen adhering to the bottom. This consists of undissolved but highly swollen resin. Many manufacturers clear their solu-

tions by decanting the clear liquid obtained by standing as completely as possible from the sediment; the latter subsequently being shaken up with some of the solvent and used in preparing the next lot of solution.

It is easy to see that this tedious and troublesome method is utterly unsuitable for working on a large scale; although it may answer well enough in the manufacture of small quantities at a time, it requires too much time. We can, however, get quite clear solutions very much more quickly by using filters so arranged that all undissolved particles are kept back and nothing passes through the filter but the true solution.

We know that there are a large number of different filter arrangements which leave nothing to be desired either as regards rapidity of filtration and clearness of the filtrate, but they all have the disadvantage that they work faultlessly only for a short time. The solution passes through the filter more and more slowly and in time ceases altogether to do so. The reason of this is that the slimy and swollen particles of resin choke up the pores of the filtering material so completely that even very high pressure is insufficient to force the solution proper through the mass. The filter must therefore be so designed that this stoppage of the pores is prevented. An apparatus very suitable for this purpose, and one which will give large quantities of clear filtrate in a short time, is shown in Fig. 13.

The apparatus consists of the cylinders I, II, III, IV, made of strong sheet copper varnished inside with amber-varnish. These cylinders are about 8 inches high, and are connected by their flanges with the clamps as shown, thus forming a single air-tight

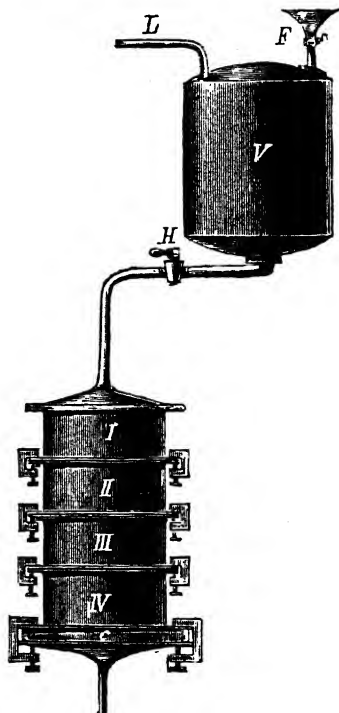


FIG. 13.

chamber. To the lowest cylinder IV is fastened a funnel with an outlet tube, and the uppermost cylinder I has a funnel-shaped lid, the apex of which receives a tube from the copper cylinder V containing the liquid to be filtered. The only other openings in V are one to receive the funnel F for filling it, and one for the pipe L through which air can be pumped into V. The tube to the filter can be closed by the cock H, and the funnel F can also be shut off with a tap. A rather closely woven cloth is stretched between I and II which are then clamped together by their flanges. III is then clamped on in the same way and then IV. Between IV and the funnel C a plate of cellulose about four-fifths of an inch thick is put between two cloths. As soon as the apparatus is all put together the cock H is opened and the liquid is allowed to run through the filter. As the liquid, to reach the cellulose plate, must pass through the three closely woven cloths which are stretched between the flanges of the cylinders, the coarser solid particles collect on the uppermost cloth and finer particles on those below it, while only a nearly clear solution reaches the cellulose layer.

As, however, even with this arrangement the action will soon become slow, the pressure of the air in it is gradually raised as the filtration proceeds, by means of the condensing pump attached to L. The pressure must not be suddenly increased, as the filter cloths would then probably be torn. A pressure of five or even six atmospheres is often finally attained.

Care has to be taken not to increase the pressure needlessly. As long as the filter is acting well, the pump is not worked, but as soon as the issuing stream shows that the filter is becoming choked, the pressure is raised until the original rate of filtration is restored.

When at the close of the filtration the apparatus is taken apart, the surface of the cloth is found to be covered with a rather thick layer of a gelatinous mass, which consists of swollen resin. To recover this and to clear the cloths they are rinsed in the solvent used for making the solution. When, too, the pores of the cellulose plate are choked up it is cleaned in the same way.

In this way perfectly clear solutions of amber or copal are obtained, and if oil of turpentine is the solvent employed, these can be used at once as varnishes. The coats will appear quite colourless and have a superior lustre. If the solutions are mixed with linseed oil made drying by the cold process with manganese borate,

the resulting varnishes are no darker than a pale yellow, and are a great improvement on those made by dissolving run copal or amber direct in boiling linseed oil. Varnishes made by this latter method have a distinctly dark brown colour, even in thin coats, and always appear of a yellowish colour on a white ground, even when laid on in a very thin coat.

PRODUCTS OF THE DISTILLATION OF THE HARD ROSINS.

Amber.—On dry distillation amber yields succinic acid and an oil. The oil has a specific gravity of 0·808 to 0·857, an optical rotation of $0^{\circ} 30''$ to $6^{\circ} 30''$, a refractive index of 1·448 to 1·465. It is soluble in $6\frac{1}{2}$ to 7 volumes of 90 per cent alcohol. The composition of this oil varies very considerably, according to analyses of commercial samples the specific gravity varies from 0·820 to 0·857 and rotation varying from -2° to $+26^{\circ}$.

Zanzibar Copal.—On dry distillation this loses 20 to 25 per cent of its weight consisting of about 2 per cent of water and 18·5 per cent of brownish oil with a powerful odour. The specific gravity of this oil is 0·9051, it consists mostly of terpenes and is slightly acid. According to the researches of Tschirch and Stephan the volatile products contain lactic acid and a hydrocarbon (C_7H_{12}) with a boiling point of 150° to 151° C. On heating the rosin at 199° to 201° C. they obtained an oil of the composition represented by the formula $C_{26}H_{48}O$.

Kauri.—On dry distillation kauri yields about 1·4 per cent of water and from 16 to 20 per cent of oil of specific gravity 0·9224. It is also stated that the oil separates into two portions, an upper layer of specific gravity 0·86 and a lower one of specific gravity 1·01 taken at 21° C.

CHANGE WHICH TAKES PLACE IN RESINS ON HEATING.

The change which takes place in the composition of resins on heating is shown in the following table by Lewkowitsch :—

	Original Gum Resins.					Gum Resins after Heating to 300° C.					
	Acid Value.	Saponi- fication Value.	Unsap- onifiable per cent.	Iodine Value		Solution in Alcohol per cent.	Acid Value.	Saponi- fication Value.	Unsap- onifiable per cent.	Iodine Value	
				by ICI Addition.	by Br Addition.					by ICI Addition.	by Br Addition.
Copal, commercial.	109.8	143.1	7.96	135.5	183.6	93.06	20.49	85.4	14.73	124.3	181.3
Copal, commercial.	42.43	66.82	14.99	191.2	114.6	54.83	24.94	61.04	46.40	143.7	233.5
Copal, Sierra Leone	72.83	119.03	18.81	105.7	96.05	—	12.89	114.9	17.22	125.5	173.6
Copal, Manila	127.6	175.17	15.98	137.9	188.2	—	68.21	136.3	22.99	133.3	186.4
Copal, Brazil	108.99	171.4	7.66	127.7	72.66	—	46.25	113.8	38.74	136.7	225.9
Copal, Sierra Leone	65.7	110.5	16.27	94.55	117.0	—	15.32	123.8	22.31	95.23	135.4
Kauri	37.39	53.84	20.07	90.99	—	84.41	17.14	61.07	10.39	67.70	74.71
Mastic	52.73	81.79	51.13	175.7	185.0	—	23.23	50.24	49.28	165.0	217.8
Shellac, dark.	61.13	203.0	3.56	35.57	13.25	—	64.84	136.14	14.28	126.4	69.13
Sandarac, Magada.	134.39	143.42	13.2	112.2	99.98	—	106.6	137.26	9.93	—	—
Sandarac, Australia	131.15	134.32	17.44	125.4	63.83	—	9.25	58.73	—	106.1	207.4
Animi, No. 1.	18.69	73.15	6.32	105.3	182.7	—	—	—	—	—	—
Animi, No. 2.	30.22	93.5	6.85	96.21	95.85	—	—	—	—	—	—
Dammar	35.22	32.73	75.96	127.5	169.4	—	10.85	60.44	86.57	127.0	196.8
Amber	16.7	121.27	18.86	58.98	82.82	—	10.60	99.19	16.25	74.34	147.8
Succinit.	11.24	113.63	7.06	55.05	78.4	—	146.46	153.01	15.14	133.7	302.1
Colophony	—	—	—	—	—	—	—	—	—	—	—

CHAPTER V.

THE MANUFACTURE OF ILLUMINATING GAS FROM ROSIN.

WHEN rosin is exposed to dry distillation, the decomposition takes a course which depends upon whether it is brought suddenly to a very high temperature, or a moderate heat is gradually applied. In the latter case a large quantity of product is obtained which readily condenses to an oily mass, the well-known rosin oil. As the temperature is raised the darker in colour and the richer in carbon does the residue become, until finally no oil passes over. The heating is then stopped and the residual pitch removed from the still. It is true that even in the distillation of resin at moderate temperatures a certain amount of inflammable gas is produced, but this has very little illuminating power and is only utilizable as fuel. This gas is burnt under the still so as to economize fuel.

When the distillation is carried out in the way first mentioned, with a rapid rise of temperature, a very large amount of gas having high illuminating power is obtained. The amount of resin oil produced is very small, and very much less pitch is formed, this taking the form of a black shiny coke-like mass.

As regards the relative cost of coal gas and rosin gas, the latter is distinctly cheaper for various reasons when both are made on a small scale. As the candle-power of rosin gas is double that of coal gas, only half as much of it as of the coal gas need be used. Moreover, the value of the rosin oil obtained in making the gas, although it is not produced in large quantities, must be taken into account. Finally, it is easier and less expensive to purify rosin gas than coal gas. Hence the plant for producing rosin gas takes up very little room.

In those factories where rosin is used for the manufacture of rosin oil, cart grease, etc., means of lighting other than by rosin gas is almost superfluous.

There are several apparatus for making rosin gas, most of them being like those used for coal gas, naturally with certain modifications. Fig. 14 shows a rosin gas-making plant in section.

The vessel H which contains the rosin to be gasified has a cover closed with a water joint, and provided with a pipe for the escape of vapour from the heated rosin. The deepest part of H consists of a wide tube enveloped by the combustion gases from

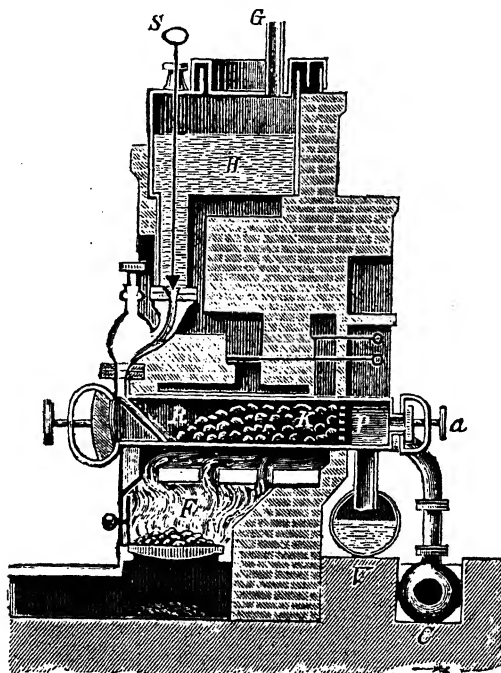


FIG. 14.

the fire which surround it and also heats the bottom of H. A conical opening at the bottom of this tube has an iron cone attached to the rod S fitting into it, so that by raising the rod the opening may be partly or fully opened. Below it a pipe leads into the retort R, which is kept red hot by the fire F. The retort is of cast iron, differing little in form from those used for coal gas manufacture. At the place where the melted rosin flows from H into the retort there is a triangular inclined plate,

the object of which is to spread out the stream of rosin falling upon it. The body of the retort as far as the perforated plate P is filled with coke. The space behind P is empty and is connected with the condenser V, where the less volatile products of the distillation collect. The pipe C which lies in water carries the gas to the scrubbers. The opening *a* is used for cleaning out the retort.

The above apparatus is somewhat expensive, the expense

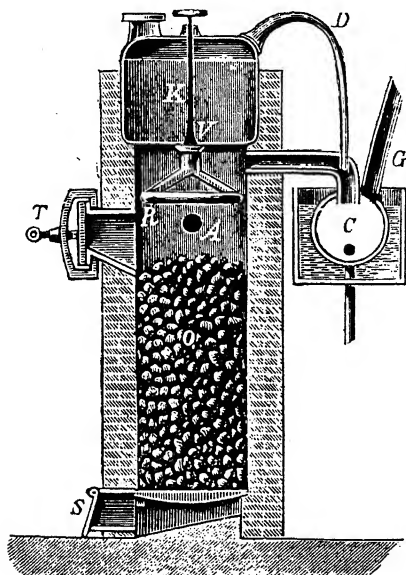


FIG. 15.

being, of course, greater when a number of retorts have to be used, as, for example, when large quantities of rosin gas are required. There is, however, a much simpler form of apparatus which can be made large enough to furnish very considerable quantities of gas. The saving is effected by doing away with the furnace and the retorts. Such an apparatus is shown in section in Fig. 15.

The closed boiler K stands on the top of a cylinder of fire-brick, and receives the rosin to be gasified. It is provided with a manhole through which it is charged, and the fumes escaping

from it pass by the pipe D into the condenser, together with the gas from the fire-brick cylinder. The condenser C is a wide iron pipe lying horizontally in water. By means of a pipe the liquid products which condense in it can be drawn off, while the gas passes by another tube G at the opposite end of C to the scrubbers.

In the side of the brick cylinder there is an opening T which can be closed gas-tight by an iron plate. A grate is put at the bottom of the shaft, and the space below it can be reached by an opening in the side. This opening is lined with an obliquely cut iron pipe, and closed by the heavy iron plate S. This plate can be moved sideways, so as to open a slot of any desired width. A short pipe in the bottom of K is closed by the valve V, which can be screwed up by the rod, so as to allow the rosin to flow out fast or slow as may be required. The part of the tube below the valve has three or four branches, which lead into a hollow ring with many perforations on its under side. Hence when V is lifted a large number of small streams of melted rosin flow down into the brick shaft or stove.

When the apparatus is to be set in action the shaft is filled with coke through T. T is then shut and by means of a damper the pipe A is put into communication with a chimney. Fire is then put below the grate through S. When the whole of the coke is at a full red heat, A is closed, so that all vapours escaping from the stove must pass into the condenser C. The valve V is then opened, so as to allow the melted rosin to drip on to the hot coke. The rosin is decomposed, the liquid products condensing in C, while the gas passes by the pipe G to the scrubbers. The draught is regulated by S so as to keep the coke glowing, and the supply of rosin is regulated by adjusting the valve V in such a way that the production of gas proceeds at a uniform rate. The process must not be so driven that the condensation of the rosin oil in C is incomplete. The supply of air through the narrow slot in S is enough to keep the coke in the stove O red hot. As it passes up through the coke, carbon monoxide is formed and becomes mixed with the rosin gas. As carbon monoxide is itself combustible, and there is not enough of it appreciably to affect the illuminating power of the resin gas, it is unnecessary to separate it.

PURIFICATION OF ROSIN GAS.

The gas escaping from C must be purified before it goes to the gasometer, but as the gas is fairly pure this can be done in a very simple fashion. The gas is free from compounds of sulphur, the chief impurities being carbon dioxide, also usually small quantities of the vapour of acetic acid, which escapes from the condenser by reason of its very volatile nature. It is absolutely necessary to remove the carbon dioxide which considerably lessens the illuminating power of the gas. The acetic acid is not objectionable on this account, but may in time corrode the iron distribution pipes through which the gas is led to the burners. Both impurities can be removed simultaneously by passing the gas over lime slaked with just enough water to form a dry powder. This absorbs both impurities. The slaked lime is put into shallow iron pans, the covers of which are closed by a water joint. These pans contain iron shelves close together and the lime is spread in a thin layer upon the shelves. These are so arranged that the gas must pass over each, travelling the length of the pan as many times as there are shelves. The gas then passes direct into the gasometer, whence it passes to the burners in the usual manner.

As already stated, rosin gas is much superior in lighting power to the best coal gas, on account of its high content of carbon. This peculiarity of its composition makes it inadvisable to burn it from an ordinary fish-tail burner; an Argand or other lamp, with which it can be mixed with air before consumption, should be used. The best way of all of using it is with a mantle, whereby we get the most light with the smallest consumption of gas. The high percentage of hydrocarbon in rosin gas ensures that, when mixed with enough air to form a blue flame, it burns with great evolution of heat, and it forms therefore an excellent fuel for heating stoves or soldering irons.

The yield of gas from rosin compares very favourably with that of coal and other gas-forming materials. Pure American rosin will give 1600 to 1700 cubic feet of gas per cwt. As some rosin oil is always obtained in making rosin gas, the oil will pay part of the cost of manufacture; the cost of the gas is easily reckoned for any given price of rosin.

Rosin has also been used to render coal-dust suitable for gas-

making, by stirring the dust into melted rosin till the mass is too thick to be stirred any longer. The mass is broken up when cold and set, and charged into the retorts either alone or mixed with lumps of coal. Formerly coal tar was used instead of rosin for this purpose, but a far more remunerative use for coal tar is now found in the manufacture of dyes and other well-known products. The cheapest rosin is naturally used for mixing with the coal dust.

CHAPTER VI.

ROSIN OILS.

WHEN any kind of resin from which the essential oil has been removed is heated in closed vessels, it begins to decompose at a temperature depending upon the nature of the resin, yielding a large number of products of decomposition, both gaseous and liquid. The final residue is a shining, black, scoriaceous coke.

The gaseous products so obtained are for the most part combustible, and burn with a very luminous flame. The products condensable into liquids from the vapours escaping from the still are very various in composition. When allowed to stand, the liquid distillate soon separates into two sharply-marked layers—a watery layer and an oily layer. The latter constitutes the crude resin oil. This consists of a large number of distinct hydrocarbons, and its composition depends not only upon the kind of resin treated, but upon the way in which the process is conducted. If the temperature is raised very gradually the products differ very considerably, especially from a quantitative point of view, from those formed when a high temperature is reached as quickly as possible.

The commercial value of the resin oils varies enormously with the sort of resin. For example, the oils obtained from certain hard resins such as amber and copal, serve very well for solvents of the same resins in varnish-making, but the amount of oil which such resin yields is rather limited. On the other hand there is a large yield from the commoner resins, and especially from those obtained from coniferous trees. As is well known we have vast quantities of this resin at our disposal, and it was used on a fairly large scale in various industries as early as the middle of the nineteenth century. In 1835 the French chemist Fremy, one of the first to study the products of the dry distillation of resins with thoroughness, prophesied that the products

from rosin would become of great commercial importance, a prophecy which has been strikingly fulfilled. As stated, the products obtainable by the dry distillation of rosin were exciting great attention in Europe at the beginning of the second half of the nineteenth century, and factories of considerable size were erected for this branch of industry.

Nevertheless, the real commencement of the rosin oil industry dates from the time when the Americans began to exploit the product of their vast pine forests in a rational manner, and to make oil of turpentine and rosin. As the preparation of the crude rosin is carried out in all its stages in a practical manner in America, the quality of their rosins, even that of the second-rate brands, is very satisfactory, and they are all very suitable for the manufacture of rosin oil.

Although very many of the European manufacturers who distil rosin oils use American rosin for the most part, it must not be forgotten that Europe produces very important quantities of rosin, which can compete on an equal footing with the American product, if it is obtained in an equally rational manner. In the mountainous districts of Europe, especially in the Pyrenees and the Carpathians, we have large pine-woods, the yield of which might be considerably increased by working up the crude rosin into colophony and oil of turpentine by scientific methods. In Siberia there are enormous primeval forests largely consisting of pine trees, and there is no doubt that these forests, now opened up by the completion of the Trans-Siberian Railway, could yield enough rosin to supply all the needs of the whole of Europe.

In the times previous to the development of rosin oil manufacture, the chief object of distilling colophony was the production of illuminating gas. The tar, formed in the process, which is crude rosin oil, was considered of little value, and nearly all of it was used to eke out the fuel for heating the gas-retorts. Since, however, the tar has been scientifically investigated, we have found that it is the gas that must be considered as a by-product, the oil being of far greater value. An analogous thing happened in coal distillation. For many years the black evil-smelling coal tar was regarded as a troublesome by-product attending the production of gas for lighting purposes, there being hardly any use for it except in heating the retorts. But when more became known about the constituents of coal tar the epoch-making dis-

covery of the manufacture of dyes from it resulted, to say nothing of other valuable products, and the whole state of affairs was changed in a very short time. In a few years the hitherto practically worthless tar became a highly prized raw material, as did also the gas liquor. The gas retired into the position almost of a by-product, and the uses now made of coal tar afford a most interesting example of exhaustive exploitation of a raw material.

Although the products of the dry distillation of rosin have not found such comprehensive and vast fields of usefulness as those obtained from coal, they do nevertheless find so many uses, that it can be fairly said that the distillation yields no product which is destitute of value. No better proof of the scale on which this industry has developed can be given than the statistics of the imports of American rosin into Europe. The quantities imported towards the end of the nineties already amounted to more than a million barrels, and these quantities have since considerably increased.

The following is a list of the products obtainable by the dry distillation of rosin: (a) gas for lighting and heating; (b) acetic acid from the watery part of the distillate; (c) light volatile oils, which are not only excellent illuminants but valuable as solvents for many substances; (d) heavy oils largely used in the manufacture of lubricants for vehicles and machinery. The whole business of cart-grease-making as now practised depends upon proper treatment of these heavy oils. (e) Driers. Proper chemical treatment of rosin oils will convert them into liquids which can be used in the mixing of paints exactly like the drying oils, and will give a mixed paint quite as good for some purposes as one prepared with boiled oil, at a much smaller cost. (f) Lamp-black. A lamp-black can be made from rosin oil, and is one of the finest lamp-blacks that can be made both in respect of minute subdivision and of beauty. The purest sorts of it are used in artistic printing in copper-plate work and in lithography, and also for the preparation of an Indian ink which is equal to the best Chinese make.

THE MANUFACTURE OF ROSIN OILS ON A LARGE SCALE.

If rosin is put into an ordinary still connected with a worm, such an apparatus, for instance, as at one time was employed for distilling brandy, we are in a position to undertake the dry

distillation of rosin. The oldest piece of apparatus used for the purpose differs from brandy-distilling plant solely in its greater size. Some stills have been built for treating a ton of rosin at a time, that is to say, large enough to hold four tons; a still must not be filled with cold rosin to an extent exceeding one-quarter of its capacity as the rosin swells and froths up enormously on heating. These stills were invariably heated over a naked fire, and had all the disadvantages accruing to such a method. Of these the most serious is the impossibility of regulating the temperature and it is especially necessary in the distillation of rosin to do this. One must be able to keep the temperature steady at any given point. If this is not done the decomposition of the rosin will be irregular and spasmodic, and will not follow a uniform course. If it is necessary to employ direct fire the distillation must be carefully watched from first to last, the fire being tended with the greatest care. If the temperature should rise suddenly the probability is that the development of vapour would be so rapid that the condenser would be unable to cope with it, so that quantities of resin oil would escape uncondensed and be lost. There is also the danger that the rapid generation of gas might result in the bursting of the still. The temperatures required for the distillation of rosin rise to a fairly high figure. Beginning with a distillate coming over at about 130°C ., the heat is gradually increased to 350° or 360° . This finishes the distillation, leaving nothing in the still but black pitch in a liquid state.

PLANT FOR DISTILLING ROSIN.

In their essential features rosin distilling apparatus can be divided into two classes, those which can be worked continuously and those which work intermittently. The former kind is the only really suitable one, and these can be subdivided with reference to the method of heating into those with direct and those with indirect firing. It has already been mentioned that formerly an ordinary still with a movable head and a worm was used for rosin distillation. With an apparatus of this sort, as soon as the distillation is over and the pitch has been run out, the fire must be drawn and the still allowed to cool before recharging. Moreover, the valuable uncondensable gases which are evolved were totally lost. The large consumption of fuel, the long and con-

stant interruptions between distillations and the uncertainty attending the whole course of the process have finally resulted in the abandonment of such plant. It is therefore sufficient simply to allude to it. It is, of course, of historical interest, that it was the first apparatus used for the purpose.

Much more suitable, and hence now almost exclusively employed in modern well-appointed factories, is the apparatus in which superheated steam is used instead of an open fire. The use of superheated steam enables one to regulate the temperature of the still with perfect accuracy, with the result that the yield of the valuable products of the distillation is materially increased in comparison with that resulting from direct firing. It has been observed that in order to obtain the best yield of the most valuable among the distillation products of rosin, it is necessary to remove the vapours from the still into the condenser as quickly as possible, to prevent further decomposition by contact with the hot sides of the still. To effect this an arrangement is adopted in which the vapours are drawn out of the still by means of a pump as fast as they are formed. The combination of heating by superheated steam and the use of such a pump results in the best apparatus for the distillation of rosin, and we proceed now to describe one of this type constructed by the author.

APPARATUS FOR SUPERHEATING STEAM.


Every apparatus for superheating steam must consist of a boiler and a superheater. The boiler is an ordinary one capable of supplying steam at a pressure of several atmospheres. The superheater may be constructed in various ways. Figs. 16 and 17 show one of the older forms used in connection with a large plant.

Wrought iron pipes A are placed in a hearth where they are supported on fire-bricks set on end. The semi-circular copper bends B and C unite these pipes into a coil. In front of the hearth is an iron chamber D into which the steam pipe from the boiler opens. The object of D is to retain any water brought over from the boiler. A fire is made in the hearth so as to heat either all or part of the piping according to the amount of superheat required. The opening of the cock F admits the steam from D to the coil which can be heated to a temperature of 400°

C., or upwards, without increasing the steam pressure. At G where the steam leaves the superheater a thermometer can be inserted to enable the temperature to be regulated. This thermometer is, however, rarely used as the attendant soon learns how to fire so as to get steam of the temperature required.

Another superheater, also of great excellence, is shown in Figs. 18 and 19.

Here the coil is made of drawn wrought iron tubing. It lies in four layers, four tubes in the lower set, three in each of the

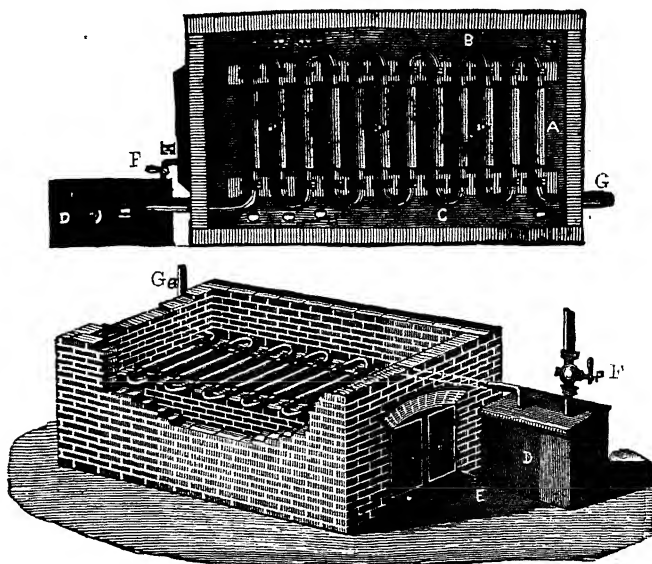


FIGS. 16 AND 17.

next two, and two only in the upper set. The tubes are joined by elbows placed outside the furnace.

By using superheated steam one is in a position to carry out with only one still a process which need not be interrupted except for short intervals, sufficient for the removal of the pitch and for recharging the still with rosin, but for the sake of economizing fuel and with a view to the fact that when there is only one still any accidental damage to it stops the whole work of the factory till it is repaired or replaced, it is best to work with an apparatus in which two stills are combined with the

same superheater. This arrangement has the additional advantage that the superheater can be kept always heated, for towards the end of the distillation the temperature of the still must be very high, and even at the beginning plenty of heat is required to fuse the new charge of rosin and begin the distillation as rapidly as possible.

To heat the two stills independently the pipe by which the

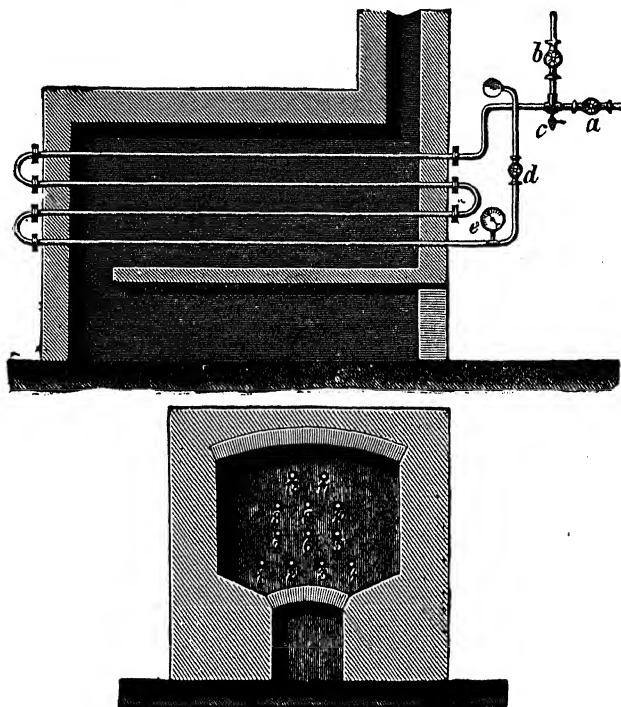

FIGS. 18 AND 19.

steam leaves the superheater is divided into two branches, one for each still. Each branch is provided with a tap so that steam can be sent to one still only or to both, and the amount of it can also be regulated.

In order to ensure that the largest possible proportion of the heat of the steam shall be utilized in heating the stills, it is made to pass through a flat coil just above the bottom of the still. The steam passes from the coil into the space between the still

and the brickwork in which it is set, so that it heats the still from the outside as well as from the inside.

These are the general principles of construction of plant for distilling rosin oil; later we shall refer to the most important types now made.

COMBINED DISTILLING RECTIFYING APPARATUS.

The greatest saving of time and fuel is secured by combining the apparatus for producing the crude rosin oil with that for rectifying it in such a way that the same superheater can be used for both, we have therefore constructed a plant which undoubtedly works more cheaply and quickly than any other. As it also provides for the complete collection of the gas which is invariably produced in rosin distillation, we can justly assert that the apparatus as constructed by us answers fully every requirement which can be made of a plant of the kind. Our apparatus consists of the following parts:—

1. A boiler large enough to give an uninterrupted supply of steam which need not, however, be at a very high pressure, two or three atmospheres being quite enough.

2. A superheater built on the plan shown in Figs. 18 and 19. The superheater is fairly large, since its heat is used to best advantage when long tubes are used, as they deliver the steam at a very high temperature such as is required for resin distillation and rectification.

3. Two exactly similar stills, each provided with a charge heater for the resin. Each still has a worm which is connected to an apparatus where the gases are separated from the liquid products.

4. A rectifying apparatus large enough to rectify quickly the combined output of crude oil from the two stills so that there is no necessity for any interruption of the work.

Figs. 20 to 23 inclusive show the separate parts of the whole plant.

Fig. 20 shows the arrangement of the two stills with their condensers and the vessel in which the gases and the liquids are separated and also the rectifying apparatus. The steam pipes from the superheater U enter the stills H, H, in which they traverse the coils D, D, the steam finally escaping at *d*, *d*. The

stills are surrounded by brick chambers M into which pass the hot gases from the fire of the superheater. These gases together with the steam coming from the coils pass over the outsides of the stills and finally escape by the chimney S. This arrangement utilizes the heat of the superheater in the most complete manner possible. The rectifier R placed in front of the stills, is like them surrounded by a steam jacket and provided with an internal coil fed with steam from the superheater. This steam becomes fully condensed to water which flows away from the bottom of the jacket by a pipe.

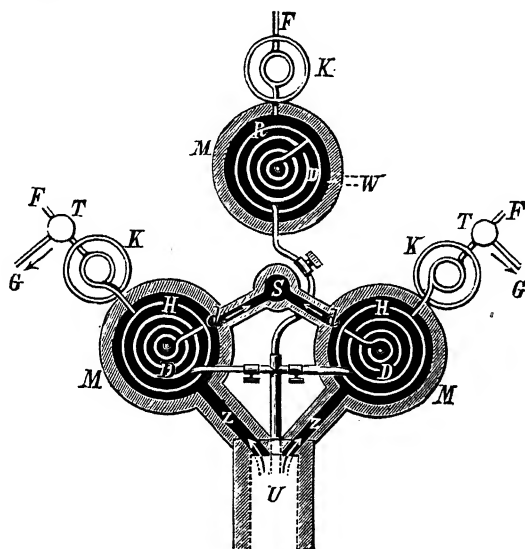


FIG. 20.

Fig. 21 shows a vertical section of a rosin distilling apparatus. The coil of the still opens freely at *d* into the space between the still and the brickwork M. The pipe R for the exit from the still of the distillation products is at the upper part of the still. A wide part of R receives the bulb of the thermometer T, the readings of which show the progress of the distillation. At the lowest part of the still is a pipe P with a cock, for running out the pitch when the process is finished. Immediately above the still is the charge heating vessel K, heated like the still by the fire gases from the superheater, which enter at U. The flue gases

leave for the chimney by S. The heater K has a valve V which can be raised to admit molten rosin to the still. K is made large enough to hold the rosin required for one distillation. As soon as the distillation is over and the pitch is run out, the charge is run from K into H by lifting V and the distillation is at once recommenced. The pipe from K goes nearly to the bottom of H. To prevent pieces of wood and other mechanical impurities

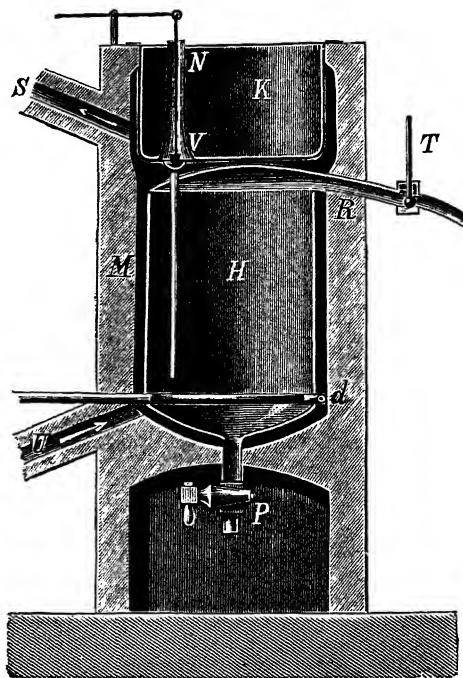


FIG. 21.

from entering the still the valve V is completely enclosed in the tube N made of wire gauze which acts as a filter.

During the distillation liquids condensed in the worm are obtained as well as uncondensable gases. To separate these the apparatus shown in Fig. 22 in vertical section is used.

The separator T is so connected with the cooling worm that the whole of the products of the distillation must enter it. The cylindrical vessel T is divided by the partition W, which reaches

nearly to the bottom of the cylinder, into two unequal parts. The products from the still pass in by R, the liquid portions of it collecting in T and finally filling it. There is then an overflow in an unbroken stream at F, while the gases escape by the pipe G. This may be made to lead into a gasometer, and the gas can then be used to light the factory. Any gas over and above what is required for this may be burnt in the superheater to eke out the fuel there used. A is a hydrometer which shows the specific gravity of the liquid issuing from the separator.

The rectification apparatus shown in Fig. 23 consists of a still

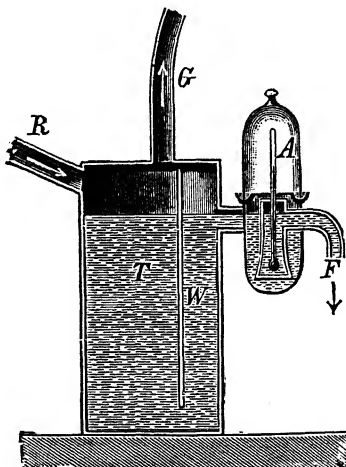


FIG. 22.

R from the dome of which the pipe F carries the vapours to the worm. The thermometer T in the dome shows the temperature of the issuing vapours, and the measuring vessel fixed at the lower end of the worm contains the hydrometer A for determining the specific gravity of the distillate. E is the pipe which brings the oil to be rectified into the still. D is the steam coil which opens freely at *d* between the still and its setting. C is the pipe for the escape of the condensed water. It is not difficult to arrange matters so that the rectification apparatus is heated by burning the gaseous products of the distillation of the resin. In this case a larger gasometer must be used and burners which mix the gas with the necessary amount of air for its proper combustion.

Unmixed with air the resin gas burns with a very smoky flame on account of the high percentage of carbon in it, but mixed with the proper volume of air it burns with a very hot and non-smoky flame. This method of heating is to be recommended as it admits of accurate regulation of the temperature.

A great variety of types of apparatus for distilling rosin have been proposed and the attention of practical men has been particularly drawn to that of Kramer and Flammer. This apparatus does not differ in its general arrangement from ordinary distilling plant. It is a vacuum apparatus, the vacuum being produced by a steam injector which is connected to the pipe from the still and sucks out the vapours as they are generated. This secures only

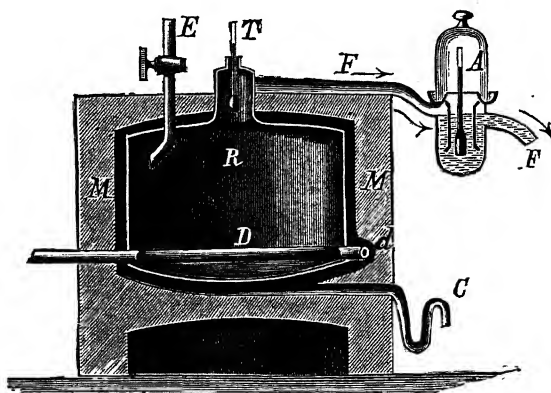


FIG. 23.

a moderate advantage, for all air is driven out by the time the distillation has been in progress for a short time by the gases and vapours which are evolved from the resin. There is, however, a distinct advantage in the use of the injector when the distillation is effected over a naked fire. It is then impossible to keep the temperature within bounds, the sides of the still becoming much too hot, with the result that the decomposition often proceeds too far and the rosin oil is to a large extent converted into gaseous compounds. The rapid extraction of the vapours from the still when the injector is used prevents this injurious action. When the heating is done with superheated steam, a very little care will enable the temperature to be very closely regulated by controlling the flow of steam, and no overheating of the sides of the still is

possible. In this case the sucking out of the vapours seems entirely supererogatory.

VACUUM APPARATUS.

The Kramer and Flammer apparatus for the distillation of rosin in a space free from air is claimed by them to give a rosin oil superior in quality to that furnished by other apparatus. The construction of the apparatus is shown in Fig. 24.

The still A is constructed to hold up to five tons of rosin. It is set in brickwork and heated over an open fire and also by

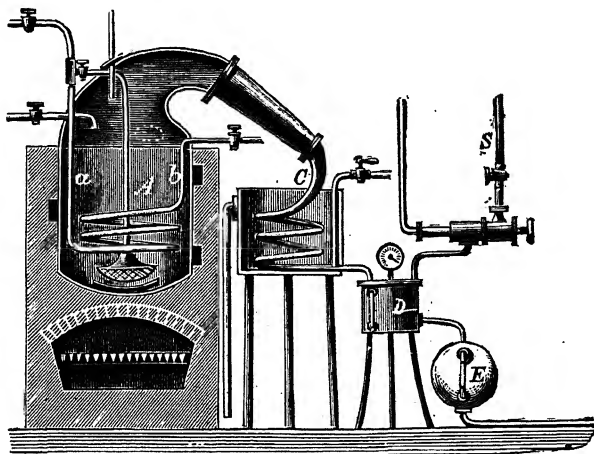


FIG. 24.

steam circulating in the tube *a b*. The products of distillation pass into the cooling worm *C*, whence they pass into the air-tight receivers *D* and *E*. The injector *S* communicates with *D* and continually sucks the vapours out of the still. To prevent waste of the combustible gases coming from the still it would seem advisable to lead the outlet pipe from the injector into the fire.

In order to ascertain what difference there is between distillation without air and distillation as ordinarily conducted, we have instituted a series of accurate experiments. Before beginning the distillation we expelled all the air from the apparatus with a stream of carbonic acid and kept the gas flowing continually all through the distillation, so that it also swept out quickly the products of the heating. As the presence of oxygen

which is supposed to have an injurious action on rosin oil was excluded by the continual stream of carbonic acid, the conditions were exactly the same as distilling in a vacuum. Accurate observations could, however, detect no difference, either in the amount or in the quality and nature of the products, whether the distillation was done in carbonic acid over a naked fire or by superheated steam without carbonic acid. This result was sufficient to decide us to discontinue the use of the injector. As already stated all the air in the apparatus is driven out very early in the distillation, the whole of the interior of the apparatus not occupied by melted resin becoming filled by rosin gas and the vapours of the rosin oil. In this way the action of atmospheric oxygen on the oil is prevented.

THE PROCESS OF RESIN DISTILLATION.

In the old factories practising the old crude method, where the whole apparatus consisted of a single still heated over a naked fire, and connected with a worm, the still was charged to at most two-thirds of its capacity with rosin. It was then heated, and the fire was gradually increased until a drumming noise within the still announced the commencement of the decomposition of the rosin and drops of distillate began to issue from the worm. Then for a long time the attendant sought to manage the fire so that the distillate flowed at a uniform rate, but towards the end, when the distillate flowed more slowly, the fire was urged strongly and kept at its utmost height till all distillation of liquid ceased. The fire was then drawn, the pitch run out, and the still recharged.

Independently of the enormous waste of fuel which is quite unavoidable with this primitive method, the combustible gases from the resin also are usually allowed to escape unburnt, the yield of the more valuable products of the distillation is much lower than it should be, because the rosin being a very bad conductor of heat, those parts of it in immediate contact with the sides of the still become overheated, so that far too little oil and far too much gas is produced, while the oil actually obtained is of inferior quality. As in the present state of the industry it would hardly occur to anyone to distil rosin over an open fire, we will leave that method and proceed to describe the course

taken when the distillation is executed with superheated steam. It must always be borne in mind that the aim of the foreman is to prevent the temperature of the still from rising higher than is absolutely necessary for proper and steady work. Great care must be taken that the decomposition never becomes violent. If it does it is a sure sign that the temperature is excessive, and the steam must be at once wholly shut off until the flow of the distillate has greatly diminished and no noise can be heard in the still. The superheated steam is then again admitted, more cautiously until the distillation is brought back to its normal rate of progress.

The first thing required is to fill the charge heater over the still with resin and then turn on the steam. This warms up the whole apparatus and the rosin in the charge heater is soon melted. It is then run into the still and the charge heater is refilled ready for the next distillation. The first time a distillation is effected the time required for the proper performance of each of the various operations should be noted. When this has been done the attendant in charge can be furnished with the data, this, together with practical experience of the mixture in the still and the rate at which the liquid distillate leaves the worm, will enable him to manage the process properly.

The beginning of the decomposition is announced by a slight rustling noise inside the still caused by the escape of bubbles of steam through the melted rosin. When the temperature of the resin has risen to about 150°C . a liquid distillate begins to appear. This is turbid and consists of a mixture of various liquids which separate into two layers on standing. As long as the turbid distillate flows the temperature is kept steady, but as soon as the flow ceases, it is further raised quickly to 200° and the receiver is changed. Receptacles must be completely filled with the first distillate and left standing till the separation into two sharp layers is complete. The lower layer is then run out into a special vessel. The upper layer is a mixture of light hydrocarbons and is known as crude pinoline. The lower contains a considerable quantity of acetic acid accompanied by a smaller amount of formic acid and other members of the fatty acid series. By the time the temperature has reached 200°C ., the distillate will flow pretty evenly, and the heat is again kept steady till the flow lessens markedly. The temperature is then

again raised, but this time very gradually, because experience has shown that the more slowly it rises at this stage the larger the yield of rosin oil. The quicker it rises the less oil and the more gas will be produced.

When the temperature has reached about 210° C. the flow of the distillate becomes stronger, the operator then waits till it again slackens before heating further. No definite estimate of the time required before a further heating is needed. It varies with the kind of rosin under treatment, therefore the first distillation of a fresh consignment of rosin must always be carefully superintended to serve as a guide for the subsequent batches.

In this way the temperature is gradually raised by 10° at a time until a heat of from 350° to 360° is attained. It should never exceed 360° . It is true that by using higher temperatures a little more oil can be obtained, but there is imminent risk of coking the pitch in the still. It would then adhere strongly to the steam coil, which is the hottest part of the apparatus, where being a bad conductor of heat it would practically destroy the heating power of the coil and render it imperative to stop work, open the still, and clear the coke off the pipe. If, however, the temperature of 360° is not exceeded, the pitch in the still remains a mobile liquid which runs freely from the cock. When the pitch is discharged the pitch-cock is shut, and the still is refilled with the melted rosin in the charge heater. The valve for this should be large so that the still is quickly filled. When the still is completely recharged, but not before, steam is carefully admitted to the coil and the distillation is soon in full swing, the apparatus not having cooled from the previous operation.

In a properly appointed factory, the distillation apparatus is always in duplicate, the work being so managed that one distillation begins just as the other finishes, so that one man can look after the two stills, while another looks after the rectification, for which one still is sufficient. The products obtained in the crude distillation may be regarded as finished products, but as we shall see, it is now the almost universal practice to rectify the oil, the larger factories rectifying their own products.

THE YIELD OF CRUDE PRODUCTS IN ROSIN DISTILLATION.

The amount of the products obtained depends mainly upon two factors, the nature of the rosin, and the way in which the distillation is conducted. As regards the rosin two lots of commercial rosin are never exactly alike. Some on the market is so contaminated with earth and stones that it gives a decidedly low yield of distillation products. It also happens, but less commonly, that the turpentine has not been thoroughly extracted from the rosin at the place of production. Such rosin may yield appreciable quantities of turpentine oil at the commencement of the distillation. This is to the advantage of the rosin oil distiller, as oil of turpentine is a valuable product.

Hence to obtain reliable data of the yield we must confine ourselves to rosin free from mechanical impurities. It is therefore advisable to add to the distilling apparatus one for melting and filtering the rosin.

The way in which the distillation is carried out has great influence both on the amount and on the nature of the products. If the rosin is rapidly brought to a very high temperature, we get far more gas than when the temperature is raised gradually, with intervals during which it is kept constant. It is therefore essential to bring the temperature at the beginning of the distillation to about 120° C., and keep it there as long as the distillate flows freely. At this temperature the liquid always contains acetic acid together with water and can be used for the production of that acid. When the flow has nearly ceased, but not before, the temperature is raised to 160° C. and kept at that till the flow again nearly ceases. The temperature is then again raised, and the process is continued step by step, keeping each successive temperature steady as long as it yields a fair amount of liquid distillate. Finally, when a temperature of 360° has been reached, the distillation may be regarded as finished, nothing remaining in the still but melted pitch.

Although the various oils in the first distillate must be separated, by a subsequent rectification, care has to be taken during the first distillation to change the receiver every time the temperature is raised. In this way a good deal of separation of the oils is effected and the rectification is greatly assisted. This affords a strong reason for effecting the distillation with super-

heated steam, as in that way only can the temperature be regulated accurately enough to get the successive elevations at the proper intervals. How great is the influence of various methods of distillation upon the yield, is shown by the following examples of actual results obtained by various manufacturers. Five hundred pounds of American rosin gave :—

	No. 1.	No. 2.
Light resin oil and acid water	45 lb.	50 lb.
Heavy resin oil (crude distillate)	375 "	380 "
Pitch	35 "	40 "
Gases	5 "	? "

That these results are valueless appears from the circumstance that No. 2 gives 470 lb., i.e. 30 lb. less than the original rosin.

Somewhat nearer the truth are the results next to be given. Two hundred pounds of rosin gave :—

Pinoline	6.2 lb.
Resin oil	170.2 "
Coke	7.8 "
Water and acetic acid	5.0 "
Gas and loss	10.8 "
	<hr/>
	200 lb.

Even these results, however, appear of little value, for the yield of pinoline, i.e. that part of the distillate having a specific gravity below 0.9, is strikingly small, being only 3.1 per cent of the total rosin. The fact that the residue is given as coke and not pitch, together with the figures for gas and loss, show that the distillation was improperly conducted. The contents of the still must have been rapidly brought to a high temperature, so high in fact that the pitch was decomposed and coked, and large quantities of gas were formed. The following results were obtained with the apparatus of Kramer and Flammer from 10,000 lb. of rosin in round numbers :—

Light rosin oil (rosin essence)	300 lb.
Pale yellow rosin oil	5000 "
Blue rosin oil	1700 "
Green rosin oil	1500 "

The most accurate data we possess of the yield of the various distillation products are, however, those obtained by the chemist

Thenius. He gives the following average yields in percentage of the weight of rosin used:—

Acid water	5.7
Light crude rosin oil	11.4 (specific gravity 0.89)
Heavy „ „ „	50.0 (blue with specific gravity 0.93)
So-called train oil	10.4 (specific gravity 0.94)
Pitch	18.5
Gases	4.0

If the distillation apparatus permits the greatest possible uniformity in heating the whole mass of rosin, the quantities of the various products are entirely different, much larger quantities of pinoline (camphene) being obtained, and this must be regarded as a better result, seeing that the light oils are more valuable than the heavy ones.

It is well known that the resins are very bad conductors of heat, so that it is very difficult to heat large quantities of rosin in a uniform manner. In using a naked fire, the rosin next the sides of the still may be fully decomposed, when the innermost portions of the mass have hardly begun to yield any distillate. By far the easiest way of heating the rosin uniformly through and through is to use superheated steam, so that distillation by its aid is the only really rational method.

CHAPTER VII.

THE NATURE OF THE CRUDE PRODUCTS.

IN factories with primitive plant, in which the distillation of the resin was carried out over a naked fire, no attention was paid to the separation of the various oils according to their boiling points and specific gravities, all of them, light and heavy alike, being collected in the same receiver. The separation was effected solely after the first distillation.

In this way a distillate was obtained varying in colour from a pale yellow to a dark brown. Experience has shown that the age of the rosin when it is distilled has a notable influence on the colour of the distillate. Old dark rosin always gives a darker oil than pale soft resin. When plant of more modern construction is used which effects some separation, if only partial, of the various oils, during the course of the first distillation the light oil comes over first. This in its crude state is pale or dark yellow. The heavy oils which follow are brown. As the distillation proceeds, the oils come over darker and darker and finally attain a very dark brown indeed.

All the crude distillates show fluorescence. The light oils have a bluish shimmer, but the heavy oils show a strong blue shimmer. The fluorescence of the last distillates shows a distinctly green shade. If crude rosin oil is kept where air has access to it, even to a limited extent, the whole liquid assumes a deep blue colour, and is then a special article of commerce known as "blue oil". Some makers also distinguish the oils which show a more or less pronounced green or brownish-olive hue, as "green oil" or "train oil".

Together with the liquid products, the distillation gives a large quantity of gas, which when lighted burns with a very bright light, far exceeding coal gas in illuminating power. Hence rosin

gas can be used very advantageously either for lighting purposes or as a fuel.

Before the oils proper, a watery distillate comes over which contains a considerable quantity of acetic acid, and in works where it is made on a sufficiently large scale, this is used for the preparation of pure acetic acid, or of the acetates of lime or iron.

When the distillation has been properly conducted, the pitch remains in the still as a thin black liquid, which sets on cooling to a solid mass. If the bottom of the still has been overheated, part or all of the pitch is converted into a shiny black coke, much resembling ordinary coke produced from coal. This rosin coke makes excellent fuel.

THE CHEMICAL CONSTITUENTS OF ROSIN OIL.

Rosin oil has a very complicated chemical composition. Although many chemists have worked at it, we cannot as yet consider that the subject has been thoroughly investigated. All rosin oils consist of hydrocarbons belonging to the family of terpenes and also of smaller quantities of ternary compounds of the nature of aldehydes. The best investigated of all the rosin oils are the "light oils," or "rosin essence," and the work has been chiefly done by Pelletier and Walter. These chemists purified the rosin essence of commerce with sulphuric acid and caustic potash lye, and then fractionally distilled the product they obtained with careful observations of the boiling points. By this method they prepared the following constituents of light rosin oil in a pure state:—

Rosin-naphtha or *Retin-naphtha*.—This is a colourless mobile liquid darkened neither by air nor by light. It has a pleasant smell, a high refractive index, and will dissolve easily in alcohol, but not in water. It also dissolves in ether and in essential and fatty oils. It has a spicy burning taste and a specific gravity of 0.86. It boils at about 108° C. It is an isomer of toluol, having the formula C_7H_8 .

Retinyl (*Rosin Oil*).—This is obtained in the fractional distillation of resin essence when the temperature has risen to 150° C., the boiling point of the liquid. It is colourless, but less mobile than resin-naphtha. It has a specific gravity of 0.89, a bitter acid taste, and is an isomer of cumol (C_9H_{12}).

Retinol (Rosin Train Oil).—This comes over at 240° and has a specific gravity of 0.9. It is a clear colourless liquid darkened by light. It has neither smell nor taste and is remarkable for its great solvent power for sulphur. Its formula is C_8H_8 .

Resisterene (Rosin-tallow).—This consists of the distillation products of resin which come over between 250° and 350° . At ordinary temperature it is a solid crystalline substance, fusing at 67° and boiling at 325° . It is soluble in ether, absolute alcohol, essential oils, and liquid hydrocarbons.

As in rectifying rosin oils on a large scale lime or other alkalies are much used to free the products from acid, various chemists have investigated the behaviour of rosin when it is distilled, not by itself but mixed with lime. In one investigation by Fremy the rosin was mixed with eight times its weight of lime, this proportion being chosen to discover the action of the alkali upon the rosin. In practice the amount of lime used is of course much smaller, so that less of the products to be now mentioned will be obtained in the distillate.

In distilling rosin with lime, we get, together with small quantities of several other bodies, mainly two substances, which are of technical interest:—

Resinon and Resineon.—Resinon is a very mobile colourless liquid with a sharp burning taste. It is very inflammable and boils at $78^{\circ}C$. Resineon boils at 148° , is less mobile than resinon, has a less pungent taste, and is less soluble in spirit. It is certain that quantities of these two bodies are always present in rosin oils which have been rectified with lime.

Later researches by Renard and Berthelot on the constitution of rosin oil led them to infer that it is a mixture of three hydrocarbons only. They say that the portion boiling between 300° and $360^{\circ}C$. consists of two of these, diterebenthylene ($C_{20}H_{28}$) and didecene ($C_{20}H_{30}$). The third hydrocarbon is called diterebenthyl and forms the largest part of the oil. Its formula is $C_{20}H_{30}$, it boils between 343° and 346° , has a specific gravity of 0.9688, and is an oily colourless liquid. According to Renard, the average composition of rosin oil is:—

Diterebenthyl $C_{10}H_{15}$	Boiling point 333° to $336^{\circ}C$.	80 per cent.
Diterebenthylene $C_{10}H_{14}$	" 345° " $350^{\circ}C$.	10 "
Didecene $C_{20}H_{30}$	" 330° " $335^{\circ}C$.	10 "

CHAPTER VIII.

THE RECTIFICATION OF ROSIN OIL.

IF the distillation is so conducted that all the products are collected in the same receiver, a separation afterwards by rectification of the light and heavy oils is indispensable. If the distilling apparatus could be arranged for fractional distillation this separation could be effected without further treatment, but with the very large quantities of rosin that are treated, this is scarcely possible, so that the fractionation must be done by means of a subsequent rectification.

The rectification can, however, be greatly simplified by collecting the first products of the crude distillates separately in two portions. Several lots of each of these will give enough liquid for one rectification. If the final distillates are also collected in two separate portions according to the temperatures at which they came over, the rectification can be carried out in a very complete and simple manner. In many factories the rectification is still performed in a very primitive way. The foreman judges of the progress of the distillation simply by the appearance of the distillate without giving any attention either to its boiling point or to its specific gravity. It is easy to see that a sharp separation of light, medium and heavy oils cannot be secured in such a manner. Both boiling point and specific gravity must be attended to in accurate fractionation and hence a thermometer must be put into the still and a hydrometer into the receiver. In working up the first portions of the crude distillate, which consist for the most part of the light oils, we observe that the thermometer after rising to a certain point remains stationary for a time, during which the hydrometer shows a constant specific gravity of the distillate. Presently, however, the stream from the worm slackens and finally stops altogether. This shows that all the light oils have come over and that heavy oils only remain in the still.

These are removed and distilled with the second portion of the crude distillate.

If the light oils contain water they froth very much during rectification and may boil over even if only two-thirds full. The remedy is, of course, to separate the water as far as possible before rectifying. This is done by collecting a large quantity of the first crude distillate and allowing it to stand before rectification until all the oils have risen to the surface and perfectly clear water can be drawn off from below them. The water drawn off will be opalescent as long as the separation is not complete.

In distilling the light oils it is advisable to keep the receiver unchanged while the distillate shows a specific gravity below 0.891 or 0.895 at the most. When the hydrometer shows that this specific gravity has been reached the receiver is changed, because the next portion of distillate belongs to the heavy oils. The small quantities of light oils that have not yet come over are recovered in the rectification of the heavy oils.

Heavy oils are collected while the specific gravity is rising from 0.895 to 0.935. Between these limits are obtained what may be called "heavy blue oils". The temperature is about 280° C., and the distillate has a full wine-yellow colour, is opalescent and shows a blue fluorescence at the edges. The heavy oils with a greater specific gravity than 0.935 are brownish opalescent, and have a greenish fluorescence at the edges. Their average specific gravity is 0.940 and they are known by the name of brown rosin oil or train oil.

If a still heated by superheated steam is used the following are the average yields of the various products in percentage of the raw oil :—

Raw light rosin oil	11.25 to 12
Raw heavy blue rosin oil	49 „ 50.5
Raw brown rosin oil	10.25 „ 10.65
Pitch	18 „ 19
Water and acetic acid	5.5 „ 5.8

THE PURIFICATION OF ROSIN OIL.

The foregoing remarks are concerned with the separation from one another of the three chief products of the distillation without freeing them from the small quantities of other substances which they contain, and which although small in quantity cling to them

with great pertinacity. The further purification from these is a chemical and not a distillation process. The impurities consist chiefly of free acids together with small quantities of esters of the acids, so that alkalis are used for the purification, e.g. quicklime or caustic soda. Some processes less employed in actual practice are based on the use of powerful oxidizing agents, such as nitric acid or a mixture of peroxide of lead and hydrochloric acid. Of late sulphuric acid has been extensively utilized in purifying the heavy oils.

Of the two alkalis, lime has the advantage in respect of cost, but caustic soda in respect of convenience, for the lime in removing the impurities forms with some of them difficultly soluble compounds which renders the cleaning of the apparatus troublesome. Caustic soda on the other hand forms (with the impurities) soluble compounds which can be rinsed out without difficulty. Besides, the progress of chemical industries has now resulted in caustic soda being so cheap that for our purpose the excess cost over quicklime is really of little importance compared with the superior advantages which it confers. In purifying light rosin oils, it is a great point to obtain a colourless product, for such only are suitable for illuminating purposes.

THE PURIFICATION OF PINOLINE OR CAMPHENE.

Pinoline or camphene is the commercial name of light rosin oil which has been purified till it is colourless. Before petroleum had attained its present pre-eminence as a fuel for lamps, pinoline was a far more important substance than it now is, for it was the only liquid which would give a pure white light without smoke. Even at the present time for the uses to which it is put it must still be brought to a high state of purity.

To purify pinoline with caustic soda about 2 lb. of the solid hydrate are required for every 100 lb. of the oil, this being used dissolved in about $2\frac{1}{2}$ gallons of water. The oil is run into a vessel provided with a stirrer and when the latter has been set going the soda lye is run in in a thin stream. As soon as all the lye is in the stirrer is stopped, and after settling, the oil is run into the still and quickly heated till the first drops of distillate appear. The heat is then regulated so that the distillate comes over in only a thin stream. It often happens that at the begin-

ning of the distillation a little liquid of a pale yellow colour comes over, this being repeated towards the end. These first and last distillates are therefore collected separately to be re-purified later. The intermediate portions are colourless, have an agreeable smell, and consist of pure pinoline. The purity of pinoline is generally judged by its behaviour when shaken up in a bottle. The air should not thicken it or turn it brown. It should also burn in a good petroleum lamp with a bright flame without smoke and leave no residue on the wick.

Pinoline was formerly purified with a mixture of caustic lime and carbonate of soda, which form caustic soda and carbonate of lime during the process. The latter being insoluble gave great trouble in cleaning out the still. The old method was to put into the still 100 gallons of water containing 20 lb. of carbonate of soda in solution. A hundred pounds of quicklime were then put in for 100 gallons of the crude light oil. The boiling attending distillation mixed the liquids. It is easy to see that this process gives more trouble than the use of caustic soda, and in large factories it is almost entirely abandoned.

THE PURIFICATION OF THE HEAVY ROSIN OILS.

The care to be bestowed upon the purification of the heavy oils depends upon the use for which they are intended. The purification consists in deodorization, in the removal of free acid, and in the destruction of the substances which cause the fluorescence. A first-class product must be of a pale yellow colour and have neither fluorescence nor smell. Such is the degree of purification required for a lubricant, for it is only such an oil that is without action on the metals with which it comes into contact in machinery.

Much heavy oil, however, is used for cart grease. Here the fluorescence and smell are not of great importance, so that the purification can be confined to the removal of acid. The same applies to heavy rosin oils intended for the manufacture of lamp-black or of printer's ink.

All the purification processes then include a destruction or neutralization of any free acid present, combined if necessary with the removal of the fluorescence and of the odorous impurities. The chemicals used can be classed into two groups, mineral acids

and caustic alkalis. Proper use of either will secure the result desired, but if caustic alkalis are used the by-products accompanying the purified oil are of value, whereby their use is to be preferred to that of mineral acid on financial grounds. We shall proceed to describe the most important of the many methods which have been devised, with the prefatory remark that many new processes have been boomed as important improvements when the changes were simply made for the sake of novelty.

THE HERRBURGER PURIFICATION METHOD.

This process although rather expensive gives a perfectly colourless oil quite free from smell and fluorescence, and hence as regards the quality of the product, answers every requirement. To produce this highly purified oil we must confine ourselves to the second, third and fourth fractions of the rosin distillate, and as the purification is easier the less the distillate has been exposed to the air, it should follow the distillation as closely as convenient. If this cannot be done the oil must be kept in full air-tight vessels during the interval.

The oil to be purified is heated by a steam coil in a wooden vat provided with a stirrer. With continual stirring the temperature is gradually and steadily raised to 43° C. When this point is reached 5 lb. of nitric acid of 1.2 specific gravity to every 100 lb. of oil is run in in a thin stream. When all the acid has been stirred in the rouser is stopped, and the mass is left at rest for five to six hours. During this time the acid oxidizes the impurities which form a tarry sediment. To ensure complete settlement the oil must be kept fluid by maintaining a temperature of about 40° C. during the precipitation. The sediment is then withdrawn by a cock at the bottom of the vat. The oil remaining in the vat is washed again and again, each time by stirring it up in about a fifth of its bulk of hot water, until after standing the water can be run off quite colourless. The separated oil is then rectified with 2 per cent of its weight of caustic soda lye of 25° B. which removes the last traces of acid. On distilling this mixture of washed oil and caustic soda we get first a dark yellow distillate having a powerful odour. This is collected separately and mixed with some crude oil for another rectification. There follows a pure distillate and at the end of the distillation we get a little more yellow oil. The smell of this last fraction

is, however, very slight and can be removed by exposure to the air for a few days. To get the greatest possible amount of colourless distillate, the distillation must proceed very slowly and the condensation must be thoroughly efficient. Unless these two conditions are fulfilled none of the distillate is ever really colourless.

The characteristic feature of Herrburger's process is the use of nitric acid. This powerful oxidizing agent nitrates the phenolic substances in the rosin oil, forming bodies soluble in water, especially in hot water, so that the above described rinsing of the oil removes them entirely. The tarry sediment consists of the products of the action of the acid upon other impurities whose nature is as yet but imperfectly understood.

THE KRAMER AND FLAMMER PURIFICATION METHOD.

This process consists in treatment with concentrated caustic soda lye followed by passing a strong current of air for a long time through the heated oil. In this way very large quantities of oxygen are brought into contact with the oil at a high temperature exerting upon it an action similar to that produced by the nitric acid in the Herrburger process converting a number of the impurities into tar-like bodies.

According to the patent specification the process is carried out as follows:—

The yellow oil is placed in a vat which contains a steam coil opening freely into the oil. Here the oil is quickly brought to the boil by steam at about three atmospheres pressure. As soon as the boiling temperature is reached, 6 lb. of caustic soda lye of 36° B. are run in for every 100 lb. of oil, and the boiling is continued until a sample of the contents of the vat separates quickly into an oily and a watery layer on standing. This shows that the alkali has completely saponified the resin acids originally present. When this saponification is incomplete a sample remains turbid and dark brown for a very long time.

The contents are now left to stand till the oil has formed a clear layer above the solution of rosin soap. The latter is then run off and replaced by water, the volume of which is equal to one quarter of that of the oil. Boiling is then resumed and kept up till a sample separates quickly on cooling. The water is then

run off and mixed with the soap solution previously withdrawn for further manipulation.

The oil is now transferred to a vat with a false bottom and a steam coil. Here the oil is heated as quickly as possible to 60° or 80° C., at the same time a blast of air is blown through it in a number of fine streams, by means of an injector. After the blowing has lasted for three hours, the temperature is raised to 100° C. and the blast is increased. The resulting oxidation further raises the temperature to 110° or even 115° C., the end of the process being indicated when the temperature ceases to rise.

This process gives an oil quite free from acid and from fluorescence. The smell is, however, not entirely removed, although it becomes very slight.

The rosin-soap solution obtained as above described can be mixed with other soap in the course of manufacture, or can be used for making resinic acid by the following process:—

A stream of carbonic acid is passed through the solution until it ceases to be absorbed. The solution soon becomes turbid with resinic acid liberated by the carbon dioxide from the soap. The precipitated clots of resinic acid are collected and distilled with the next lot of rosin, while the solution from which they are removed and which consists simply of carbonate of soda, can be used for the preparation of caustic soda by means of quicklime.

THE W. KELBE PURIFICATION METHOD.

This process differs from that of Kramer and Flammer in that no aeration of the oil follows the treatment with caustic soda lye; Kelbe uses 16 litres of caustic soda lye of specific gravity 1.115 for every 100 kilograms of raw oil and heats to a temperature of 120° C. This quantity of lye cannot, however, be regarded as an invariable quantity. Some crude oils will need more, others less. The chief aim of the process, as is the case with all those in which caustic soda is used, is the saponification of the resin acids in the crude oil, and as their amount varies, the amount of lye required will vary in proportion.

There are certain practical tests for ascertaining whether sufficient caustic soda lye has been used. If a sample is dark brown after long boiling and quickly separates into two layers on standing, a clear pale oil-layer above with a dark brown soap solution below, exactly the right amount of lye has been used.

If solid matter is seen floating in the brown soap solution, too little water is present to dissolve all the soap. In this case, if some hot water is added the solid flakes will disappear.

According to Kelbe it is of special importance to keep the temperature strictly between certain limits. During the time subsequent to the half-hour's boiling of the oil with the lye, the temperature must not fall below 50° , or rise above 65° . Below 50° the oil is thick, and is therefore unable to rise quickly enough above the soap solution. If the temperature exceeds 65° the dark coloured soap solution imparts some of its colouring matter to the oil.

After repeated treatment with water the oil is put into large flat pans in which it is kept at a temperature of 60° to 80° C. for a few days. Water and volatile oils then escape from it by evaporation. At the same time the fluorescent bodies are wholly destroyed, and the major portion of the odorous bodies also disappears, leaving a pale yellow oil almost entirely destitute of smell. It is easy to see that the lengthy heating of the oil in shallow vessels evaporates some substances and oxidizes others just as the air blast does in the Kramer-Flammer process.

THE HOFFMAN PURIFICATION METHOD.

This purification process is based upon the fact that fuming sulphuric acid destroys the impurities in the crude oil. Hoffman gives the following directions. Heat 200 lb. of the oil in a pan till it is of a thin consistency. Then remove the pan from the fire and drop into it, with continual stirring, 3 lb. of fuming sulphuric acid. Continue stirring for half an hour after the acid is all in, then allow the mixture to stand for twelve hours. At the expiration of this time the clear oil is ladled off from the sediment and washed with hot water till the water ceases to acquire an acid reaction to blue litmus paper. This treatment with fuming sulphuric acid gives an oil of a rather dark yellow, and having a slight smell, but no fluorescence. To obtain the oil pale and entirely without odour, a second treatment must be resorted to which may be regarded as an oxidation and bleaching process.

Every 100 lb. of oil is shaken with 1 lb. of water in a glass flask, and then treated with 8 lb. of hydrochloric acid previously diluted with 1 gallon of water. The acid is gradually stirred

into the oil. There are next added 1 lb. of red lead and 5 lb. more of the dilute acid. The whole mass is repeatedly shaken up in the flask during several days. The oil is then decanted from the precipitate and washed with water till the wash water has no acid reaction. The oil is finally exposed for a week in white glass flasks to the full rays of the sun. It is said that the final production is a very pale yellow oil, which answers excellently as a lubricant when mixed with half its volume of a fatty oil.

The various processes for rosin oil purification just described certainly all produce a non-fluorescent acid-free oil with very little smell, but the cost of carrying them out varies considerably. That of Hoffman is the most expensive of all, for it requires a considerable quantity of chemicals, and even then a special bleaching of the oil by light is required to render it sufficiently pale.

It is scarcely necessary to say that the best process for purifying rosin oil is not one that gives worthless by-products, or such as are only available as fuel at the best, but one which enables the impurities removed from the oil to be used.

According to our experience the best method is that in which the purification is effected with caustic soda lye, for the considerable quantity of resin acid occurring in all crude oils forms rosin soap with the soda. The soap can be recovered either by evaporation of the solutions and can be used by the rosin factory, or sold to soap boilers for admixture with common soaps. But as caustic soda alone will not give a product of sufficient purity the treatment with the alkali must be followed not only by washing but by a further purification. As this is always done by oxidation, it can be effected either by nitric acid or with the aid of heat by a blast of air maintained for a sufficient time.

In whatever manner the oil has been purified it retains in most cases a pale yellow colour. To get rid of this, as well as of the last traces of smell, it is much to be recommended that the oil should be exposed to the sun in large glass flasks (the glass must be white) for a time varying with the strength of the sunlight. As a rule about two weeks' exposure is sufficient, the final result being the purest product that can be obtained from rosin distillates. The flasks must be quite full and stoppered air-tight.

DISTILLATION OF ROSIN WITH ALKALIS.

If rosin is distilled dry by itself, together with the rosin oils and gases, a considerable quantity of acid passes over with the oil and dissolves in it; this must be separated from it by one of the previously described methods:

There is, however, a special method of distillation which prevents any acid coming over with the distillate keeping it back in the still. This method consists in using alkali in the still along with the rosin; all the acids then combine with the alkali as they are formed and are converted into soap-like products. For this purpose two alkalis are available, caustic lime (quicklime) and caustic soda. The former has the advantage of being the cheaper of the two, the latter of forming utilizable soluble salts with the resin acid. If quicklime is used, the only way of separating the acid from the lime soap is to boil it with dilute sulphuric acid, when the lime is precipitated as sulphate, and the liberated resinic acid collects in clots which float about in the liquid. These clots can be distilled with a charge of rosin. It is much simpler, however, to distil with caustic soda. A rather strong solution of the alkali in water is made and put along with the rosin into the still. The distillate is then free from acid from the beginning, the rosin-soda-soap solution can be easily removed, and either concentrated by further evaporation or be used as an addition to an ordinary soap. This production of rosin soap in the still necessarily diminishes the yield of crude oil, but that obtained is much easier to purify, besides which the rosin soap remaining in the still is a very valuable product. Calculation has shown that rosin distillation with caustic soda is more economical than distillation alone. It must not be forgotten that caustic soda is used in the purification of the crude oil, and that the quantity of the refined oil is necessarily smaller than that of the crude distillate.

The amount of quicklime or caustic soda to be used for a given quantity of rosin depends upon the origin and the age of the latter. As a rule, however, from 6 to 9 per cent on the weight of the rosin, of either, is sufficient.

THE MANUFACTURE OF COD OIL.

The oil known as cod oil, or train oil, is made in a special way, somewhat resembling the distillation of rosin with caustic

soda. The name cod oil is used because the oil has a consistency resembling that of genuine cod-liver oil, so much so that it is used for the adulteration of the latter.

Cod oil is made from the blue oils of rosin distillation in the following manner:—

The blue oils are boiled with water for twenty-four hours, the water being renewed as it evaporates. The water is then run off and the necessary amount of caustic soda lye of 37° B. is added to the oil. The resulting saponification of the free resin acid produces a buttery, nearly solid mass, which is distilled as long as it continues to yield a liquid distillate. The second cod oil thus made is placed in an iron vessel, having on the bottom a layer of powdered plaster of Paris. The plaster frees the oil from water, the result being a first quality cod oil.

Cod oils are rather yellow in colour, but are almost always the palest of all the rosin oils. They should exhibit nothing more than a very faint bluish fluorescence. Cod oil differs from the other kinds of rosin oil, also in its strikingly high boiling point. While the boiling point of the ordinary heavy oils is in the neighbourhood of 200° C., cod oils boil at 230° to 240° . Most of the samples we have tested boiled at 235° .

THE GENERAL PROPERTIES OF ROSIN OILS.

The products put upon the market as rosin oils show considerable differences in properties according to the extent to which they have been refined. They are liquids, and being more or less thick, flow in a manner recalling very old linseed oil. Their colour is usually yellow or orange-yellow, but is sometimes a pure red.

Near the surface of rosin oil when examined in a glass, blue fluorescence is almost always observed, although it may be only very slight. The smell of a properly prepared rosin oil is pleasant, its specific gravity should not be below 0.96 or above 0.99, and the boiling point should not vary much from 200° C. When strongly cooled, rosin oil does not change greatly in consistency, this property being very favourable to its use as a lubricant, for the change in temperature between summer and winter makes very little difference in the consistency of a rosin oil lubricant.

Very highly purified rosin oil has no trace of acid reaction and is unaltered by exposure to the air, i.e. does not resinify. By treatment with twice its volume of strong alcohol, rosin oil is dissolved, usually to the extent of from 50 to 70 per cent. The properties mentioned above in this paragraph apply, however, to very carefully purified oils. Ordinary commercial oil has generally a fairly strong acid reaction, and easily absorbs considerable amounts of oxygen when exposed in thin layers to the air. By so doing it thickens sometimes so much that it will scarcely flow. Hence rosin oil in its behaviour to air greatly resembles ordinary drying oils, and for that reason can replace them to some extent in varnish making. On account of its affinity for oxygen, and the thickening it undergoes by this absorption, rosin oil cannot be used by itself as a lubricant, as the resinification of the oil would make it very difficult to clean the machinery. The researches of Bach show the great absorptive power of rosin oil for oxygen. According to him, 1 gramme of ordinary rosin oil absorbs no less than 181 c.c. of oxygen, and 1 gramme of cod oil of specific gravity 0.963 absorbs 76.3 c.c. of oxygen. Compared with these numbers the amount of oxygen absorbed by petroleum is very small, being only 0.45 to 0.7 c.c. per gramme of oil.

Rosin oil has, however, practically ceased to be used as a lubricant for machinery, having been replaced by the heavy petroleum oils which answer the purpose admirably. The low price of petroleum has also led to products being put on the market as rosin oil, which contain only 60 to 70 per cent of that substance, the rest consisting of heavy petroleum oils. Unfortunately, too, rosin oil is a very favourite adulterant of fatty oils, especially linseed oil and rape oil, and the finer kinds of seal and fish oil are also falsified with rosin oil. It has already been mentioned that some rosin oils are known as train oil from their outward resemblance to fish oil.

The chief use of rosin oil is unquestionably in the manufacture of cart grease, for making special kinds of paint, and for the production of the finest kind of lamp-black, such as is used for preparing art printing inks. To a lesser extent rosin oil is used for making brewers' pitch, and a low quality as an ingredient in sealing wax for bottles.

ROSIN OIL VARNISHES.

The great absorptive power for oxygen possessed by rosin oil, and its power of thickening, has led to attempts being made to substitute it for drying fatty oils, such as, for instance, linseed, in the manufacture of varnishes. In one sense advantage is to be secured by so doing, as rosin oil is very much cheaper than linseed oil. The method adopted is analogous to that followed with linseed oil. As is well known linseed oil is made into a drying oil by heating it for a considerable time with certain substances known as driers. These were formerly exclusively lead compounds, especially litharge and red lead, and occasionally sugar of lead. Experience has shown, however, that although the products obtained left nothing to be desired in respect of rapid drying, they had the drawback of darkening very much in colour when exposed to the air. This effect is produced by the sulphuretted hydrogen in the atmosphere, which gradually converts the lead in the oil into black sulphide of lead.

To prevent this darkening of the oil and varnishes made with it, other driers are now employed which are not so affected; the chief of these being manganous borate and linoleate.

According to various published recipes a good resin oil varnish can be made by dissolving melted rosin in hot rosin oil, adding driers (preferably manganous borate) and continuing the heat till the proper consistency is obtained. Some makers say also that a very good varnish is obtained by adding certain sulphur compounds in addition.

A recipe including no sulphur (the object of which certainly seems doubtful from a chemical point of view) is as follows:—

Colophony from pine-rosin	100 lb.
Thin rosin oil	60 "
Boiled linseed oil	40 "
Pinoline	100 "
Oil of turpentine	80 "

The ingredients are mixed in the following manner: The boiled oil is made rather hot, and the colophony, first broken into small pieces, is dissolved in it by stirring. The temperature is then allowed to fall a little, the rosin oil is next added, then the pinoline, and finally the turpentine. After thorough mixing, the whole is allowed to stand and settle, and is lastly filtered through a cloth. As regards the pinoline, it seems advisable to add it only when no other use can be found for it, or if it is

cheaper than oil of turpentine. If these conditions do not hold it is best to replace the pinoline by as much turpentine as may be necessary. Pinoline is inflammable and very volatile, therefore its use is accompanied by considerable risk of fire. It may easily happen in making a varnish with it by artificial light that the liquid may be accidentally ignited.

It is true that the use of the pine-rosin colophony results in the varnish being made much cheaper, but it has also its disadvantages. Experience has proved that rosin oil varnishes containing such a proportion of pine-rosin colophony as mentioned in the recipe soon lose their beautiful lustre, and when they are exposed alternately to wet and to the rays of the sun, as when the varnish is used for garden seats, wooden fencing, etc., soon turn dull and whitish. To produce a varnish free from these drawbacks it is therefore advisable to use much smaller quantities of the colophony than directed. If instead of 100 lb., 25 to 50 lb. are taken, a varnish is obtained which has the above disadvantage in a less marked degree.

To prepare rosin oil varnishes, which are really comparable to fatty oil varnishes in appearance and durability, it is essential that the pine colophony should be replaced entirely or almost entirely by a resinate. As we shall subsequently see, the resinates have the property of forming very thick solutions, which, on evaporation of the solvent, form hard lustrous coats offering very great resistance to the weather. The best resinates to use are those of alumina and zinc.

Still cheaper rosin oil varnishes can be made by partly converting the pine-rosin colophony into resinate of lime, and using this instead of the pure colophony. For preparing this the pine-rosin colophony is melted and heated till it begins to emit heavy fumes, whereupon quicklime in very fine powder is stirred into it. The lime readily unites with the resin acid of the colophony, but care must be taken that no excess of lime is left in the mass. When resinate of lime is used the varnish is prepared as follows: The rosin oil and linseed oil are first heated together and then the resinate of lime is carefully stirred in until a sample of the mass is rather thick after quick cooling. The oil of turpentine is then added, and if the varnish is not then thin enough rosin oil is added in small portions with heating until the cold varnish has the proper consistency.

CHAPTER IX.

THE MANUFACTURE OF PATENT LUBRICANTS.

THE names patent lubricant and patent cart grease are applied to special compositions which have now nearly superseded other lubricants for ordinary vehicles on the market. The chief superiority of the former lies in their cheapness, as they cost much less than lubricants containing ordinary fats or soaps. They have, however, another valuable property not possessed by fatty lubricants. They are practically unaffected by changes of temperature. It is often necessary to use at least two kinds of fat lubricant, one in the winter and the other in the summer. The patent lubricants can be used unchanged all the year round.

The fundamental ingredient of every patent lubricant is what may be called a lime-rosin-oil soap. This may be termed patent soap for convenience.

If an attempt is made to saponify rosin oil with caustic soda or potash, it will be found that even the strongest lyes have very little action upon it. At the utmost $1\frac{1}{4}$ per cent of the oil is saponified. If this soap is decomposed with an acid, a semi-solid brown substance having a strong resinous smell is formed, which greatly resembles the acid of the rosin from which the oil was made.

Rosin oil behaves very differently with the alkaline earths. On boiling rosin oil with quicklime the latter gradually dissolves, forming a mass of about the consistency of butter. This is dark brown in colour and can be mixed with more rosin oil, so as to possess any desired degree of thickness. This mass is the patent soap. Chemically, however, it does not show the properties of a soap. It is probably a solid solution of lime-rosin soap with hydrocarbons.

In making the patent soap on a large scale, the first consideration is to procure the proper kind of lime. Many limestones contain carbonate of magnesia, the lime burnt from them conse-

quently containing magnesia. Such lime is quite unsuitable for patent soap making. The lime used must be pure. This is easily tested by slaking it. Pure lime rapidly absorbs large quantities of water, soon breaks up, evolves much heat and forms a very soft powder. If there is much magnesia in the lime it slakes on the other hand very slowly, and evolves but little heat. Pure slaked lime is called fat lime, because when mixed with water it can be spread like butter, a property of which magnesian lime is entirely destitute, so that it is called thin.

A pure lime having been procured, the first process is to slake it. The lime is spread upon a floor free from sand and dust, and a weight of water equal to half that of the lime is scattered over it from a rose, this gradual sprinkling being continued uniformly over all the lime till it has completely fallen into a fine dry powder. Care must be taken to use no more water than is absolutely necessary to produce this result, as the slaked lime must show no visible sign of the presence of water.

As even the very best limes may contain grains of sand, the powder thus obtained must be sifted through a fine sieve to separate them. Slaked lime absorbs carbonic acid from the air with avidity; to prevent it from doing so it must be casked as soon as made and sifted, and closed up so that the air is kept from contact with it.

To make the patent soap, a large iron pan is required, provided with a stirrer. The rosin oil is put into this and heated nearly to boiling over an open fire. Then 80 lb. of slaked lime for every 100 of oil is added, stirring it in a little at a time, waiting after each addition till the white streaks at first formed disappear. After the lime is all in, the heating and stirring are still kept up till the contents of the pan form a tough syrupy mass, which can be drawn out into long threads by dipping in a spatula. The process must not be regarded as complete before a sample of the mass painted thinly on glass shows a perfectly uniform yellow or brownish appearance, without the least trace of white specks of undissolved lime. Such specks must not appear even under a magnifying glass.

The finished patent soap will keep fit for use for an indefinite time, but as it must be heated to convert it into a lubricant, it is a saving of fuel to work it up as soon as made and while it is still hot, so that it has simply to be ladled into another pan.

An enormous number of recipes for making patent cart greases are available, the products usually being distinguished by their colour, as, for instance, yellow, blue, green, brown, and black greases. The compositions are also put upon the market under various names. Whatever kind of cart grease is to be made from the patent soap, the process must be carried out in a special shallow pan with vertical sides and slightly convex bottom, so that the pan is shallowest in the middle. The pan contains a stirrer with two vertical blades which come close to the bottom, and also close to the sides. The blades are perforated with a large number of circular holes. The pans are put into an oven in such a way that their bottoms are heated all over, but their sides are only partially exposed to the fire.

The colour of the finished grease depends partly on that of the rosin oil employed, but partly also upon added colouring matters. Fillings are also added in many cases to cheapen the product or to increase its consistency, but these are inactive bodies having no lubricating power of their own.

MANUFACTURE OF PATENT BLUE CART GREASE.

To make this favourite grease, gas tar and petroleum are used as well as rosin oil. Both of these are first worked up with lime, and then mixed with blue rosin oil and the patent soap. The process may be described as follows:—

Put into the pan just described 50 lb. of tar oil, and 50 lb. of blue petroleum. Heat and stir in gradually 150 lb. of slaked lime. Make a uniform mixture by continual stirring, as the patent soap must not be added until this is done. About 225 lb. of it are then heated and stirred in in portions, stirring the whole time. There is fixed above the pan a cask containing 200 lb. of heavy blue resin oil, which can be run into the pan through a pipe, having a rose at the end and a cock for regulating the flow. The cock is opened until the oil falls into the mixture in the pan in large drops or very thin streams. The stirring is kept up all the time the blue oil is flowing into the pan. As it does so the contents of the pan become thicker and thicker; it is a question solely of practical experience to be able to judge when the proportions between the various ingredients are correct. The mass must be made so thick that it will not drop from a stick which

has been plunged into it, but adhere as a tough lump. When this point is reached, the behaviour of a sample is observed at the ordinary temperature in a small dish of thin sheet iron. Some of the hot mass is spread out in the dish, the outside of which is then cooled in cold water. If the cold mass has the consistency of soft butter and spreads like it, the process is finished. If, however, the sample appears too solid, like cheese or hard butter, it has been badly made and must be rectified by adding more of some ingredient. The one usually required is the patent soap, which should first be tried by adding to the entire mass 2 or 3 per cent of it. If this does not have the desired effect, blue resin oil must be added with prolonged stirring. When the lubricant is of the proper consistency, the stirrer is stopped, and the mass is scooped out with shallow ladles into the drums in which it is to be sold. A new lot can then be started in the mixing pan.

Experience has amply demonstrated that rosin oils of various origin behave very differently in the manufacture of cart grease, and even rosin oil from the same distillation will act differently according to whether it is fresh or stale. In general, old oil which has been long in stock is better than the freshly distilled product, which almost always yields lubricants which are too soft. If it is found, in spite of every care in the making, that the product is not stiff enough, a little more of the patent soap will put matters right. One per cent of it will often be sufficient to impart the proper buttery consistency.

In large works, the safest plan is to mix the rosin oils from a large number of distillations in one big cistern. The result is a large stock of rosin oil of one quality, and the directions given above will enable anyone without much difficulty to make very large quantities of unexceptionable patent cart grease.

PATENT COLOURED CART GREASE.

The patent blue cart grease owes its colour to being made with strongly fluorescent rosin oil. Greases of any other colour must be artificially dyed. Yellow grease, for example, is dyed with a decoction of curcuma root in soda lye. It is best to prepare the decoction separately, and to put into the mixing pan, at the very beginning of the manufacture, the amount which experience has shown will be required for colouring the batch. No definite

directions as to the quantity can be given, every maker having his own recipe. It is advisable for every one to have a recipe, recording the amounts of ingredients used in getting a good result, and to keep to that recipe thereafter, so that the goods are always turned out exactly the same. Experience has shown that buyers are guided chiefly by the colour, a property which has no influence on the lubricating value of the material, and therefore care must be taken that successive batches of product are always identical in this respect. We now proceed to give instructions for making the yellow and black greases.

PATENT YELLOW CART GREASE.

This is usually made from a mixture of the two patent soaps, I and II, which are put, together with boiled heavy rosin oil, into the mixing pan, and gradually mixed with soda lye which has been well boiled with curcuma root broken small. The dye in the root dissolves in the lye, which is then freed from the remainder of the pieces of root by running it through a sieve. The following is an approved recipe for making yellow cart grease :—

Patent soap I	30 lb.
Patent soap II	60 „
Boiled heavy rosin oil	500 „
Caustic soda lye of 16° B.	16 „
Curcuma root	2 „

PATENT BLACK CART GREASE.

There are two different methods of making this product, either by colouring an ordinary patent cart grease with lamp-black, or by using black wood-tar pitch in the manufacture.

In the first case the lamp-black must be perfectly mixed with a portion of the patent soap, and then thoroughly incorporated with the rest. Put into the mixing pan 2 lb. of lamp-black, pour over it 30 lb. of patent soap I. Heat and stir until no separate particles of lamp-black can be seen. Then stir in 15 lb. of patent soap II, and finally 250 lb. of heavy blue boiled rosin oil. The mass is kept warm, and stirred until perfectly uniform. The best test of the completion of the mixing is the appearance of a very thin coat on glass held up to the light. A properly made mass

will then, by transmitted light, appear of a perfectly uniform dark blackish-brown colour.

To make black patent cart grease with black pitch the pitch left in rosin distillation, which still contains a distinct amount of rosin, is employed. First heat together in the mixing pan 25 lb. of patent soap I and 30 lb. of patent soap II. Then heat 50 lb. of pitch in a separate vessel and pour it, together with 200 lb. of heavy rosin oil, into the soaps in the mixing pan, stirring well the whole time to prevent the pitch from going into lumps, and to mix it in uniformly.

MAKING CART GREASE WITH SOLUBLE ROSIN SOAP.

Patent cart grease can be made without lime, an advantage being at the same time secured that some of the rosin oil can be replaced by petroleum, which is cheaper. The first of this class of processes proposed by Dr. Herrburger, has been retained to the present day in all its essential features, although other makers have introduced changes in the details. The following is a process which yields good results: Put into a pan 350 lb. of residue from petroleum refining, such as a crude dark oil, or vaseline in its most impure form, or the thick heavy oil obtained by distilling coal tar. When one of these substances has been made sufficiently fluid by heat, stir in 120 lb. to 130 lb. of crude rosin oil, and finally 212 lb. to 234 lb. of rosin soda soap in powder. As soon as the soda soap is in, stir immediately, as the mass begins to froth very much, and keep stirring until the froth has all disappeared. Then stir in from 50 lb. to 60 lb. of melted rosin, according to the consistency required, and continue stirring until the cooling mass has become too stiff to be stirred.

The rosin soap used must be perfectly dry. The best way to do this is to allow it to dry in small pieces in the air as much as it will, and then to cut it into shavings, which are then thoroughly dried by artificial heat. Then powder the soap and sift the powder.

FILLING OF PATENT CART GREASES.

To cheapen the greases as much as possible, the device is resorted to of filling them, up to 50 per cent of suitable mineral substances being used. It is, however, a mistake to add to the

grease as much as half its weight of such materials. As a rule the percentage should not exceed 20, and in all cases the filling must be perfectly mixed with the lubricant. The chief substances used are levigated clay, powdered barytes, and steatite or soap-stone. Barytes is, however, not to be recommended, and that for two reasons. The first is its great specific gravity, so that even if 20 per cent of it is added, the bulk of the material is not much increased. The second is that the powder is crystalline, and is rather hard, so that however finely it may be ground, the hard particles, so far from lessening friction, increase it materially. Powdered soap-stone is a crypto-crystalline mineral of very low hardness, and having a greasy feel, it is, therefore, a better filling for cart grease than levigated clay, although the latter is cheaper. The filling must be stirred into the cart grease while it is still hot and soft. The best method is to shake the powdered filling through a sieve on to the hot grease, stirring the latter continuously during the addition.

CHAPTER X.

ROSIN SOAPS OR RESINATES.

WHEN an animal or vegetable fat is boiled with caustic soda or potash, the fat is decomposed into glycerine, which mixes with the water present, and fatty acids which combine with the alkali to form salts, which are freely soluble in water and are known in ordinary language as soaps.

Ordinary rosin contains a body having the properties of an acid, so that it dissolves on boiling with the caustic alkali, giving a solution of an alkaline rosinate. As these compounds of rosin acid with alkalis behave in exactly the same way as the corresponding compounds of fatty acids, we may call them soaps by analogy, and they are known as rosin soaps or resinates. Just as among the salts of the fatty acids, only those with soda or potash are soluble in water, so the compounds of rosin acid are soluble only when the alkali is potash or soda. The resinates of metals other than potassium or sodium are quite insoluble. If, therefore, we pour into the solution of a soluble fatty acid or rosin acid soap, one of another salt, a precipitate is formed of the insoluble soap. If, for example, we add a solution of sulphate of zinc, we get a precipitate of zinc rosinate, while the potash or soda remains in solution as sulphate.

The insoluble fatty acid soaps are of no value, except for the preparation of pure fatty acid, but the case is very different with the rosin soaps. The insoluble rosin soaps are extensively used for the preparation of excellent lakes, varnishes, and paints. They constitute also a material which enables us to prepare enamel colours for the decoration of porcelain and stoneware.

Nevertheless the use of the insoluble rosin soaps has been somewhat hampered in industry by the want of recipes which will enable the manufacturer to prepare them in a suitable manner.

MANUFACTURE OF ORDINARY ROSIN SOAP.

Rosinate of soda, which is ordinary rosin soap, is the starting point in the manufacture of the insoluble rosin soaps. As pure rosin soaps, that is, soaps made from rosin and caustic soda without any fat, are not upon the market, the manufacturer must make his own, which he can do in the following manner:—

It would be possible to proceed by boiling the rosin to be saponified in a solution of carbonate of soda. The acids of the rosin expel the carbonic acid from the soda with effervescence, and themselves combine with the alkali, whereby the soap is pro-

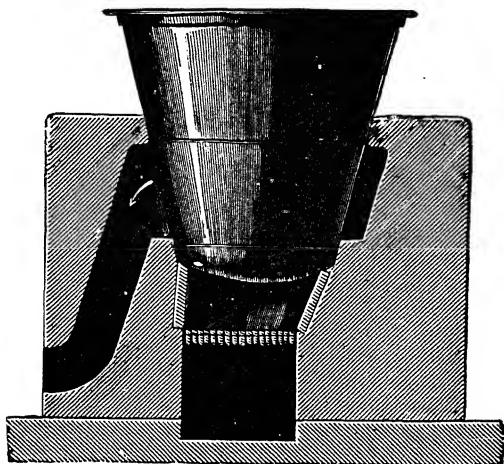


FIG. 25.

duced. The disadvantage of this method, however, is the very long boiling necessary to saponify all the rosin, moreover the rosin clots together in the hot liquid, and as the clots present only a small surface in proportion to their size, they offer considerable resistance to its action.

It is, therefore, better to begin with caustic soda, and to finish the saponification with carbonate of soda after a certain stage has been reached. If we boil even a weak solution of caustic soda with rosin, it is soon observable that the liquid becomes milky, and an examination of a few drops of it with a magnifying glass will show that the rosin is diffused through it in the form of very small drops. Thus the first effect of the

action of the caustic lye is to form an emulsion, for an emulsion consists of an enormous number of minute drops of one liquid suspended in the mass of another. So far there is no saponification, and it is only after long boiling that the rosin dissolves and the liquid becomes clear. If carbonate of soda is added, as soon as the emulsion is formed the immense surface then offered by the rosin causes a vigorous action, accompanied by rapid evolution of carbonic acid. The process is carried out in a large iron pot heated over an open fire, or better by steam.

A pan for heating on an open fire is shown in Fig. 25 together with the fire-place.

In Fig. 26 is shown a plan of the setting of the pan; the arrows

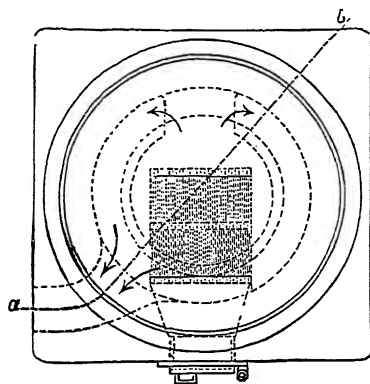


FIG. 26.

showing the direction in which the gases from the fire travel. In working on a large scale, however, it is decidedly better to use a pan heated by steam.

A steam-heated pan for a small factory is shown in Fig. 27. The steam enters the jacket through the hollow bearing on the left, and the tap seen below the jacket serves to drain out the condensed water. The pan is emptied by tilting it with the endless screw and bevel wheel.

A more capacious pan for dealing with larger quantities at a time is shown in Fig. 28. As shown in the figure, it contains a stirrer composed of rods and chains, which is driven from beneath the pan.

The work is begun by putting weak caustic soda lye into the

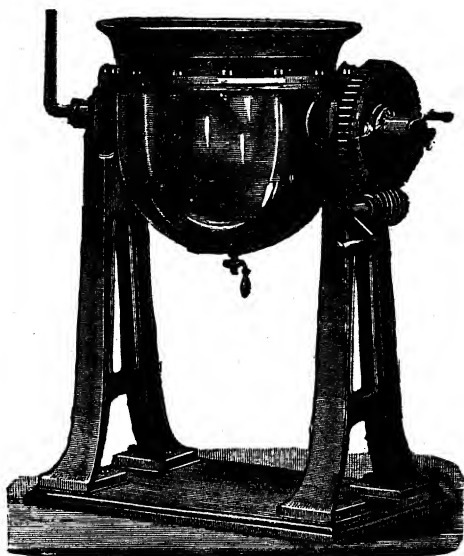


FIG. 27.

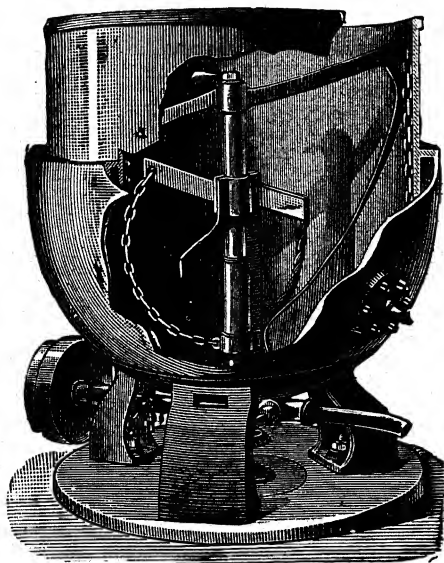


FIG. 28.

pan and setting the stirrer in motion. The rosin, first broken up rather small, is then allowed to fall into the pan in a thin stream. As soon as enough rosin for one operation has been added, the mixture is boiled till a complete emulsion has been formed. Some of the solution of carbonate of soda is then added, and the boiling is continued till the effervescence has nearly ceased. More soda is added and the boiling is continued until the effervescence again stops, and so on, until a sample of the liquid is yellowish and rather thick, like a weak solution of glue. If the liquid is now left at rest a small quantity of melted rosin may settle to the bottom of the pan; if this happens it shows that enough soda has not been used to complete the saponification. It is, however, advisable to leave a little rosin unsaponified, for only by so doing can one ensure that there is no excess of soda in the liquid. The residue of the rosin can be used up in the next batch. As a guide to the amount of alkali required it may, however, be stated that 100 parts of rosin require for complete saponification 17 parts of caustic potash, 12.2 parts of caustic soda, or 16 parts of soda ash.

As soon as saponification has taken place the steam is shut off and the stirrer is stopped. The liquid in the pan is allowed to stand a few hours, in order that the mechanical impurities in the rosin, such as small stones and bits of wood, may sink to the bottom, where they are generally found embedded in the unsaponified rosin. The soap solution is poured into the wooden vat in which it is to be kept through a large closely woven cloth which serves to filter it. The vats are covered with a wooden cover to keep out dust.

When concentrated solution of carbonate of soda has been used, the soap solution when cool is rather thick. It is not diluted until it is required for use.

Pure rosin soap has a yellowish or yellowish-brown colour, in some cases a dark brown, the colour depending upon the kind of rosin used. Pale American rosin yields a fine pale yellow soap.

Rosin soap belongs to the soft soaps, as at ordinary temperatures it has the consistency of soft butter. It dissolves easily in water, the latter when even slightly warm dissolving large quantities of it. It can be used for washing just as it is, but as soft soaps are cheaper than hard ones, most soap-boilers employ rosin soap as an addition to ordinary soda soaps forming the



yellow household soaps. By using the very best material for soap the product is able to be sold at a lower price.

Soap-boilers usually work up various mixtures of tallow, palm oil, and rosin. Good results are obtained, for example, with 600 lb. to 700 lb. of tallow, 50 lb. to 100 lb. of palm oil and 200 lb. to 300 lb. of rosin. The best procedure is to saponify the tallow first, then to add the palm oil and saponify it also. The rosin is treated with alkali in a separate vessel, and the finished rosin soap is added to the mixture of the other two; the mixture is then boiled and crutched till it is clear.

If it is desired to make an insoluble rosin soap, it is obvious that no fat must be used; neither is it necessary to concentrate by boiling. Care must be taken that the soda rosin soap used contains no excess of soda, or it will be unfit for use.

THE INSOLUBLE ROSIN SOAPS.

All insoluble rosin soaps are made by one and the same method. A certain quantity of the rosin soap solution prepared as above described is diluted with water, a salt of the metal of which the rosinate is required is prepared in solution and added to the soap solution. The desired rosinate is then obtained in the form of a curdy precipitate. As it is difficult to take the two substances exactly in the proportion which leaves no excess of either, a test must be made to ascertain which of them is in excess after the precipitation is complete. For this purpose some of the liquid is filtered through paper into a glass, and mixed with a little of the metallic solution. The appearance of a precipitate shows that more metallic salt must be added to complete the precipitation. A little is therefore added, and after careful stirring the test is repeated. When the filtered sample ceases to give a precipitate with the metallic salt it is certain that all the rosin soap has been decomposed. As there may now be an excess of metal in the soluble form, another sample must be filtered and tested with a solution of rosin soap, which will give a precipitate in the presence of an excess of metal. These tests are continued alternately, adding each time what the last test has shown to be necessary, until no precipitate is given, either by the metallic salt or by rosin soap.

The work may be much shortened by determining the specific

gravity of the soap solution as well as that of the metallic salt solution, and in all subsequent operations using solutions of the same specific gravity. The repeated testing of samples will then only be necessary with the first lot of insoluble soap manufactured. Care must be taken to add together all the amounts of rosin soap solution used and all the amounts of metallic salt solution used, for the main mass. In subsequent operations all that need be done is to use the same quantities to be sure that neither substance is in excess. In any case one or two tests at the most will be sufficient to get the proportions exactly right.

Different insoluble metallic rosins have of course different properties. The rosins of lime, magnesia, and alumina are white and when wet are remarkable for being extremely bulky, but become less so when thoroughly dry. In the dry state these three rosins form very light powders. They dissolve readily in essential oils and remain behind in colourless masses when a thin coat of solution is allowed to evaporate into the air. The rosins of the heavy metals show characteristic colours in cases where the oxides of the metals form coloured salts. Ferrous rosinate is usually pale green like ferrous salts in general, and, like them, turns brown by oxidation on exposure to the air. Nickel and copper rosins are darker green, while those of lead, zinc, and bismuth are white.

In the manufacture of rosin lakes and varnishes, as well as paints, the white rosins are most important, as their solutions give colourless masses on drying. The rosins of alumina and zinc are specially suitable on account of their low price, therefore we shall describe the production of these two rosins somewhat more in detail.

ROSINATE OF ALUMINA.

This rosinate is always made from sulphate of alumina, which can be bought very pure and very cheaply. It is largely used by dyers and calico printers as a mordant, and is met with on the market in the form of brick-shaped pieces readily soluble in water. The solution is usually turbid from the presence of small quantities of an insoluble basic salt. There are two ways of obtaining a clear solution. One is to let it stand and decant it from the sediment formed, and the other is to convert the basic salt into the soluble salt. This is done by gradually adding sulphuric

acid, stirring after each addition, taking care to add the acid sufficiently cautiously to avoid any excess. An excess added after the solution has become clear will, on adding to rosin soap, set free rosinic acid which will contaminate the rosinate. The formula of sulphate of alumina is $\text{Al}_2(\text{SO}_4)_3 + 18\text{H}_2\text{O}$ and it contains about 15 per cent of alumina. The following table shows the percentage of pure anhydrous sulphate of alumina and also of commercial sulphate of alumina in solutions having the stated specific gravities at 15° C. :—

SPECIFIC GRAVITY OF SOLUTION.

Percentage.	Pure anhydrous sulphate of alumina.	Commercial sulphate of alumina.
1	1·0170	1·0069
2	1·0270	1·0141
3	1·0370	1·0221
4	1·0470	1·0299
5	1·0569	1·0377
6	1·0670	1·0416
7	1·0768	1·0481
8	1·0870	1·0592
9	1·0968	1·0650
10	1·1071	1·0730
11	1·1171	1·0794
12	1·1270	1·0860
13	1·1369	1·0960
14	1·1467	1·1059
15	1·1574	1·1097
16	1·1668	1·1169
17	1·1770	1·1199
18	1·1876	1·1269
19	1·1971	1·1339
20	1·2074	1·1440
21	1·2168	1·1448
22	1·2274	1·1589
23	1·2375	1·1628
24	1·2473	1·1689
25	1·2572	1·1798

In making the rosinate large vats are used provided with spigots arranged one above another in a vertical line, 4 inches apart. A saturated solution of the sulphate of alumina is made in a small vessel, poured into the big one, and there diluted with water till the density shows that the desired concentration has been reached. It is made as concentrated as possible, consistent with the stirring of the mass after the soap has been added. Over the vat containing the alumina solution another is arranged

with a draw-off cock near its bottom. This is filled with a concentrated solution of rosin soap. When everything is ready the liquid in the large vat is stirred vigorously while the rosin soap is run in from the upper vessel. A very voluminous precipitate is immediately formed consisting of rosinate of alumina, the stirring being continued during the time the soap is running in. When it is supposed that enough soap has been added, a sample is filtered from the lower vat and tested as above described. It must give no precipitate either with a solution of sulphate of alumina or with a solution of rosin soap. When this point has been reached, the stirring is stopped and the liquid allowed to stand. The bulky precipitate settles slowly, and the supernatant liquid clears from above downwards. The liquid is run off as it clears by opening the spigots one after another, beginning at the top. The final residue at the bottom of the vat is a white paste somewhat resembling thick starch.

To separate the rosinate of alumina from the liquid it contains, smaller vats with their bottoms perforated with holes are used. Sacks are fitted accurately into these vats so that the closely woven linen of which they are made lies close against the side. At the upper edge of these sacks a strong string is sewn in for lifting the sacks out of the vats. The paste at the bottom of the precipitating vat is ladled into the sacks till they are quite full, and the liquid present runs out through the holes in the bottom of the vat. When the mass in the sack has shrunk by reason of this, more of the paste is put into it. This is continued till the precipitate in the sack comes up to within 4 inches of the edge of the vat. When the precipitate is completely drained it is washed by pouring clean water into the sack and allowing it to drain again. Three washings with water are performed. The rosinate of alumina is then ready for drying. If there is plenty of time and the weather is warm, the rosinate can be dried by hanging it up in the sacks. The drying can be accelerated by first squeezing the sacks in a press so as to drive out as much water as possible. Great care is needed that the pressure is not too strong or too suddenly applied, otherwise the sack might be burst. It is possible to get the rosinate of alumina into such a condition by pressing, that it can be broken up and spread out on strips of sacking to dry.

Even when it appears completely dried in the air there is still

water adhering to the mass, which must be removed before the rosinate of alumina can be dissolved. The simplest method of completing the drying is to spread the rosinate on strips of sack-
ing arranged one above another in a drying room. The temperature of this room is kept at about 40° C. for a few hours and the dried rosinate is then filled while still warm into tightly closed receptacles, where it remains till it is to be used. This complete drying is of great importance, for otherwise the rosinate will not yield clear solutions, nor will the solutions form coats of the proper lustre when dry.

Pure dry rosinate of alumina is a white friable mass of small specific gravity. It gives a characteristic dry or harsh feeling to the fingers. It dissolves in various solvents, but most easily in essential oils, in which it first swells up to form a jelly and then quickly dissolves. In making varnishes and paint, however, the solvent generally used is rectified oil of turpentine. When the turpentine evaporates on exposure to the air, a colourless, fairly hard mass is left which offers great resistance to atmospheric influences and is therefore a very good substitute for an oil varnish.

ROSINATE OF ZINC.

For making this rosinate the cheapest zinc salt on the market is used. This is zinc sulphate or zinc vitriol. Commercial sulphate of zinc may contain iron, in which case it would not give a colourless lake but would be more or less yellow. It is, however, easy to purify the zinc sulphate in the following manner:—

Add carefully to a solution of the salt a small quantity of caustic soda lye until a white precipitate begins to appear. Then stir the liquid thoroughly. The precipitate will disappear if the zinc sulphate contains much free acid which dissolves the precipitate of hydrated oxide of zinc formed by the caustic soda. It is necessary, therefore, to add the soda until a slight permanent precipitate is produced. In a few days an ochre-yellow sediment will have settled in the bottom, for the oxide of iron in the solution is thrown down by the zinc oxide, which itself redissolves. In this way the zinc salt can be entirely freed from iron and after decanting will give a perfectly white rosin soap.

Zinc rosinate is prepared in an exactly similar manner to that which has just been described for rosinate of alumina. In this

case also the two solutions are used of known specific gravity, so that a single trial will show how much of each solution to take in subsequent operations. The following table shows the connection between the percentage of zinc sulphate in the water and the specific gravity of the solution:—

Percentage of zinc sulphate.	Specific gravity of solution.
5	1·028
10	1·059
15	1·090
20	1·123
25	1·157
30	1·193
35	1·231
40	1·270
45	1·310
50	1·353
55	1·393
60	1·445

As the specific gravity of zinc rosinate is much greater than that of rosinate of alumina the precipitate settles more rapidly to the bottom of the precipitating vat, and the washing of the soap is rendered easier. Pure zinc rosinate appears when dried in rather heavy white pieces which are very easily reduced to a fine powder.

Rosinates can be made with soluble salts of any heavy metal and a solution of rosinate of soda. In this way the rosicates of copper, lead, silver, and tin are prepared, but in varnish making as well as in the preparation of paint little use is made of any but the rosicates of alumina and zinc.

A special use is made of the rosicates of bismuth, iron, and of that of alumina to some extent in ceramics to produce various effects on porcelain or pottery. These rosicates are usually known as enamels or glazes and will be described in a later section of the book.

CHAPTER XI.

THE MANUFACTURE OF RESINATE VARNISHES.

RESINATE varnishes are prepared in a simple manner, by dissolving the rosinates in an appropriate solvent. The best solvent to employ, because it dissolves the rosinates more easily, is rectified oil of turpentine. The solubility of rosinates in turpentine is so great that it is possible to make solutions of every degree of consistency from that of water to that of a fairly thick syrup.

Solutions of rosinates of alumina are pale to dark yellow according to the concentration, while those of zinc rosinates are rather brown.

As it is necessary to use perfectly clear solutions, it appears most convenient to dissolve the rosinates in large glass vessels in which the solutions are kept till they have become perfectly clear. The rosinates are put into the flask, which must be quite dry, in pieces about the size of a hazel nut until the flask is about one-third full. Enough turpentine is then put in to quite cover the pieces and the flask is corked and allowed to stand for a few hours. At first the rosinates swell considerably, passing into a gelatinous mass. The action is accelerated by frequently shaking the flask, and when the gelatinization is complete more turpentine is added, a little at a time, until a solution of the desired consistency is obtained, when it can be used as it is for a varnish or can be mixed with pigments to make a paint. It is necessary in order not to make the solution too thin to add the turpentine with great care. As soon as the proper quantity of turpentine is in, the solution is shaken up once thoroughly and the flask is put in a place where it will not be disturbed so that the solution may clarify. It may then be decanted quite clear from the sediment at the bottom.

The preliminary gelatinization of the rosinates renders solution at the ordinary temperature rather a slow process, and care must be taken to keep the jelly as loose as possible by constantly

shaking the flask. As this is rather troublesome in working on a large scale, it is advisable to somewhat modify the process, and to effect the solution by the aid of heat. This is best done in the following manner:—

The rosinate to be dissolved is put into a large iron pot well tinned inside. This pot is put into another and the space is filled with water. This water is boiled by passing steam into it, after as much turpentine has been poured over the rosinate as will completely cover it. The rosinate and turpentine are stirred with a broad paddle until they have reached the temperature of the boiling water. The rosinate runs down as a thick mass of the appearance and consistency of honey from the paddle, and when this is the case the additional turpentine is added until the thoroughly stirred mass runs from the paddle in a continuous stream. Small samples are then taken which are painted on to a sheet of glass so as to rapidly cool to the ordinary temperature. The cold mass rapidly assumes an appearance much resembling that of set glue. When this is the case it is a sign that more turpentine must be added, and this must be continued until a cold sample has the consistency of good boiled oil. This shows that the proper amount of turpentine has been added. The solution in the pot is then allowed to cool and poured out into large glass flasks in which it is left to clarify. The sediment of undissolved particles clings with some tenacity to the bottom of the flask so that it is very easy to decant the pure liquid.

The amount of turpentine oil required to make a solution of any given consistency varies greatly with the nature of the rosinate. Zinc rosinate dissolves much more easily than alumina rosinate. Twenty-two gallons of oil of turpentine are sufficient to give a thin solution with 1 cwt. of zinc rosinate, while the same quantity of alumina rosinate requires three times as much turpentine, and even then forms no proper solution but a thick buttery mass. The latter is, therefore, the rosinate to be preferred on economic grounds both for the preparation of varnishes and of mixed paints.

To obtain fine lustrous and durable varnishes from solutions of rosicates it is advisable to use the solution rather thin, and to apply a second coat as soon as the first is dry. The resistance of these rosinate varnishes to atmospheric influences is very great, long exposure to the continuous action of air, sun, and rain leaving

the lustre of the varnish unaltered. These varnishes also offer great resistance to the action of chemicals. Frequent washing of a varnished object with soap and water affects the lustre only very slightly and the coats resist solutions of carbonate of soda or potash even better than they do soap; but fairly concentrated solutions of caustic soda or potash attack the varnish rather strongly, decomposing the rosinate with separation of alumina or zinc oxide while the alkali combines with the rosin acid forming a soap soluble in water.

It is safe to assert, however, that as regards resistance to atmospheric influences and the action of chemicals, the rosinate varnishes are quite equal to the best oil varnishes, at the same time they have the advantage of being very much cheaper.

RESINATE PAINTS.

The solutions of rosinate in oil of turpentine prepared by one of the previously described processes can be mixed with various powdered pigments to produce bodies which can be used as paint after the addition of a suitable amount of turpentine.

The paints are made by pouring over the perfectly dry fine powder of the pigment enough solution of rosinate to form a paste, thin enough to be worked up in an ordinary colour mill. The first passage through the mill usually renders the mass somewhat stiffer so that a little more rosinate solution must be added to it. The mass is returned to the mill often enough to produce a perfectly uniform paint, and the number of times this has to be done depends upon the fineness of the powdered pigment. The best way of finding when the proper point has been reached, is to take a small sample and paint it thinly on glass. If no separate pigment particles can be seen, and if the colour is perfectly uniform, the process may be regarded as complete. The sample coat must lose its turpentine rapidly by evaporation and show when quite dry a smooth and lustrous surface.

There is another simple method of preparing rosinate paints by which it is possible to obtain a large amount of saleable goods in a short time. The pigment used is reduced to fine powder as well as the rosinate. The powders must be very carefully dried, for even a very small amount of moisture has a bad effect upon the properties of the paint, especially upon its lustre. The two

powders must be most thoroughly mixed in the proper proportions. This is best done by putting them into a rotating cask which is slowly turned until the mixture is complete. The time required for this can be determined only by experiment, so that from time to time the rotation of the cask is stopped, a sample of the powder is taken out and rubbed up with a spatula with a little oil of turpentine. If the mixing is complete it will form a thick paste even with a very small quantity of turpentine, and will with a little more turpentine form a mass of the consistency of a thick oil colour which works well with the brush. A sample painted on a board must rapidly dry to a lustrous coat and cover the wood completely. When the sample shows that the proper point has been arrived at the powder is taken out of the cask and thinned with turpentine till it will go through the colour mill. As the particles of rosinate are uniformly distributed through the whole mass, they are rapidly dissolved by the turpentine and a paint fit for use can generally be obtained after twice passing through the colour mill.

It is advisable to use no more turpentine than is necessary to make a very stiff paste, for the latter can always be diluted at will before use. If enough turpentine is added at first to make the mass of the proper consistency with which to paint, the pigment will not be properly ground in and the larger part of the solvent will separate out in the drums in which the paint is stocked. We then find in the lower part of the drum a thick mass which it is very difficult to mix again with the liquid portion. This appearance is especially common when the pigment mixed with the rosinate has a high specific gravity, as, for example, lead pigments.

In painting with rosinate paints it may often be noticed that a short time after drying the coats become traversed with a large number of minute cracks and flake off in places. This is a sign that too much rosinate in proportion to the pigment has been taken. On the evaporation of the oil of turpentine the rosinate shrinks considerably, and thereby cracks the layer of paint. It is therefore necessary to make preliminary experiments with every pigment in order to decide the proportion most suitable to be mixed with the rosinate in order to get a paint which will not crack on drying. Full security, however, against the cracking of the paint is afforded if, in addition to the oil of turpentine, a

very small amount of rosin oil or of drying linseed oil prepared in the cold with borate of manganese is used, for these bodies remain liquid after the evaporation of the turpentine, drying later by resinification. The paint certainly dries somewhat more slowly, but it retains a certain amount of elasticity so that no cracking occurs on cooling. Hence no cracking takes place either in the paint or in the varnish, and both retain their lustre completely.

The quantities of rosin oil or boiled oil to be used for this purpose are always very small, and, as a rule, an amount equivalent to 5 per cent of the turpentine oil used is sufficient. The rosin oil or boiled oil is added at the same time as the oil of turpentine, in order that all the liquid may be uniformly distributed through the entire paint. As finished paints soon thicken in the air from the evaporation of the turpentine they must be enclosed at once in air-tight drums.

Paintings executed with these paints have a smooth shining appearance, in this respect surpassing ordinary paints made with pigments and boiled oil. To secure the durability of the lustre, it is a good plan as soon as the rosinate paints are perfectly dry to give an extra coat of dilute varnish. As the mass in which the particles of pigment are embedded and that which results from the drying of the extra coat with pure varnish are entirely identical, they adhere firmly together and no cracking takes place either in the paint or in the varnish over it. In the case of paintings executed with boiled oil paints and varnished over with a fatty oil varnish fine hair cracks invariably appear in time no matter how fine a varnish has been used. Hence the varnish loses its lustre. These hair cracks result from unequal expansion and contraction, changes of temperature acting differently on the paint and on the varnish. As we have already remarked, the mass containing the pigment is in the case of rosinate paints the same as that constituting the varnish, so that both expand equally on heating and contract equally, therefore no cracking occurs.

ENAMELS.

The preparations known by this name in ceramics consist of the rosicates of various heavy metals prepared by the method already described. Some enamels, however, have nothing in

common with these but the name, and usually consist of solutions or preparations of metallic salts from which the metal or oxide is easily set free, so that by their means very beautiful and extremely thin layers of metal or metallic silicates are produced upon porcelain, stoneware or glass.

Briefly the preparation of the commoner enamels are described in the following paragraphs.

ALUMINA ENAMEL.

This kind of enamel produces when applied to a white ground of porcelain or finely glazed earthenware an optical effect resembling mother-of-pearl. This enamel is prepared by dissolving ordinary rosinate of alumina in oil of turpentine or other essential oil and painting the solution upon the earthenware with a brush. It must be remembered that the effect of the enamel varies very greatly with the concentration of the solution used, solutions of different strength leaving on the earthenware coats of different thickness. Hence to get any given effect we must determine by previous experiments the particular concentration of solution required. When the solvent has evaporated the rosinate can be fixed by a gentle firing.

BISMUTH ENAMEL.

This enamel is used in porcelain painting as a flux for the purpose of fixing other enamels or to dilute them and make their colour paler. Used by itself it produces scarcely any effect.

Bismuth enamel is prepared by dissolving bismuth in concentrated nitric acid under a chimney with a good draft, which will carry away the large quantity of unwholesome fumes produced. When the metal is all dissolved, the solution is allowed to stand for a time to deposit any insoluble residue. The clear solution is then decanted into clean water. The water should have four or five hundred times the bulk of the bismuth solution. Contact between the two liquids forms basic nitrate of bismuth, which forms a dazzling white precipitate, which gradually sinks to the bottom of the water. When all the precipitate is perfectly settled, the water containing a very dilute solution of neutral nitrate of bismuth is decanted away and the residue washed with several lots of water. The precipitate is then dried and is known as bismuth white.

The recipe for making flux from the bismuth white is as follows :—

Bismuth white	10 lb.
Rosin	30 „
Oil of turpentine or lavender	75 „

The rosin is put into a large porcelain basin and melted on a sand bath. The bismuth white is then added to it a little at a time, and thoroughly amalgamated by careful stirring. The mass toughens and becomes brown. It is then diluted with a little of the oil. More bismuth white is then stirred in, this being repeated until all the materials are amalgamated, and when the mixture is complete the whole mass is stirred until cold.

Bismuth lustre or flux is often used to lighten the shade of coloured enamels.

For example, iron enamel used alone gives an orange-red which can be made pale at will by mixing it with flux. The same is true for all other coloured enamels.

LEAD ENAMEL.

For second rate porcelain goods and ordinary pottery, lead enamel is used instead of bismuth enamel, being much cheaper. Lead enamel is made in an exactly similar manner to bismuth enamel, nitrate of lead being used in the recipe instead of the basic nitrate of bismuth.

IRON ENAMEL.

This enamel is made in various ways. In one method a solution of perchloride of iron (ferric chloride) in water is added to a solution of rosin soap until no further formation of precipitate occurs. The precipitate is then filtered off, washed with water and dried. Dried iron enamel is a reddish-brown solid. The second process is to melt together equal weights of rosin and turpentine and then to stir in nitrate of iron equal in amount to the rosin. The mass is stirred with constant heating until it is perfectly uniform. Used by itself iron enamel gives an orange-red, which can be toned down to any extent by an admixture of flux.

URANIUM ENAMEL.

This enamel is made like iron enamel except that nitrate of uranium is used instead of nitrate of iron. By itself uranium

enamel gives a warm nankeen yellow, but when diluted with flux it gives any tint from a deep to a pale straw-yellow.

CHROMIUM ENAMEL.

A solution of bichromate of potash in water, to which a little sulphuric acid has been added, is warmed, and spirit of wine added a little at a time. The solution froths up strongly and its beautiful red colour changes to violet. When the solution is cold it is precipitated with a solution of rosin soap. The precipitate is washed and dried on porous plates. This enamel gives a beautiful green.

CADMIUM ENAMEL.

This is made by precipitating a solution of rosin soap with one of sulphate of cadmium. Used alone it gives a beautiful mother-of-pearl lustre, while when mixed with enamels of other colours it imparts to them the same quality.

COBALT ENAMEL.

This is made like iron enamel, substituting nitrate of cobalt for the nitrate of iron.

METAL ENAMELS.

The so-called metal enamels differ from those just described in consisting of very thin layers of pure metal, which on the opaque ground show their full lustre and their characteristic colour. The chief of these are gold enamel and platinum enamel, both of which are used to a fairly large extent in ceramics.

PLATINUM ENAMEL.

Thin platinum foil is cut up into very small pieces and put into a mixture of nitric acid with one-third of its bulk of hydrochloric acid. This liquid, called *aqua regia*, dissolves the platinum slowly. The solution is evaporated at a gentle heat in a porcelain dish, but without boiling until a solid reddish-brown residue is left. This residue consisting of tetrachloride of platinum is dissolved in strong spirit. To produce platinum enamel on porcelain a little of this solution is mixed with oil of lavender and applied with a brush. When the porcelain has been fired the painted

places appear covered with a shining white coating of metallic platinum.

GOLD ENAMEL.

To prepare this enamel either thin sheet gold or gold wire is used. The metal is dissolved in *aqua regia* in the same way as the platinum. On careful evaporation a reddish-brown mass remains, consisting of trichloride of gold. This is dissolved in spirit and the solution is painted on the places to be gilt; the thickness of the gilding being in proportion to the concentration of the gold solution used. Fairly thick gilding can be polished to a high degree of lustre with agate or polishing steel. The more dilute the spirituous solution is, the thinner is the gilding, but it always forms upon an opaque surface a completely continuous lustrous coating. With extremely dilute solutions the layer of gold is so thin that it transmits a green light, but it still shows its characteristic yellow lustre by reflected light. Gilding as thin as that just described is of course very easily rubbed off leaving no trace behind, while the thicker coats which have been polished are so durable that even when the object has been in use for years the gilding remains entirely unaltered.

ROSINATE PIGMENTS PROPER.

The rosinate paints described in a previous section, consist as we have said of various powdered pigments mixed with a solution of rosinate of alumina or zinc. On evaporation of the oil of turpentine the lustrous coat of rosinate in which the coloured powder is embedded remains behind.

There are, however, rosinate pigments proper which differ from those already described in being composed of metallic rosinate and basic coal-tar dyes. They possess all the beautiful hues belonging to those dyes.

The basic coal-tar dyes are a collection of dyes frequently called aniline dyes, which have the property of combining with acids. It is very easy to find whether a commercial coal-tar dye belongs to the basic or to the acid group. All that is required is to add a little solution of tannin to a solution of the dye in a test tube. If the tannin produces a precipitate the dye is a basic one and can be used for the preparation of rosinate pigments.

If, on the other hand, there is no precipitate the dye belongs to the acid group and is useless for our purpose.

As examples of basic dyes available for making rosinate pigments may be mentioned fuchsine, methyl-violet, brilliant green, auramine, saffranine, etc. Even this limited selection shows what a great variety of rosinate pigments can be prepared.

The rosinate pigments are made by taking a rather dilute solution of rosin soap in water and pouring into it an aqueous solution of a suitable basic coal-tar dye. The intensity of the pigment produced depending as it does upon the amount of the coal-tar dye, it is necessary, in order to obtain always the same colour, that the rosin in the soap and the dye should be strictly proportional. In other words, we find by experience what colours are obtained when the amount of dye is equivalent to 1, 2, 3 per cent, etc., of the rosin. Having found once for all the colour produced by each of these different proportions we are always in a position to reproduce it. When the rosin soap and the dye solution have been thoroughly mixed, a solution of the metallic salt is poured into them in a thin stream. The salt used is either sulphate of magnesia, alumina or zinc. As the insoluble rosin soap is formed it carries down the dye with it. This precipitation of the dye necessarily renders the liquid paler, the addition of the metallic salt being continued until it becomes entirely colourless. A small excess of metallic salt is, however, not detrimental. As soon as the precipitation is complete, the liquid is allowed to stand in the precipitating vessel until it has cleared. The liquid is then decanted, the precipitate is washed repeatedly with clean water, and finally allowed to dry on a filter cloth in a place protected from dust. In working on a large scale it is advisable to do the washing and drying of the precipitate in a centrifugal machine. The drum of the machine must be provided with a closely woven linen cloth fastened to its sides. The vessel containing the precipitate is placed above the centrifugal which is then set in motion, but not too rapidly, while the precipitate is allowed to run into it. At first the liquid from the centrifugal is strongly coloured, therefore it is collected and put back into the drum. As soon as the layer of pigment on the sides of the drum has attained a certain thickness, nothing passes through the linen but clear liquid. When all the precipitate is in the drum a thin stream of water is allowed to flow upon it. This water rapidly

removes the soluble salts mixed with the precipitate. After a short time the flow of water is stopped and the drum is then set to rotate at its highest speed. The centrifugal force then drives out the water present so completely that the precipitate is converted from a paste into a fairly dry crumbly mass which is lifted out of the drum in the sack and completely dried at a gentle heat.

During the whole process of making these rosinate pigments, care has to be taken not to expose them unnecessarily to light, as they have the remarkable property of gradually losing their solubility in the direct rays of the sun.

The rosinate pigments dissolve in various solvents with considerable ease. Benzol, ether, alcohol or chloroform can be used as solvents. If a solution of a rosinate pigment is required, only thoroughly dried pigments and pure solvents, such as very strong alcohol or rectified benzol, should be used. If a clear solution prepared in this way is painted in a thin coat, the evaporation of the solvent leaves behind a coloured but quite transparent sheet of the rosinate pigment which shows a glassy lustre and a considerable degree of hardness.

In making the rosinate paints, any metallic solution can be used which will give a white precipitate with rosin soap. Hence the most important salts are those of alumina, zinc, magnesia, lead, and tin. Salts which produce colours of their own with rosin, such as salts of iron or copper, are useless for this purpose, as the paints made with them would have a different colour to that of the coal tar colour which has to be fixed. As it is desirable to use the cheapest products possible, zinc or magnesia salts are most suitable for rosinate paints in which no special shade of colour is wanted. The cheapest zinc salt on the market is the sulphate, and among magnesium salts the chloride. Both these salts give rosicates, of almost exactly the same colour, but the powders differ in specific gravity. Rosinate paints made with magnesia are far lighter than those made with zinc. For the same reason too, zinc paints are more easily levigated than magnesia paints as they settle to the bottom of the water much quicker. The use of lead should be avoided for making rosinate paints. All lead paints become discoloured and finally black by exposure to the air, sometimes very quickly, due to the formation of black sulphide of lead by sulphuretted hydrogen in the atmosphere, which commonly occurs in towns.

The same organic dye will give different colours with different rosinated. For example, magenta gives with magnesia a pigment showing the full beauty of the red of the dye, while if tin is used, the paint will be violet. A number of tints can be obtained by mixing the tin paint with the magnesia paint in various proportions.

CHAPTER XII.

THE MANUFACTURE OF LAMP-BLACK AND LAMP-BLACK PIGMENTS.

THERE is only one absolutely black pigment known. All other so-called black bodies are either dark blue or dark brown, but amorphous carbon or lamp-black is really black.

The theory of the conditions leading to the liberation of carbon in an amorphous state from combination are very important to the manufacturer and must therefore be briefly stated. Every organic compound contains carbon, and when burnt by heating in the air, the carbon forms carbonic acid and the hydrogen forms water. If, however, there is not enough oxygen to effect the total conversion, it is, as a rule, only the hydrogen that is completely burnt. Some of the carbon is then usually set free in the solid form as a deep black powder, known as lamp-black, or when impure, as soot. Alcohol contains carbon and hydrogen, and oxygen in addition. When burnt this is completely consumed to carbonic acid and water. Turpentine and petroleum are both hydrocarbons, but contain far more carbon in proportion to the hydrogen than alcohol does. If either of these is ignited in an open dish it burns with a dull yellow flame from which a thick cloud of finely divided carbon arises as smoke. Such combustion is called imperfect. It is, however, possible to burn either petroleum or turpentine completely so as to form nothing but carbonic acid and water. This is what happens in a properly constructed petroleum lamp. Here the wick takes the form of a hollow cylinder so that oxygen comes into contact with the inside as well as the outside of the flame. The chimney strengthens the draught of air through the flame and no soot escapes from the top of the chimney with the gaseous products of combustion. But the combination in these lamps takes place in two sharply marked phases which can be easily recognized by the appearance of the flame. Just above the wick is a blue, barely luminous

flame which consists chiefly of burning hydrogen. The upper part of the flame is luminous, and the better the lamp the whiter it is, and the worse the lamp, i.e. the less the draught, the redder and yellower it is. At first there is an imperfect combustion of the petroleum which burns with liberation of carbon, but the particles of the latter carried up by the rising gases are raised to white heat and then consumed. This short description clearly indicates how a combustible must be burnt to get the greatest possible quantity of its carbon in the form of lamp-black. The substance must be allowed to come into contact with just the requisite quantity of oxygen to keep it alight, but no more, or unnecessary amounts of the carbon will be burnt to carbonic acid. In this case the flame will give more light and heat than before, which must be carefully guarded against.

Any organic body rich in carbon can be used for lamp-black making. The substances chiefly used have for a long time been rosin, turpentine, and the resinous wood of various trees, especially the roots. Later animal and vegetable fats were added to the list, while more recently large quantities of lamp-black have been made from the by-products of petroleum refining and from natural gas. It can also be made from coal-tar pitch. In using these only a small portion of their carbon is burnt, the rest being set free in a finely divided state with some products of dry distillation clinging to them. The presence of these influences the colour of the carbon and imparts to it a greasy feeling. The lamp-black must therefore be subjected to a special process of purification to destroy these bodies. Carbon-black can also be made by a process differing from imperfect combustion, that is, by dry or destructive distillation. If an organic substance rich in carbon is enclosed in a vessel with only a narrow opening and it is heated, it decomposes, forming both liquid and gaseous products containing carbon together with the hydrogen and oxygen of the original substance. The excess of carbon remains behind as an amorphous coal, still containing the mineral substances originally present in the form of organic salts. Among vegetable bodies used in this way, wood must first be mentioned. Wine lees and grape stalks are also used. Among the animal substances employed for the purpose are bones, fragments of horn, and dried blood. To obtain a carbon-black from the resulting products, the mineral substances must be dissolved out from it. The solvents are then rinsed

away with water, and on drying pure amorphous carbon is left which can be used in the same way as smoke-black freed from *its* impurities.

MAKING CARBON-BLACK FROM RESINOUS WOODS.

We place the description of this method of manufacture first because it is unquestionably the oldest of all. Rude and primitive though it is, it is still practised in countries rich in pine trees. The roots of these trees contain a yellow wood which is extremely rich in essential oil, differing little from oil of turpentine, which can easily be extracted by breaking the wood up small. This rational method is, however, not always practised, the

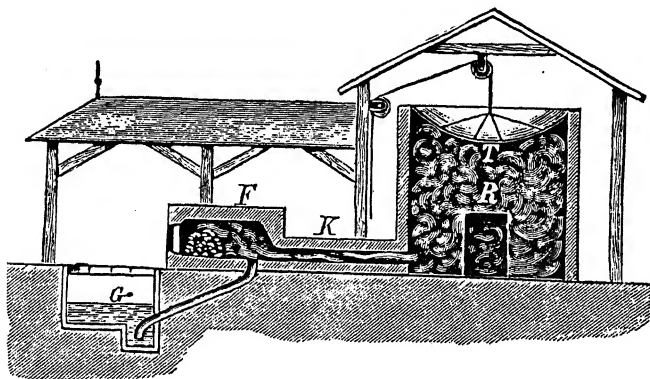


FIG. 29.

people contenting themselves with burning the roots in a limited supply of air, thereby procuring large quantities of impure black, a little wood tar, and an essential oil having a very disagreeable smell from contamination with empyreumatic bodies, the latter being called crude pine oil. A smoke hut, such as can still be seen in many places, is represented in Fig. 29.

It consists of a hut R, the size of an ordinary living room constructed of rough boards. The ceiling of this chamber consists of a coarse fabric which hangs down in great folds about a quarter of the depth of the room. Cords are fixed to various parts of it which are all joined to one which passes over a pulley. On pulling the one cord the cloth is lifted and falls again by its own weight when released. The chamber is usually 16 or 17 feet

square and about 10 feet high. It is covered with a light roof to keep the rain from the ceiling-cloth. A brick tunnel K, about 1 foot square, opens into one side of R. This tunnel is 17 to 20 feet long and slopes gently. It communicates with the brick-work chamber F, which can be closed by an iron door provided with a damper. The chopped-up roots are burnt on the sloping floor nearest to the tunnel. On the door side a narrow channel leads to a well G, which collects the tar and the empyreumatic oil.

The oven F is charged with chopped wood which is set alight. The iron door is then shut and the damper is kept open enough to maintain a thick red flame. The combustion gases carry the soot up the incline of K into R. Here they deposit most of the black on the floor and pass away through the ceiling. This in time gets so choked with soot that the draught is stopped, whereupon the cord is worked to shake the soot down. Only the wood nearest the iron door really burns, the hot combustion gases from it passing through the remainder of the wood which is thereby subjected to a kind of dry distillation, giving up its essential oil and a part of the tar which flows into the ditch G. It is of the highest importance to keep the flame in the oven just right. If it becomes too strong from an excess of draught, the soot accumulated in the tunnel and the chamber R may be ignited, the result would almost certainly be that the whole place would be burnt to the ground. The soot in R being very finely divided and mixed with empyreumatic bodies is very inflammable and would at once be ignited by contact with a burning substance. Hence the entry of the flame into the chamber might have disastrous consequences in addition to contaminating the lamp-black with ashes. The lamp-black must not be removed from the chamber R till the oven is quite cold, the fire having been extinguished by completely shutting the damper. A narrow door in the side of R is then opened and the lamp-black is taken out with a wide flat wooden shovel. No trouble is taken to clear the black out very thoroughly as small scrapings are blown about and lost. The appearance of the black removed will at once show whether the draught has been properly managed. Laid upon white paper it should appear a pure black and streaks of it must not show a brown except just at the ends. If the air has been deficient the black is distinctly brownish, is greasy and makes a brown mark if rubbed on the paper. In this case the tempera-

ture has been too low, quantities of tarry matter having escaped decomposition. Although in this case the black is less valuable than the pure product its formation is not regarded as a fault by the soot burners who are aware of the fact that in this case the yield is greater than when the pure substance is obtained. The brown product can be purified subsequently.

A large amount of the lamp-black is used just as it leaves the

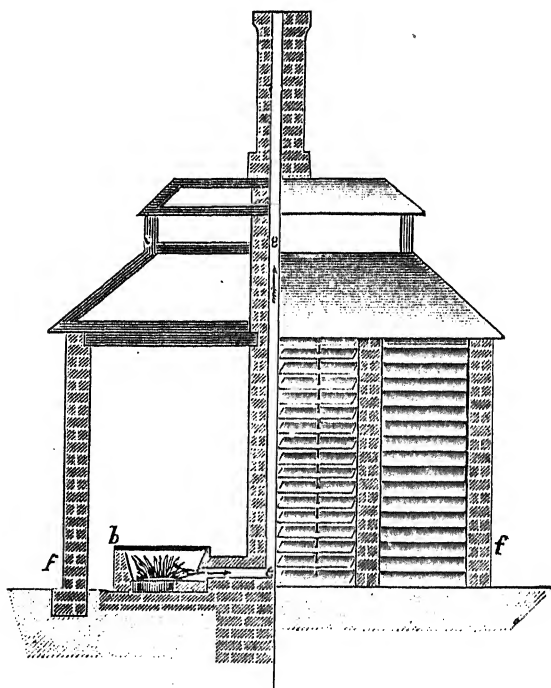


FIG. 30.

soot chamber for purposes where cheapness is the great desideratum, such as making grey washes with milk of lime, or very cheap paints with rosin oil, or printer's ink which need not be absolutely black. All the products so made, however, have the disadvantage of slow drying on account of the tarry impurities in the lamp-black. If a newspaper is printed with one of these cheap inks, it smudges when folded, "sets off" and dirties the hand. Attempts have been made to improve the primitive con-

struction above described by making the sides of the building like Venetian blinds. Such a modification is shown in Fig. 30.

Here there are two chambers with a common chimney in the centre. The oven and other parts are constructed as above described. The slates of the sides are used to regulate the draught, but this cannot be done perfectly, the contrivance losing more black than the old arrangement with a linen ceiling.

PURIFICATION OF LAMP-BLACK.

To free the crude lamp-black from tarry matter it is made red hot whereby the tars are either decomposed with the formation of more lamp-black or they are volatilized. Simple as this operation may appear it must be executed with certain precautions, otherwise some of the lamp-black will be converted into shiny hard crusts instead of a dead-black powder. These crusts require to be ground and levigated before their carbon is fit for use.

The ignition, which is sometimes wrongly called calcination, is best done in tubes of very thick iron plate, having their outsides protected from the fire by a plaster of loam, water, and chopped straw. This coating has to be renewed from time to time. The iron tube is closed entirely at one end, while at the other it is covered with a cap having a small opening in the centre. The tubes used have a diameter of from 6 to 8 inches and a length of from 4 to 5 feet. They are placed horizontally in an oven which is traversed by strong iron bars, such as old railway metal, so that several rows of tubes can be arranged at different heights. The tubes must be so placed that the openings in the caps are outside the furnace and can be observed. The crude black is shaken loosely into the tubes until they are full except the last 2 inches. The caps are then put on and the joints carefully luted with loam, so that the tube is air-tight except for the hole in the lid. It is important that the black should be loose in the tubes, to enable the gases developed by the heat to escape freely. When the oven is filled with tubes the fire is lighted. When the lower layer of tubes has been at a bright red heat for about two hours the fire is increased until the upmost row is red hot. The tubes are then taken out, the holes in the caps are stopped with loam, and the tubes are left to cool thoroughly. If the tubes are opened before they are cold the finely-divided carbon will begin to glow

the moment it comes into contact with the air by condensing the oxygen from it and will soon break into flame. Cold lamp-black will not ignite spontaneously on exposure to the air. To keep the lamp-black from again becoming impure it should be packed the moment it is taken out of the tubes. The best method of packing it is in tin-plate canisters with well-fitting lids, and of such sizes that they hold 1, 2, or 3 kilograms of lamp-black. When the canisters are filled and closed the lids are sealed by gumming on strips of paper.

When the tubes become red hot, a stream of gas will be found to be issuing from the small holes in the caps, which will burn with a bright flame. The gas increases in volume for a time, but finally disappears. It is produced from the tarry bodies in the lamp-black which are either volatilized or decomposed with liberation of solid carbon.

The extinction of the flame is a sign that all the tarry matters are destroyed, hence that the operation is concluded, and the tubes can be removed from the fire. Properly purified lamp-black when removed from the cold tubes must be perfectly black and without lustre. It must, when rubbed down on a sheet of paper, give a dead-black without greasing the paper. If the mark is brown the tubes have not been heated sufficiently to destroy all the impurities present.

In purifying the lamp-black the temperature must be raised to a red heat gradually. If the heating is too quick, the sudden evolution of gas may blow off the caps of the tubes, whereupon the contents will burn. Even although this may not happen, the too rapid heating would cause the formation of the above-mentioned shiny crusts which require grinding and levigation to make the carbon serviceable. Properly ignited lamp-black can be used in the manufacture even of the finest printing inks.

CHAPTER XIII.

LAMP-BLACK CHAMBERS.

It is easy to see that the description already given refers to a chamber of very primitive construction, which requires little art to convert it to one which is more suitable for the purpose. On watching one of these primitive arrangements in action it is easy to see that there is always a fairly thick black cloud hanging over the ceiling-cloth. This consists of combustion gases together with the finest of the carbon particles swept by the gases through the meshes of the cloth. Hence the best and finest particles are lost, only the coarser ones collecting in the chamber, being too heavy for the gases to sweep away.

It is, however, possible with a proper arrangement to separate the lamp-black so thoroughly from the combustion gases that only very small quantities are lost; at the same time an automatic sorting of the carbon into coarser and finer particles takes place. The essential point in such an erection is to make the combustion gases travel a considerable distance before they can escape. The cooling and friction which they then undergo so lessens their speed that they deposit the particles of carbon, the coarser at a distance from their place of exit and the finest nearer to it.

In order that the process may be carried on uninterruptedly on a large scale, the lamp-black chambers are in duplicate, each one capable of being put into communication with the chimney separately. It is then possible to be making lamp-black in one half of the plant while it is being collected from the other.

Lamp-black chambers have been so constructed that the combustion gases with the carbon particles floating in them are compelled to pass through a vaulted brick tunnel, and through an opening at the end of that into a second tunnel running parallel with the first, so that the gases travel in the second in the reverse direction to that which they took in the first. This may be re-


peated with a third and a fourth tunnel before the gases reach the chimney. If each tunnel is 11 yards long and there are four of them the gases have to travel in all 44 yards. The last tunnel receives the finest lamp-black.

In constructing this apparatus it is essential to line the tunnels with good smooth bricks and to point the courses well, in order that the lamp-black can easily be brushed off the sides. Before the plant is used it must be heated for a considerable time to dry it completely. This is done by passing through it hot air and gases from a furnace until the outside of the tunnels is distinctly warm. If this precaution is neglected the lamp-black produced will be worthless for a long time. The heat of the gases will evaporate the moisture out of the walls and it will again condense in part upon the particles of lamp-black, so that instead of a dry loose powder the product will be a smeary black clinging mass which will have to be dried and ground before it can find a market. It is easy to see that the plant described costs money and can only be recommended for working on an unusually large scale; a plant which will yield 2 cwt. and more of lamp-black every twenty-four hours can be erected in a much cheaper way.

For the purpose of burning the raw material for lamp-black, a brick building is erected about 11 yards wide, 11 to 13 yards long, and 10 feet high. The interior is plastered smoothly inside with ordinary mortar and divided by a brick wall longitudinally into two chambers, each 11 to 13 yards long and about 16 feet wide. At the end opposite the hearth is the chimney which can be connected with each of the two chambers in turn. The height of the chimney must be at least 11 yards, and on the top of it there must be a damper to be presently described for regulating the draught.

Figs. 31 and 32 show the arrangement: Fig. 32 in ground plan, and Fig. 31 a vertical section. Both the chambers are divided into compartments by walls parallel to the width of the chambers and about 40 inches apart. It will be clearly seen from the figures that the combustion gases entering at F and F₁ must work their way round these inner walls, so that they travel 60 to 70 yards in each chamber before they escape into the chimney. The inner walls subdividing each chamber should be of iron plate, preferably galvanized except those near the

chimney, which may be of wood planed smooth. It is sufficient to have the first two or three in each chamber of metal to prevent any risk of ignition by the heat of the combustion gases. Each chamber is provided with two doors, one close behind the other. The outer door is an ordinary wooden one, which should, how-

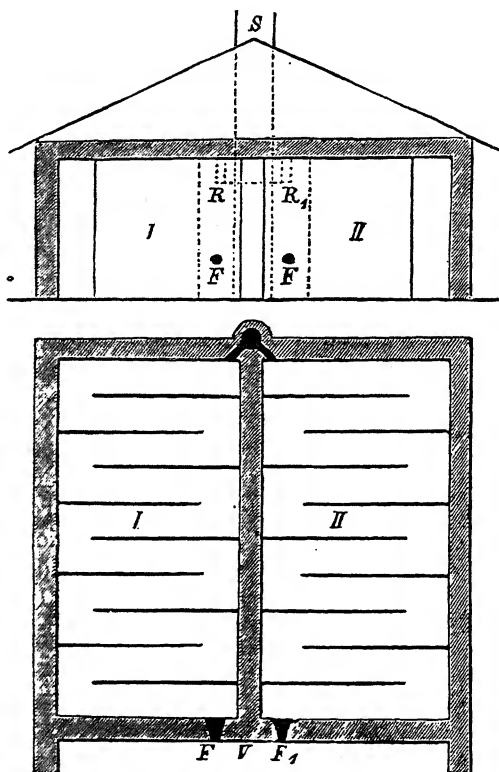

FIGS. 31 AND 32.

ever, be lined with sheet iron as a protection against fire. The inner door is of wood and lined with thick felt where it meets the door-post to make the door shut as air-tight as possible. No draught should be able to pass into the chamber except through the same opening as the combustion gases, round the inner walls and out at the chimney *s*. To enable the lamp-black to be removed from the chambers by daylight, the side walls have

windows, one between each part of the inner walls. These windows are 40 inches long and 8 inches wide, and are most easily made by fixing sheets of glass air-tight by means of cement into openings in the brickwork. The windows, however, may be dispensed with and the lamp-black collected by artificial light. In this case no candle or lamp should be used, for fear of sparks igniting the lamp-black, an electric light carried by the workman together with a small accumulator serving for illumination.

Where the gases pass from the last subdivision of each chamber into the chimney are dampers R and R_1 , whereby each chamber can, if required, be shut off entirely from the chimney. To regulate the draught with sufficient accuracy a damper acting with perfect certainty must be put at the top of the chimney. Such a damper is shown in Fig. 33.

The iron cowl A rests on the chimney, being bent so as to open horizontally, and is balanced by the iron plate W . The cowl runs on a ball-bearing K , so that it acts as a weather-vane adjusting itself so that the wind can never blow down the chimney and hinder the proper movement of the fire-gases. This arrangement works perfectly even in the windiest weather.

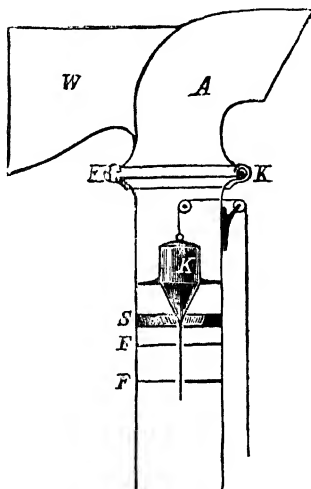


FIG. 33.

Below the cowl is the damper for regulating the speed of the gases in the chimney. An iron plate S with a circular opening in the centre fits into the chimney. The opening is wider above than below, so that it can be closed by the heavy iron cone K . K is guided by an iron rod which passes through central holes in the cross rods $F F$, and is raised or lowered by a chain passing over the two pulleys seen in the figure. Fig. 34 shows the lower end of the chimney shaft.

The channels I and II lead from each of the two chambers $K K$ into the vertical part of the shaft. At R and R there are accurately fitting dampers, above each of which is a Bunsen

burner (G G). If one of these dampers is opened and the burner above it lighted, the air in the channel becoming heated, rises up

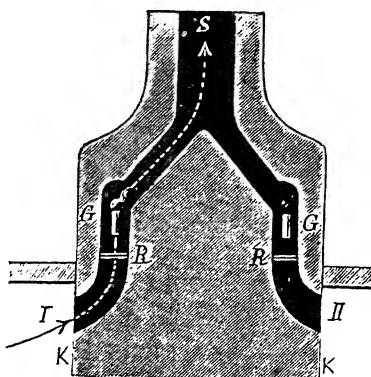


FIG. 34.

the chimney, thus causing a draught in the chamber which enables the combustion gases to pursue the frequently described devious course in the chamber.

THE BEGINNING OF THE PROCESS.

When a newly erected plant of this description is used for the first time, there are usually various difficulties to contend with which gradually disappear as time goes on. These difficulties are principally two in number: one is that instead of getting a pure light dry product, a blackish-brown greasy black is formed which lumps together when taken from the chambers and is unfit for use unless first thoroughly dried. The other difficulty is that of being able to hit upon the exact regulation of the draught necessary to bring all the combustion gases into the chimney and at the same time not to impair the smoky character of the flame. If the draught is too strong it carries away fine particles of carbon, and instead of the just perceptible smoke which ought to be seen issuing from the chimney there is a thick black cloud containing a large proportion of the best and finest of the lamp-black. If, on the other hand, the draught is too weak, all the lamps may go out on account of the accumulation of the products of combustion in the chambers which cannot escape by the chimney. Thereby the atmosphere in the chambers

becomes incapable of supporting combustion and the lamps are extinguished.

It often takes a long time to get the apparatus to work properly without anyone knowing why they did not do so from the first. In many cases the reason is attributed to defective construction and still oftener to want of skill on the part of the workman. Neither supposition can be justified. If the building were defective the arrangement could never be got to work properly, but would have to be rebuilt, and an attendant who would never learn the simple physical and chemical processes concerned in the manufacture of lamp-black would never succeed in making a faultless product. He would in every sense of the word drive money out of the chimney, it being much easier to work with a strong than with a weak draught, therefore, as above stated, much black is swept out at the chimney so that the output is far less than when the work is properly executed.

Before putting a new plant into operation it is necessary to consider whether it is suitable for the purpose. Every manufacturer will agree that when the building is complete and fitted with all the accessories for work, it should be started at once, for delay means time during which the capital expended on it is lying idle.

Obvious as this may appear, it does not quite hit the mark with a new lamp-black chamber. However sparing the bricklayers may have been with water in mixing their mortar, the new brickwork must be very damp and the walls will feel damp and cold. Left to itself the brickwork dries but slowly, and even in a hot year it takes months before the work is apparently dry. Even then, if it is heated it will at once be evident that it is not dry right through but only on the outside. The wet from the inside will begin to sweat out, and this goes on until the brickwork is dry all through. It is therefore essential to wait till the brickwork is quite dry before setting the apparatus to work. If this is not done the product will, for a long time, be damp and clinging instead of dry and loose. The only way to save the months of waiting while the brickwork is drying spontaneously is to dry it artificially. The expense of doing this cannot be compared with the loss of interest on capital involved in the long waiting, for it is confined to the cost of a few cwt. of coke.

The drying must not be done without due care. If the brick-

work is heated too fast it may crack. The heating must therefore be gradual, but must be kept up uninterruptedly till everything is quite dry. Great care must be taken, too, that no ashes from the fire get into the chambers or the first lots of lamp-black will be, if not altogether useless, at least of very inferior quality. The drying is best done as follows:—

Build in the lamp-room where the black-producing material is to be afterwards burnt a cylindrical brick oven about 5 feet high and 20 to 24 inches in diameter. In this, fix a grate about 4 inches from the bottom and connect the oven near the top with an ordinary stove pipe which must be provided with a damper. The top of the oven is closed with a removable iron lid. The stove pipe is led with a slight upward slope to one of the openings through which the lamp-black is to pass into the chambers, and is luted into it air-tight. The oven is then filled with coke, and while this is being done the damper must be quite shut to keep coke dust out of the lamp-black chamber. The damper is then opened, as well as that governing the bottom of the chimney, and the damper at the top of the chimney is opened full. Straw is then lit in the chimney to make a draught through the lamp-black chamber. When this has been accomplished small pieces of soft wood are lit under the grate in the oven so as to raise the lower part of the coke to a red heat. The heat soon spreads till all the coke is glowing and turning gradually to carbonic acid. This gas enters the lamp-black chamber at a very high temperature, and loads itself with moisture from the brickwork until steam begins to appear at the top of the chimney. When the coke in the oven is nearly burnt out, the stove-pipe damper is shut, the oven is quickly recharged and the damper is again opened. The heating must be kept up continuously day and night until the brickwork is quite dry, as shown by the clouds of steam ceasing to issue from the chimney, and the outside of the brickwork feeling warm even in those parts farthest from the stove.

The lamps can then be put in their openings at once and the action started as there is already a draught through the chambers and the chimney.

It may happen even with a perfectly dry lamp-black chamber which has been at work some time, that the lamp-black comes out damp and clinging instead of dry and loose.

The reason must now be in defective working as the brickwork

has long been dry. In the imperfect combustion taking place in the lamps with a limited supply of air, the products contain not only carbon separated out in the solid form and also certain volatile tarry bodies, but always in addition certain quantities of the normal products of organic combustion, carbonic acid, and steam. Now the draught must always be strong enough for this steam to retain the gaseous form till it escapes from the chimney. If the draught is too weak some of the steam will condense on the walls and floor of the lamp-black chamber, and in sinking on it will carry down particles of lamp-black forming with them a damp cohering mass. Too much draught is wrong because it sweeps lamp-black out of the chimney. The loss of lamp-black is certainly least when the draught is too weak, but entails the formation of a damp product, which is a very great inconvenience. It is hence of the utmost importance in lamp-black making to hit upon the happy medium as regards draught, and the ability to do this can only be acquired by practical experience. Practical men take for their guide in this matter the appearance of the flames. These should have a cloudy-red colour, and their tips should be bent over with streaks of lamp-black going from them to the openings into the lamp-black chamber. The appearance of the flames in conjunction with the appearance of the products escaping from the chimney-top really constitute a good test of how things are going.

Occasionally a sudden break in the satisfactory working may occur. The lamps previously burning in quite a normal manner, cease to do so, and the draught has at once to be altered. This is always to be traced to a quick change in the barometric pressure, which can be proved by consulting a barometer at intervals. If the barometer suddenly falls, the draught becomes too violent, and insufficient if the glass rises suddenly. Such sudden changes in pressure often occur in a few minutes as precursors to thunderstorms or gales. When, therefore, either is impending, extra attention should be given to the lamp-black chambers. In starting a new apparatus for the first time, begin with one chamber. Open the damper at the top of the chimney completely, and also that governing the bottom of the chimney, and light the Bunsen. The damper of the other chamber must be closely shut. From time to time bring the flame of a candle to the opening in the back wall of the chamber where the combustion gases enter.

The flame should bend to the opening, this being a sign that a draught has been established through the whole apparatus. The manufacture of the lamp-black can then be started. The combustion products are allowed to enter the chamber and a constant watch is kept upon the exit of the chimney. The gases at first pass rather quickly round the partitions in the chamber, so that only a small part of the lamp-black suspended in them can settle upon the floor. Hence as soon as they begin to issue from the chimney, the fact is announced by the formation of a thick black cloud of smoke.

As soon as this makes its appearance the draught is checked by extinguishing the Bunsen, whereupon the smoke from the chimney becomes thinner. After this it is a question of regulating the draught that the velocity with which the gases pass through the chamber to the top of the chimney becomes small enough to allow the particles of lamp-black to settle to the floor. To ensure this the damper at the bottom of the chimney is gradually closed, as well as that at the top, until the smoke at the chimney-top is only just perceptible. When this is the case, the speed of the draught is as small as possible consistent with safety. As soon as one chamber has been properly started in this way, the second can be set to work in the same manner. It is, however, better to wait till the first chamber has been going for twenty-four hours before starting the other, so that when it is fairly under weigh the lamp-black can be removed from the first. To stop the first chamber extinguish the soot-producing flame, and let the chamber cool for a few hours. During this time the draught through it becomes weaker and weaker, and all the lamp-black settles, while the chamber is charged with air through the opening which formerly admitted the combustion gases. The damper at the chimney-foot is then entirely closed and the lamp-black is taken out. It can be sorted while doing so as the finest particles are those found nearest the chimney. The lamp-black is best scooped out with enamelled iron buckets the bottoms of which are covered with india-rubber or felt to preserve the cement floor of the chamber from injury. Care has to be taken that those who remove the lamp-black do not take any dirt or grit into the chamber with them on their boots. To keep the lamp-black clean they should always wear felt shoes kept for this purpose only. The chamber is usually emptied in thirds, one

consisting of the part nearest the chimney, one that furthest from it, and one intermediate, so as to get three degrees of fineness. Lamp-black will be found on the partitions as well as on the floor. This is usually left alone, as it gradually falls to the floor in subsequent operations. If, however, a chamber is to be left disused for some time, this black is swept down with a soft broom and removed. Even with the greatest care it is impossible to prevent some of the fine lamp-black rising in dust, for this reason the collectors should never enter the chamber except mouth and nose be covered by a respirator to save the lungs from the effects that any inhalation of the dust would produce. A mask such as firemen wear at fires answers still better. This mask consists of a helmet enclosing the whole head, and provided with a valve opening outwards to permit respiration. At the back the helmet is connected with an india-rubber pipe of such a length that the man is free to go to any part of the chamber, the pipe being connected with a small condensing pump outside the chamber which keeps up the supply of fresh air. By this means only pure air is breathed and there is no danger of injury from the lamp-black dust.

The longer the chambers can be worked continuously the better, the work of each chamber should therefore not be stopped any longer than is absolutely necessary to remove the lamp-black. Such uninterrupted working leads to the brickwork becoming heated in a very uniform manner, which makes it far easier to properly regulate the draught.

The working of the chambers must be constantly watched. If in burning oil, for example, a few more lamps are started, the increased development of heat will strengthen the draught which will at once be shown by too much smoke coming from the chimney. The draught must consequently be checked by using the dampers. When a new plant has been working for a time, sufficient practical experience of its characteristics will have been gathered to enable the attendant to adjust the draught quickly until the sign that all is right is observed—viz. a very thin grey smoke at the top of the chimney.

No matter what kind of lamp-black is required, the lamp-black chambers are always built the same. The only difference is in the construction of the combustion room. Resins are burnt in shallow pans, rosin oils on red-hot plates, and fatty oils and

petroleum in specially constructed lamps. We now proceed to describe these different combustion arrangements in detail.

RESIN LAMP-BLACK.

It would be possible with a proper combustion chamber to make lamp-black by the imperfect combustion of ordinary pine-wood, but such product being of small value, the method is never resorted to in a properly conducted factory. But a fine lamp-black can be obtained from purified resin, large quantities being made in that way.

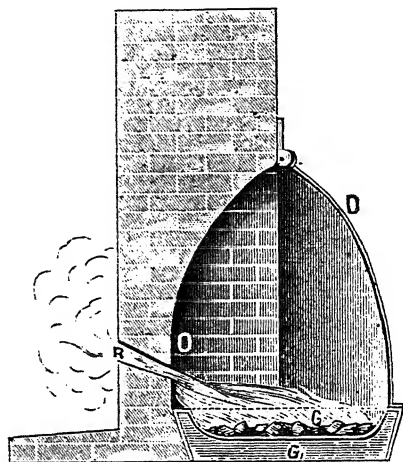


FIG. 35.

The hearths for burning resin in a limited supply of air are usually very simple in construction.

One of these is shown in Fig. 35. A niche O is made in the wall of the lamp-black chamber and is closed by the iron lid D, so as to form a space the shape of half an egg. The floor of this space consists of the iron dish G, surrounded by a water-jacket G₁ to keep it from getting too hot. The flame from the burning resin passes through the opening R into the chamber. It is easy to see that this arrangement is very imperfect. When the lid D is raised to put more resin into G, the portion left immediately burns with a bright flame, the draught in the lamp-black chamber being considerably increased, besides which it is impossible to

regulate the draught properly by means of D. Fig. 36 shows a somewhat better contrivance for controlling the draught.

This is an iron box set air-tight into the brickwork. The front of this box is cut at an angle, the oblique opening being provided with an iron lid sliding laterally on a rod, so that a slit can be opened for the admission of air into the combustion room. As this opening can be made of any desired width it affords a means of exactly regulating the draught. In burning resin for the production of lamp-black care is required to allow sufficient heat to burn the whole of it. It is true more rosin is available with less air, but as rosin oil is formed it must be burnt or it will contaminate the lamp-black and convert it into a greasy sticky mass. The flame will show whether enough air is being admitted to burn

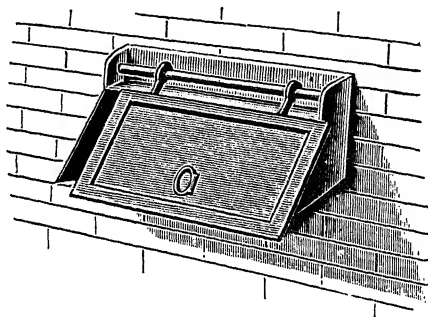


FIG. 36.

the rosin oil. This is the case when the flame is a dull red, reaching completely to the opening into the lamp-black chamber. In order to be able to observe the flame without opening the damper too far, the movable iron lid of the box is provided with a circular hole glazed with a piece of mica which serves as a window. Through this the flame can be watched without altering the slit admitting the air for combustion. The lid need then be lifted only when all the rosin is nearly burnt and a fresh charge is necessary. As this, however, disturbs the adjustment of the draught, it is preferable to arrange matters so that the fresh charge of resin can be introduced without moving the plate. A section of a suitable arrangement is shown in Fig. 37.

Partly embedded in the wall separating the combustion room from the lamp-black chamber is an iron pan H filled with rosin.

The heat from the rosin burning in the dish S keeps the rosin in H melted. When it is seen through the mica window A in the movable cover D that the rosin in S is nearly exhausted, the valve V in the bottom of H is lifted by the lever shown in the figure until the necessary quantity of rosin has run into the dish. With this simple contrivance as much rosin as required may be run into S without ever altering the opening of D, once the draught

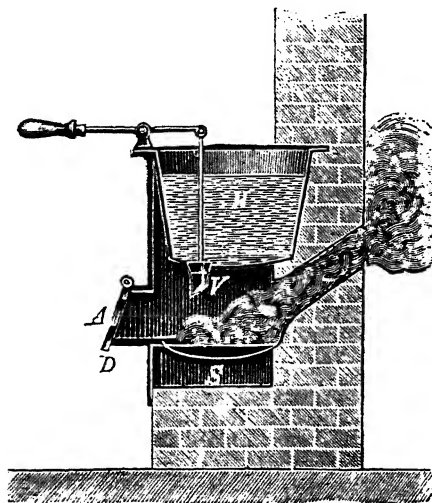


FIG. 37.

has been properly adjusted, and the process can be kept going for days without anything being done but to keep H supplied, and to run the rosin into S from it from time to time. The contrivance has also the advantage that it can be used not only for rosin but for all other suitable solids, so that pitch and petroleum residues can be used just as well. Whatever material is employed, the chief requisite is to manage the combustion in such a way that no liquid distillates contaminate the lamp-black and make it greasy.

MAKING LAMP-BLACK FROM LIQUIDS.

The liquids usually employed for the manufacture of lamp-black are rosin oil, liquid animal and vegetable fats, crude petroleum, the camphene or protogene obtained in rosin-distilling,

and finally a number of volatile hydrocarbons obtained in refining petroleum and known collectively in commerce as crude petroleum-ether. Petroleum-ether is, however, now less used for lamp-black manufacture, as on account of its use as a motor spirit the price has much increased, it is now too dear for our purpose, although it yields a very valuable lamp-black. The price of vegetable oils, too, shows a constant tendency to rise, and it seems as though they, too, would soon have to be erased from the list of lamp-black materials. Among oils, fish and seal oils appear to be the only ones which we shall be able to use much longer for this purpose. They are still to be had fairly cheaply, especially the unrefined kinds, which are needed for the purpose.

On considering the methods of using liquid fuel for lamp-black many great differences appear; oils differ very markedly one from another. Fish oil, petroleum, and vegetable oils, can be burnt in lamps so that their product is really "lamp"-black, but although petroleum-ether and other volatile hydrocarbons can be burnt in lamps, they are usually treated by a different method.

Rosin oil, an exceedingly important material for lamp-black manufacture, has an ignition point so high as to preclude it being burnt in lamps, it is also too thick to rise properly in wicks. The same remarks are true of some petroleum residues. Properly to utilize these bodies for lamp-black making it is necessary to heat them to render them thin and to allow them to fall then upon red-hot plates. On touching a metallic surface which shows at least a dull red heat, they partly evaporate and partly decompose into less complex hydrocarbons which also evaporate. If the proper quantity of air is then allowed to come into contact with the combustible vapours, they burn with a cloudy reddish-yellow flame, from which a large quantity of extremely finely divided lamp-black deposits.

MAKING LAMP-BLACK FROM ROSIN OIL.

In making lamp-black from rosin oil or thick petroleum oils, the apparatus represented in Fig. 38 acts admirably.

It consists of a closed iron vessel with a domed top, and connected by a pipe with the lamp-black chamber. The front of this vessel is closed air-tight while at work by a lid, in the upper part of which is the mica window *a* for observing the flame.

Below the window the lid has a circular hole inside which is a hoop bearing a screw with a fine thread. An iron disc *b* is screwed on to the thread outside. The disc, having a rather greater diameter than the hole, can be screwed up so as completely to close the opening, or it may leave a narrow inlet. By this means, therefore, the supply of air to the burning oil can be accurately regulated as the opening can be adjusted with great delicacy, the thread of the screw being so fine. The bottom of the iron vessel is corrugated, and about 8 inches above it is a circular tube. In this there is a hole above each of the furrows in the corrugated bottom. The ring tube is connected by a wider

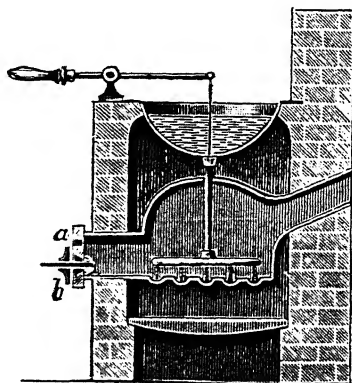


FIG. 38.

tube with the bottom of an iron pan in which the oil to be used undergoes a preliminary heating. The conical valve at the bottom of the pan is adjusted by a screw, allowing the flow of oil to be exactly regulated.

When the apparatus is to be used, the pan is filled with rosin oil, and a fire is lit under the corrugated bottom of the domed vessel. When this bottom is red hot, the conical valve is raised a little, so that the rosin oil falls in separate drops into the grooves in the red-hot bottom. As soon as it touches this, the rosin oil begins to decompose and evaporate. The disc regulating the draught is then adjusted so that each drop as it falls burns with a cloudy flame, the point of which sends out a black streak of smoke towards the pipe leading to the lamp-black chamber.

It is easier to regulate the combustion so as to get the most lamp-black, when each drop of the rosin oil can be seen separately as it falls. Each drop must be fully burnt before another falls from the same hole, and the conical valve must be adjusted accordingly. By working in this way not only is the combustion properly regulated, but the formation of coke in the grooves is almost entirely prevented. If the oil drips too fast, there is no time to evaporate it completely, and some of it forms a coke-like mass in the grooves. This coke not only represents a waste of carbon, but being a bad conductor of heat, makes it necessary to burn far more fuel than would otherwise be required to keep the grooves red hot. Nevertheless, it is impossible altogether to prevent the formation of this coke, so that the apparatus must be allowed to cool at intervals in order that the grooves may be cleared out with a suitably shaped tool. For this purpose the front plate is removed and the pipe to the lamp-black chamber is completely shut with an iron tompon. This must be done to prevent the strong draught which would otherwise ensue in the chamber. When the grooves have been cleaned, the tompon is removed, the front plate is replaced, and the apparatus is restarted immediately.

The lamp-black deposited by this system in the lamp-black chamber must be in very fine flakes and perfectly loose, it must not lump together on pressing. If it does lump it is a sign that the grooves were not hot enough to convert all the oil into gas, so that vapours of undecomposed oil passed into the chamber with the lamp-black, and condensing there upon it, made it greasy and clinging.

MAKING LAMP-BLACK FROM LIQUID FATS.

From all the liquid fats which are fluid enough to be burnt in lamps a product can be obtained which is a true lamp-black. It is of special excellence, and is used for the very finest printing ink. It fetches a price which compensates for the expensiveness of the raw material.

It is well known that the lamps in which liquid fats or petroleum are burnt for illuminating purposes are exclusively designed to give a perfectly smokeless flame, with as much light as possible. With this object the wick is made cylindrical so

that air passes inside it as well as outside, and a tall glass chimney is used to create a strong draught. The result is that the carbon separates out in a state of very fine division from the oil, and at a white heat gives a strong light. It is finally completely burnt so that nothing issues from the chimney but carbonic acid and steam. The better the lamp is for lighting, therefore the worse it is for lamp-black making. A lamp for this purpose must be fed with a strictly limited supply of air, so that only a feebly luminous flame arises from the wick which gives a black cloud

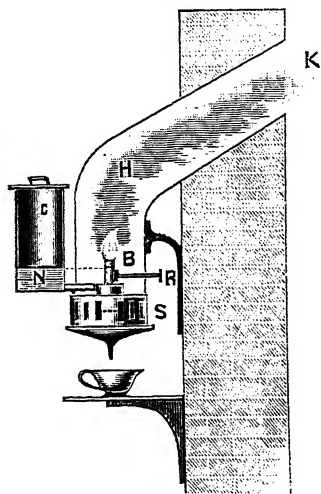


FIG. 39.

of unburnt carbon. A lamp which fulfils these conditions very perfectly is that of J. Bersch, shown in Fig. 39.

In its outward appearance it is like the old-fashioned reading lamps in which the surface of the oil was maintained at a constant level. The oil to be burnt is contained in the cylindrical vessel C, which is first closed by raising the valve in the narrow neck. C is then placed in the vessel N. If the short wire to which the valve is attached touches the bottom of N, the valve is open and the contents of C flow out. But as soon as the oil rises sufficiently in N to close the neck of C, the flow ceases. The wick of the lamp must be turned so as to be level with the surface of the oil in N. When some of the oil has been burnt the surface of it in N sinks sufficiently to let some more oil out of C, until the neck of that vessel is again below the surface. Hence the wick is fed with oil until C is empty. The wick is wide and flat, and enclosed in an iron tube H, bent as shown in the figure, and opening into the lamp-black chamber K. Small mica windows should be inserted opposite each other in H, whereby the appearance of the flame can be observed. The screw R regulates the height of the wick.

On the lower part of the tube H a short cylindrical piece S is fitted. This ends below in a cone, the apex of which is perforated with a small hole. Below the hole is placed a vessel to

catch the oil which flows over from the lamp unburnt. As the figure shows, the circumference of S bears a number of rectangular slits which correspond to exactly similar slits in H. When the lamp has been lighted the draught is adjusted by turning S, so that the slits in it overlap those in H more or less, until the flame of the lamp is a cloudy red with a copious cloud of smoke. The height of the wick is regulated so that the flame is as large as possible consistent with its having these properties, and the draught is regulated accordingly. At first, however, the flame should be very small, and should not be increased until the tube H has been well heated. The little flame carries all the combustion gases in the still cold apparatus into the lamp-black chamber, but if the flame is large from the first, large flakes of soot will collect in the bend of H, and finally fall upon the lamp. Once, however, H is hot enough, the speed of the gases in it is sufficient to prevent any deposition of carbon until the chamber is reached.

As every lamp must be put out of action from time to time, to clean it or to put in a new wick, the lamps must be capable of removal, together with the cylindrical piece S. While the lamp is away, the lower end of H is kept plugged by a stopper placed handy for the purpose. This is to prevent a strong draught going through it into the lamp-black chamber.

As many lamps are attached to a lamp-black chamber as there is room for. The attendant who has to superintend the combustion and keep the lamps supplied with oil, has so much to do that he may be unable to watch all the flames properly, and so cause a loss of lamp-black. It is therefore advisable to adopt Bersch's suggestion to supply all the lamps from a single oil reservoir. When this is full, the man has nothing to do for a long time except to devote his attention to the separate flames, and regulate the draughts. Fig. 40 shows the automatic contrivance for feeding the lamps.

The oil reservoir G is made sufficiently large to keep all the lamps going for at least twenty-four hours. It is placed higher than the lamp-wicks. From its bottom proceeds the tube H which communicates with another running along the floor of the lamp-room. From this proceed other tubes L, one to each lamp. A cock in each of the tubes permits of the regulation of the flow to each wick. As the common reservoir is very large, a long time elapses

before the surface of the oil in it has sunk so low that any diminution of the hydrostatic pressure becomes noticeable. When this occurs the cocks in the tubes L must then be opened a little

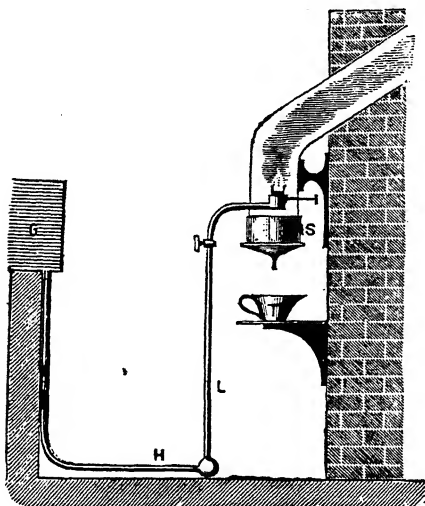


FIG. 40.

wider to admit the necessary amount of oil to the wicks. It is better, however, to arrange the common reservoir exactly as described for the separate reservoirs, and to supply it from yet another reservoir. In that case the level of the oil in the first cannot change as long as there is oil in the second reservoir.

UNIVERSAL FEED FOR THE LAMPS.

To provide any given number of lamps uninterruptedly with fuel, the best arrangement ever proposed is the one which may be designated as above. It is so constructed that the oil reaches the separate wicks at a perfectly uniform rate, provided (and this is essential) that the tops of all the wicks are at exactly the same level.

Fig. 41 shows the apparatus. The oil reservoir V is of sheet iron and completely closed. It may be of any size desired. It is filled at F, through an opening provided with a lid, which can be screwed on air-tight. There is also an air-tight cock H. From

the bottom of V issues a short tube governed by the cock H_1 , leading into the closed receptacle G. Parallel with this tube is a narrower one H_2 , which is continued into V and opens freely above the surface of its contents. A pipe goes from the bottom of G to a wider horizontal tube R, from which proceed the small tubes r to the separate lamps. V is filled through F, the cock H being open, till the oil has reached the bottom of the small dome into which H opens. F and H are then shut and H_1 and H_2 are opened. The oil then flows through H_1 into G, the air previously in this escaping through H_2 into V. As soon as the oil is deep enough in G to close the lower ends of H_1 and H_2 it ceases to flow from V, until it has sunk so far as to leave both tubes open again.

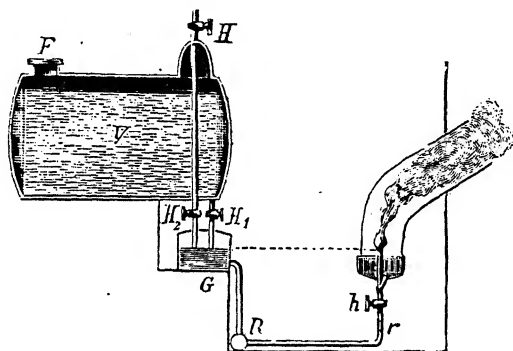


FIG. 41.

Then the small cocks h are opened to admit the oil to the lamps, and when these have been lighted the supply to them is adjusted by regulating the cocks h to the proper degree of opening. If at the same time the draught is set so that they burn with a very smoky flame, the attendant need not trouble about the lamps any longer while the oil in V lasts, so that one man can manage a large number of lamps, all that is then required being to keep the wicks at the right height. As the arrangement just described excludes the possibility of the fuel burning, except in the lamps, it can be used for such liquids as petroleum, which will take fire without any wick, on contact with a flame.

If the apparatus is to be used for burning petroleum, it is superfluous to use lamps at all, in this case a simple arrangement is substituted in which the petroleum burns freely. This arrange-

ment consists of a horizontal pipe, which is fixed to the supply pipe inside the lamp, having on its upper surface a row of holes large enough to admit a good-sized pin. The taps *h* are turned so that the petroleum slowly oozes from these holes. It is then set fire to, and should burn in separate flames each about four-fifths of an inch in height. This is easily managed by means of the taps *h*. The lamp-case is then closed and the draught is arranged so as to make the flames as smoky as possible.

It has also been proposed to use an automatic contrivance, whereby the petroleum to be burnt flows at the proper rate into small shallow dishes. These are enclosed in a casing whereby the draught can be regulated and the combustion gases led into the lamp-black chamber. It is obvious that this is a possible method, but comparative experiments have shown that the yield of the lamp-black is greater when the petroleum is burnt drop by drop as above described, and also that the lamp-black is obtained in a much drier state.

This result is due to the fact, that when the petroleum is burnt in dishes, some of it is always volatilized unburnt and carried into the lamp-black chamber. This serious drawback may be partly avoided by keeping the dishes cool during the combustion by means of a water-jacket, but the method of burning by drops is always to be preferred.

MAKING FLAME LAMP-BLACK.

Every luminous flame, whether of a candle, or of a lamp fed with oil or petroleum, or of coal gas, consists of two very distinct parts. The lower part consists of gases comparatively poor in carbon, which burn with a pale, usually light, blue flame. The upper part, which runs to a point, consists of the glowing products of the combustion of these gases, i.e. of carbonic acid and steam, in which very minute particles of solid carbon are floating, having separated out from the flame gases, rich in carbon. These particles of carbon are carried upward by the glowing gases, and if there is air enough, are gradually burnt, so that nothing rises from the apex of the flame but carbonic acid and steam. In this case complete combustion takes place.

If the luminous part of the flame is cooled in any way, as by holding in it a cold piece of metal or porcelain, the particles of

glowing carbon are suddenly chilled. They can then no longer burn, and are deposited on the cold surface in the form of a very delicate deep black powder, i.e. in the form of lamp-black.

Lamp-black so obtained has many advantages over that made in other ways. It appears perfectly dry, has a pure black colour, and consists of nearly chemically pure carbon. It owes this high degree of purity to the manner of its formation, which involves the absence of nearly all the tarry substances that are formed in the other processes, which cling to the free carbon.

Such carbon, deposited by cooling a flame, may be called flame

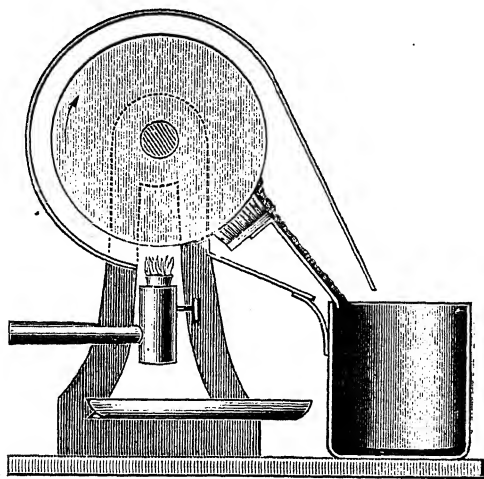


FIG. 42.

lamp-black or gas-black, and many forms of apparatus have been constructed for preparing it. Independently of the superior quality of the flame lamp-black, the use of these apparatus offers the great advantage that costly erections are not needed even to produce large quantities of lamp-black. Indeed a number of such apparatus can be set to work in an ordinary living room, and will make considerable quantities of lamp-black in a single day. Fig. 42 illustrates the principle of all these contrivances.

A cast-iron cylinder with thin walls is turned smooth outside. It can easily be rotated on horizontal hollow trunnions, through one of which water is admitted to the inside of the cylinder, and flows out again by a pipe from the other. This constant flow of

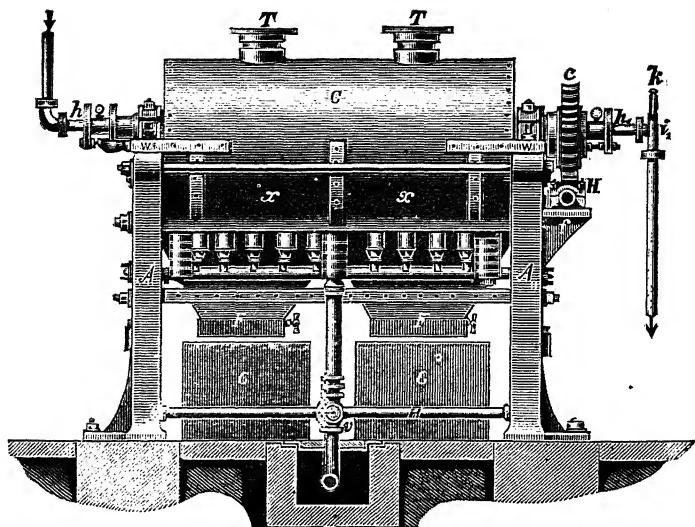


FIG. 43.

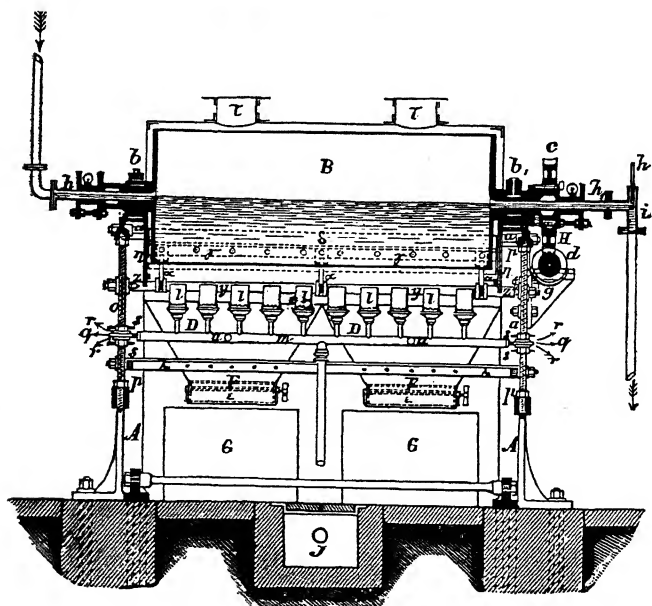


FIG. 44.

water will keep the outside of the cylinder quite cold. Round the cylinder, and an inch or two from it, is a sheet of iron casing, the form of which will best be gathered from the figure. Under the cylinder is a row of lamps, and their flames strike upon the cylinder. This, being kept cold by the flow of water, becomes coated with flame lamp-black. A very soft brush is fixed, so that as the cylinder rotates it brushes the lamp-black from it

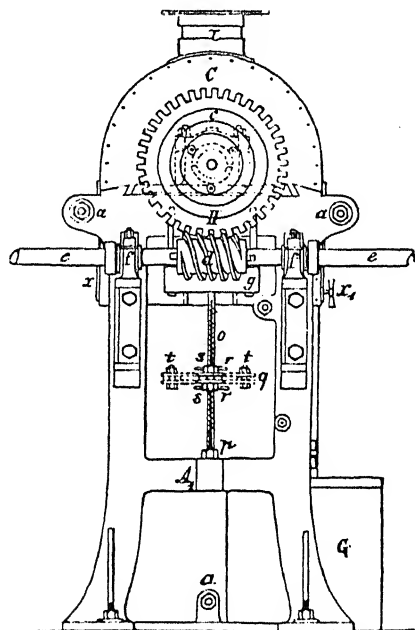


FIG. 45.

and guides it into a receptacle. The cylinder is turned by any suitable mechanism, but the motion should be slow, so that the layer of lamp-black formed is not too thin. This apparatus will make lamp-black from animal or vegetable oil or from petroleum. When petroleum is used it is advisable to fix under the rotating cylinder two or three parallel horizontal tubes having numerous small holes at the top, from which the fuel issues in small drops. The tubes should be arranged in such a way that the holes do not form rows running at right angles to the length of the

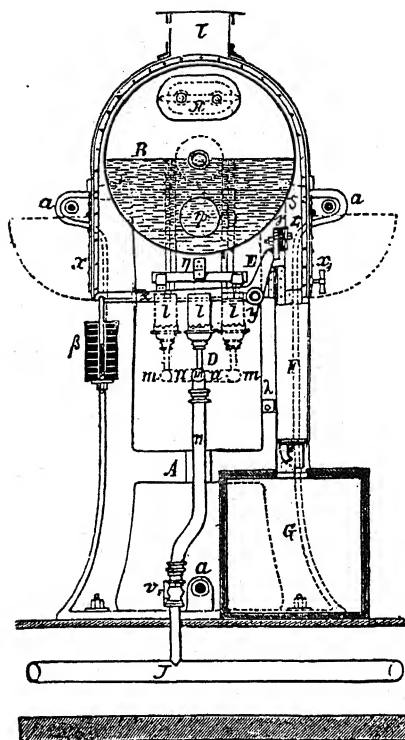


FIG. 46.

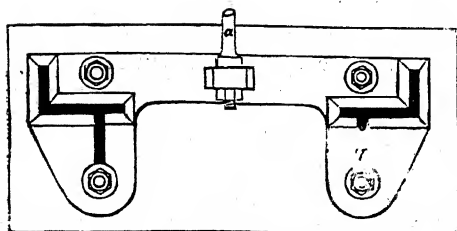


FIG. 47.

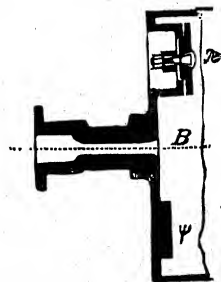


FIG. 48.

cylinder, or the lamp-black will not be distributed uniformly over the cylinder.

An extremely fine lamp-black can also be made by burning

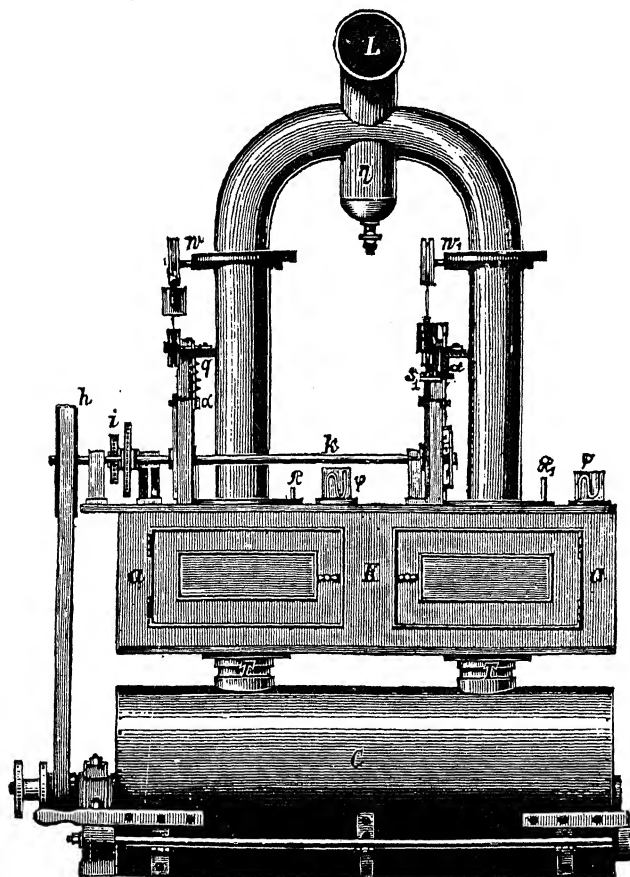


FIG. 49.

ordinary coal gas from the holes in the tubes, but as a rule coal gas is too dear in towns to be an economical source of lamp-black. The case is different with rosin gas, which can very well be utilized in this way, and it gives a lamp-black fine enough for making the very best printer's ink.

An apparatus constructed on the principle shown in Figs. 43 to 55 inclusive, and one which fulfils every proper requirement for the production of large amounts of lamp-black, is that of Dreyer. Fig. 43 shows an elevation, Fig. 44 the lower part of the

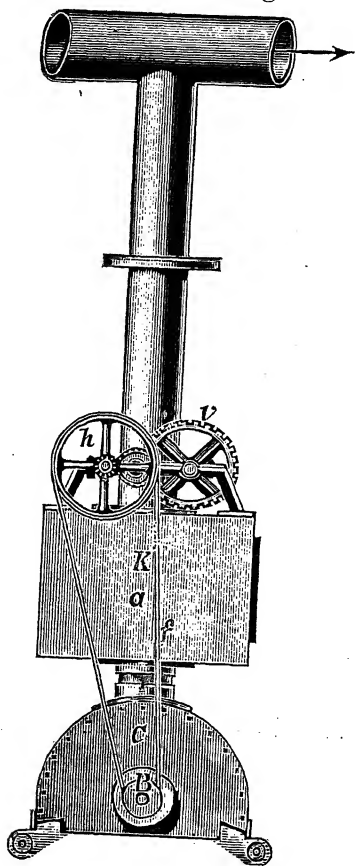


FIG. 50.

apparatus from the outside, Fig. 45 a longitudinal section, Fig. 46 a side view, Fig. 47 a cross section, Fig. 48 a section of the manhole and of the counter weight to the cylinder B, and Fig. 49 an upper view of the footplate of a side-wall at the framing AA. Fig. 50 gives a side view of the same, Fig. 51 a longitudinal section, Fig. 52 a cross section, Fig. 53 a view from above.

In Fig. 54 a section through the lamp-black collector *a* is given, and Fig. 55 shows the arrangement of the cam *n* and the lifting rod *o*.

The separate parts of the apparatus are as follow : The frame AA, the cylinder B, the casing C, the lamp-guard D, the stripper E, the collecting funnel F, the gearing H, and the aspirator K. The frame is composed of two strong cast-iron ends, connected by the screws *a*. In the bearings *b* and *b*₁ rests the polished

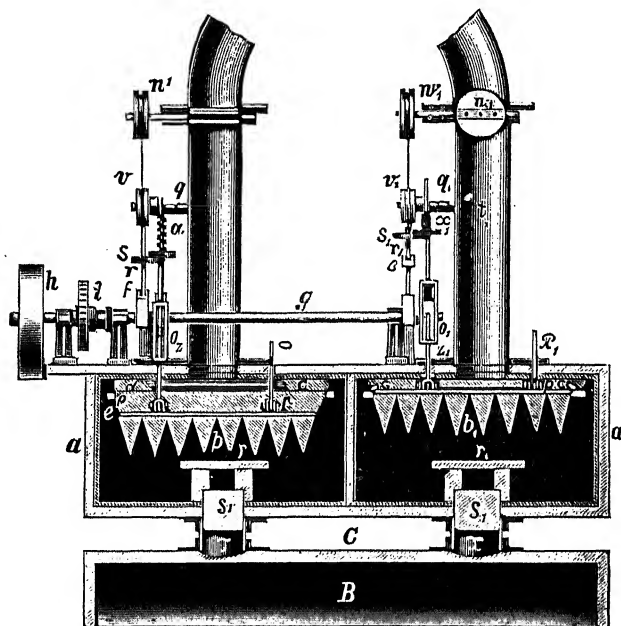


FIG. 51.

cylinder B with hollow trunnions, to one of which the worm wheel *e* is fixed. This is geared with the endless screw *d* and rotates the cylinder. Water flows from a reservoir through the cylinder in the direction of the arrow and leaves the apparatus warm. To determine exactly the flow of water necessary to keep the cylinder cold enough a thermometer *k* is inserted at *i*. When the lamps are burning the flow of water is regulated so as to keep *k* always at the same temperature.

The number of lamps used depend on the size of the whole

apparatus. The lamps *l*, and the distribution tube *m*, and the rubber tube, are connected with the mechanism intended to bring the lamps to such a distance from the outside cylinder, that the flame is so cooled as to give the greatest possible amount of lamp-black. Two round iron rods *o* are let into holes in the frame, and fixed there by the nuts *p*. At the closed ends of the distribution tubes, forks *g* are placed, and lie between the plates *r*, which

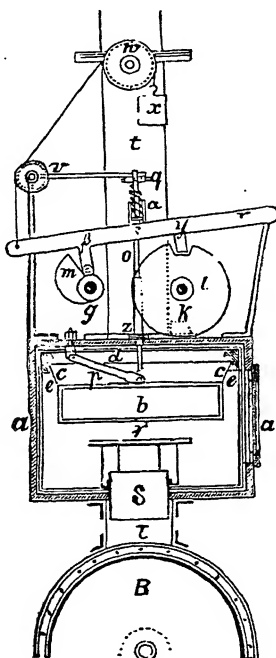


FIG. 52.

are fastened to the round rods by the nuts *s*. As the figures show, three rows of lamps can be used with the apparatus, these being burnt altogether or one or two rows at a time.

The tube *J* supplies fuel to the lamps, the latter may be any vegetable or fish oil or petroleum, etc. The supply is regulated by the cock *v*, which is connected with the distribution tubes, and the lamps by the india-rubber tube *n*.

The casing *C* of sheet iron is an inch or two away from the cylinder *B*. It can easily be lifted off by the handle *w*. At its

lower end are two flaps, $x x$, one giving access to the lamps, while the other allows the action of the stripper to be observed.

The stripper is essentially a strip of thin elastic steel δ which is fixed by screws on to the rails $\eta \eta$. By loosening the screws the stripper can be pushed along the rails, so as to adjust it at

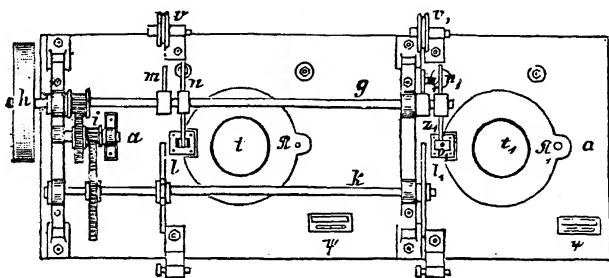


FIG. 53.

such distance from the surface of the cylinder B as may be desired. The aspirators K are connected with the upper part of the casing, and are connected with the outlet pipes $t t$, which are themselves connected with a ventilator. The draught of air caused by the ventilator is intended to free the combustion gases,

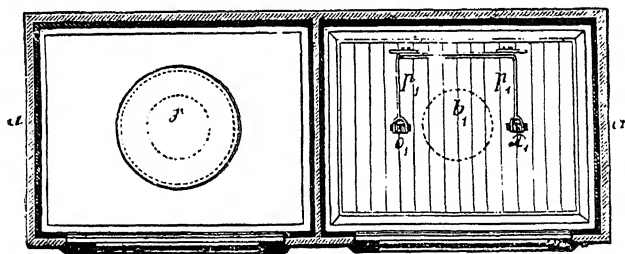


FIG. 54.

which consist chiefly of carbonic acid and steam, from the lamp-black still floating in them and to lead them to the chimney.

The most important part of the whole aspirator arrangement is the lamp-black catcher. This is a wooden box divided into two compartments, and covered outside with felt to prevent it from cooling too quickly. Each compartment contains a lamp-black collector consisting of a sheet of iron cut zigzag, and covered with coarse flannel. On the rough surface of the flannel

the lamp-black settles as it is carried upwards by the combustion gases. This would soon choke the lamp-black catcher, were it not for a device by which the lamp-black is constantly being shaken off the flannel. As will be seen from the figure, the flannel-coated irons are lifted at intervals and allowed to fall again, whereby the lamp-black is shaken off to the bottom of the box. To prevent the lamp-black thus shaken off from falling again upon the cylinder B, guard lids *y y* and insets *δ δ* are provided, under which the combustion gases pass freely through the supports to the wooden box.

Dreyer has also fitted his apparatus with various other accessories for regulating the rate at which the cylinder B rotates, etc.

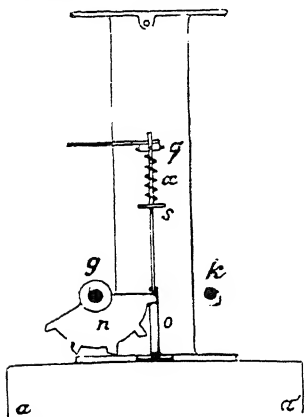


FIG. 55.

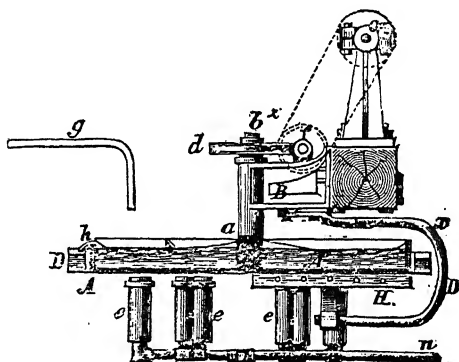


FIG. 56.

As will appear from this description, the Dreyer machine is very complicated, and, like all such machines, requires unremitting attention while in action, or very soon much trouble will be incurred. It may be stated, however, that lamp-black can be made with much simpler apparatus, two of which will now be described.

Fig. 56 shows Thalwitzer's apparatus.

The chief part of this is an iron plate *A*, having a bent-up edge *a* and resting upon a vertical axis, which can be rotated. The gearing for effecting this consists of the cast-iron spindle *b*, the cogwheel *d*, the worm *f*, and the driving shaft *o*. The lamps *e* are put under *A*, and are connected by *n* with a fuel reservoir

common to all. H is a stripper consisting of a slanting plate of steel, which continually scrapes off the soot settling on the under side of A when the apparatus is at work.

When the lamps are lighted and the distance of the flames from the underside of A has been properly adjusted, the machine is rotated, and water is run on to the plate A from the tube *g*.

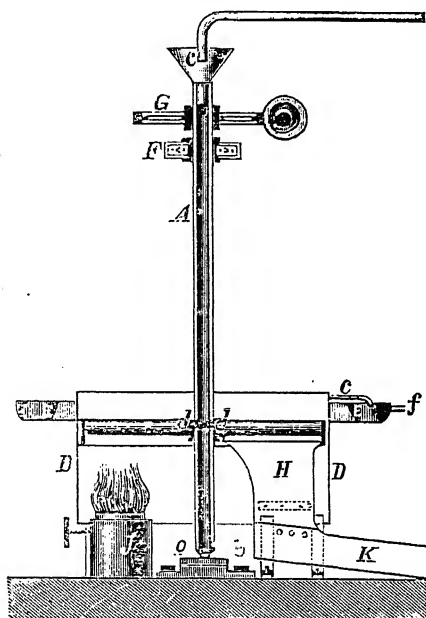


FIG. 57.

As soon as the water has filled A, it overflows into a circular gutter which surrounds the plate.

Fig. 57 represents an arrangement very similar to the last.

The water for cooling flows in this apparatus through the openings *d d* in the hollow axle on to the plate, and after doing its duty flows off by *c* into the circular gutter E, and then away by the pipe *f*. The lamps J and the stripper H are enclosed in an iron casing D.

PURIFICATION OF FLAME LAMP-BLACK.

Flame lamp-black, no matter by what method it has been prepared, has at first sight a deep black appearance, but a

practised eye will at once observe that the black is not strictly pure, but inclines to a deep, blackish-brown. This colour appears most distinctly when a mark is made with the lamp-black on white paper, close to another made with some purified lamp-black. The crude lamp-black will then show distinctly brown, while the other streak will be pure black in the thicker parts, fading to grey at the edges.

It being impossible to conduct the combustion of the bodies used for lamp-black manufacture so that nothing is formed but pure carbon, steam, and carbonic acid, the lamp-black is always contaminated with the products of dry distillation. These are solid or liquid at ordinary temperatures, and sometimes they are present in rather considerable quantities, sufficient to impart a distinct brown colour. Hence, before pure black printing inks can be made from it, the lamp-black must undergo a very careful purification. This can be done by two methods, by calcination at a red heat, or by dissolving out the impurities from the lamp-black by reagents. The simpler of the two processes is that of calcination in closed vessels. The heat which is applied either volatilizes or cokes the tarry products adhering to the carbon. The process, however, differs in no respect from that formerly described for the purification of ordinary pine lamp-black, therefore it requires only a few words. In carrying out this operation it is of the greatest importance to raise the temperature very gradually, watching the flame issuing through a small opening in the lid of the calcining vessel. If this flame is very long and bright, and issues with a whistling noise, the heat is too great, there being some risk that the pent-up gases will blow the lid off, whereupon the lamp-black inside would at once catch fire and be destroyed. The flame must be small and silent, and the fire must be kept low till the flame disappears entirely. The fire is then increased until the vessel is at a bright red heat, so as to conclude the process as quickly as possible.

To determine the action of very high temperatures on lamp-black we have subjected it for a long time to a bright white heat. The result was a velvety black substance, which proved on analysis to be nearly pure carbon. When this lamp-black was worked up with oil in a paint mill, it was found that it required much longer time to amalgamate it with the oil than lamp-black which had been purified at a red heat only. This

remarkable fact can only be explained by assuming that the heat rendered the lamp-black more dense, and, considered in connection with the greater consumption of fuel for producing the higher temperature, it proves that a red heat is best for practical purposes.

A properly calcined flame lamp-black answers every requirement in respect of a pure black colour and softness of the pigment, so that it can be used in manufacturing the finest inks for art printing. Experience has shown, however, that engravers on stone and copper give preference to chemically purified lamp-black, which cannot be a matter of prejudice, because the engraver does so without knowing how the lamp-black is made. This is proof positive that chemically purified lamp-black has advantages as regards softness and colour which escape any but the experienced eye.

CHEMICAL PURIFICATION OF LAMP-BLACK.

All the tarry matters which produce the brownish shade are fairly easily soluble in alkalis, both caustic and carbonated, but especially in the former. Hence it is advisable to purify lamp-black from these substances by means of fairly strong caustic soda lye used hot, and by subsequently washing several times.

It will be observed in testing the process on a small scale that the first boiling with caustic soda lye gives a very dark brown solution, the second a slightly paler liquid, but even the third and fourth liquors are fairly dark. This result is due to the very great colouring power of the tar-products, even traces of them give a very distinct colour to the lye. Quantitative experiments have shown that the great majority of the tar-bodies are dissolved out by the first boiling and that there is very little even in the second liquor. Hence two boilings are quite enough in practice to produce as good a lamp-black as may be required for any purpose.

The boiling of the lamp-black with caustic soda lye is done in iron pots, and the following process can be recommended as using the least possible quantity of alkali:—

The lamp-black is placed in the pot, and the caustic soda lye, containing 15 per cent of NaHO (34° Tw.), is poured in so as to wet it thoroughly and just cover it. Water is then stirred in until the mass has the consistency of thin cream. It is then

boiled. As soon as it is boiling vigorously the heating is stopped and most of the lamp-black allowed to settle. The dark brown supernatant liquid is then ladled out into a second pot on to more crude lamp-black. When this has been boiled the lye is regarded as exhausted. In the meantime a fresh lot of lye is run into the first pot, but this time a lye of 5 per cent (12° Tw.) is sufficiently strong. After boiling, the lye is drawn off and the lamp-black is rinsed with water several times and dried. It is then fit for any purpose for which it may be required, even the most exacting use to which lamp-black can be put.

The weak lye after it has been used for the second boiling of the first lot of lamp-black is used for the second boiling of the next, and so on as long as there is any lamp-black to purify.

The lamp-black retains quantities of lye, therefore it must be very thoroughly rinsed to get rid of it. The rinsing is done in a shallow vessel having a perforated bottom. Over these holes is spread a closely woven linen cloth upon which the lamp-black, wet with lye, is uniformly spread. Here it is left until the lye ceases to drop through and the surface of the lamp-black begins to crack. The lamp-black is then covered with water and again allowed to drain perfectly. This process is repeated three or four times, nothing then remaining but to dry the lamp-black. Some insist that the rinsed lamp-black should be boiled with nitric acid and again rinsed, but this further treatment appears unnecessary. Nitric acid is expensive, it must be used in stoneware or porcelain vessels, and its action does not in fact add to the purity of the lamp-black. Treatment with caustic soda lye alone will give a product which on paper makes a perfectly black mark without any trace of brown.

Care must be taken that the rinsing is complete before drying, otherwise a white efflorescence of carbonate of soda will appear in the dry lamp-black. To see whether the rinsing is complete remove a little of the lamp-black from the linen, filter and dry it at a gentle heat in a porcelain dish. The lumps of carbon left must fall to dust at a touch. The dish is then heated over a flame till the lamp-black takes fire and gradually burns away. If the rinsing has been sufficient, nothing but the merest trace of ash will be left on the dish. On the contrary, there will be a distinct white residue of carbonate of soda if the purification is not complete.

The lamp-black is dried by spreading it thinly on linen cloths stretched on a wooden frame. The frames are then put into a drying room, heated from the outside. The temperature inside the rooms should be about 40° C. This temperature will dry the lamp-black very quickly if the room is well ventilated and kept clear of the steam rising from the lamp-black.

It is a very bad plan to try and hurry the drying by doing it, for example, on hot metal plates. There is great danger when this method is adopted that the carbon, being in a state of minute subdivision, will take fire and be destroyed. If this happens, the only plan to save anything is to throw all the lamp-black at once into a vat of cold water. When the lamp-black is dry, it is left on the frames till the room is quite cool, after which it is at once filled into the receptacles in which it is to be sent out, which should be iron canisters with well-fitting lids. When a canister is full and the lid on, a strip of paper is gummed round the edge of the lid to prevent either air or dust getting to the contents.

In the purification of lamp-black on a large scale, considerable quantities of used-up caustic soda lye rapidly accumulate. This lye is dark brown and has a peculiar smell, but the caustic soda can be recovered from it with ease by evaporating to dryness in a shallow cast-iron pan. The mass is then raised to a red heat with constant stirring with an iron rod. The heat destroys the organic matter dissolved out from the lamp-black, the residue being pure carbonate of soda. This is dissolved in ten times its weight of water and the solution is boiled with slaked lime. When the carbonate of lime formed has settled completely, the clear liquid is drawn off, it is a solution of caustic soda, which can be again used. The recovery of caustic soda can, however, only be carried on remuneratively by those dealing with very large quantities and having cheap fuel at their disposal.

CARBON PIGMENTS OF OTHER ORIGIN.

Lamp-black is made either by burning bodies containing a large percentage of carbon in a limited supply of air, or by suddenly cooling the flame emitted by such bodies when on fire.✓ In both cases a part of the carbon is separated out in a very finely-

divided state as a black powder, containing distillation products from which it must be purified as above described.

There are, however, other ways of obtaining finely-divided amorphous carbon. One is a process known as dry distillation. This enables a large number of products, otherwise of very small value, to be used in the preparation of a product which will bear comparison with the finest flame lamp-black in every respect. The cost of carrying out the process, too, is very much less than in the case of flame lamp-black, so that it deserves the special attention of all lamp-black manufacturers.

If any organic substance containing a considerable proportion of carbon is enclosed in a vessel provided with a small orifice for the escape of gas, and if the vessel is then heated red hot, the oxygen and hydrogen of the organic substance combine with certain quantities of the carbon present to form liquids of a great variety of composition and inflammable gases. The high temperature at which these liquids are formed vaporizes them, and they escape with the gases through the orifice. If the substance heated contains a greater percentage of carbon than the oxygen and hydrogen can combine with it, much carbon remains behind in the solid state, and can be purified for use as a pigment.

If the temperature is gradually raised, the physical structure of the material heated remains quite unchanged. If wood is treated, for example, the resulting charcoal will show the microscopic structure of the original cellular tissue with perfect distinctness. The organic bodies which can be used for the purpose always contain more or less mineral matter or ash which would alone remain if the matter were heated with free access of air. The resulting carbon which contains this mineral matter must, therefore, be purified by chemical methods whereby the inorganic products are rendered soluble so that they can be washed away with water.

The materials available for carbonizing are numerous, and certain waste products for which it would be difficult to find any other use answer very well. The substances mostly used are scraps of ivory, bone, leather, and, as regards vegetable matter, vinestalks and other comparatively soft vegetable matter. Wine or beer yeast forms a very valuable material, which is as yet but little used. The same may be said of dried blood from the slaughter-houses.

BONE OR IVORY BLACK.

All bones, including ivory, consist of a framework of inorganic matter or bone-earth, through which organic matter is disseminated. Hence if bones are made red hot in a closed vessel, the organic matter is destroyed, leaving carbon in a very finely-divided state lodged in the bony framework. If the heat is applied gradually the bone retains its shape, but becomes quite black and is more porous and of much less weight than at first. This bone black or animal charcoal has great power of absorbing colouring matter from liquids, so that it is largely used for bleaching such liquids. For example, in the vast industry of beet sugar manufacture, the solutions first made are very dark in colour, but after filtration through animal charcoal they will yield colourless crystals of sugar on evaporation. Chemical trades require such quantities of bone charcoal that its production constitutes a large industry. In breaking up the charred bones a fairly considerable amount of waste is produced in the form of dust and small grains which cannot be used for bleaching purposes. This waste can, however, be worked up into a pigment. This is done either by grinding in water or turps or by dissolving out the mineral constituents with hydrochloric acid, and then rinsing and drying the carbon.

The mineral basis of bones consists mainly of the phosphates of lime and magnesia, salts which are soluble in dilute hydrochloric acid. A vat is half-filled with the above mentioned waste, which is then just covered with a mixture of equal volumes of commercial hydrochloric acid and water. As the mineral matter also contains carbonates a lively effervescence at once ensues, and small quantities of hydrofluoric acid are also formed from the decomposition of calcium fluoride in the bones. Now hydrofluoric acid being a very dangerous substance, air containing even traces of it is very injurious to the lungs. Hence the addition of hydrochloric acid is usually performed in the open air and the vat is left at rest until the evolution of fumes ceases. A plug is then pulled out of the bottom and the carbon is thoroughly drained. It is then stirred up with water and again drained, when it has fully settled to the bottom. This rinsing with clear water is repeated till all the hydrochloric acid is washed away and only pure carbon remains in the vat. For pigment making purposes it is

essential that the carbon should be as finely divided as possible; the washed carbon is subsequently ground in an ordinary colour mill. Very little power is required for this purpose, since once the bone-earth is removed the carbon particles have little cohesion. The properly ground mass forms a deep black mud which is left to dry spontaneously or is dried by artificial heat. When dry, the purified bone-black is of a pure black colour and makes a most excellent pigment.

Bone-black is put upon the market under a variety of names such as ivory black, *ebur ustum*, Frankfort black, neutral black, etc. These all consist of finely ground bone-black purified from mineral matter. If leather scraps or dried blood are to be worked up iron tubes are employed, closed at one end, and with a well-fitting lid perforated with a small hole. As these products give off large volumes of combustible gas during the charring, it is advisable to lead the vapours from the opening in the tube by a bent tube so that they can be burnt and thus supply a portion of the heat required thus saving fuel. Leather or blood gives a charcoal which requires no treatment with hydrochloric acid, since the amount of mineral salts present is so small that its removal appears superfluous.

VINE BLACK.

The one-year-old and barely lignified shoots pruned systematically from vines are used in many places for the preparation of a black pigment which from its origin is called vine black. The shoots to be carbonized, cut in equal lengths, are packed into iron pipes which are loaded as full as possible. The plug is then put in the pipe, which is slowly raised to a full red heat. The charred matter contains a considerable quantity of carbonate of potash, from the organic potash salts originally present, and is freed from this by washing with water. It is not necessary to treat it with hydrochloric acid, as the insoluble salts are very small in quantity. It is true that the product would be of even better quality were the acid used, but washing with water and grinding usually constitute the whole of the operations.

Soft shoots of other plants can also be carbonized, giving a product which can be used as a pigment after purification. Shoots of porous white wood, such as poplar, alder, and willow, are especially suitable.

YEAST BLACK.

In the fermentation of grape-must a considerable quantity of a pale brown substance separates out. This consists of the cells of the yeast plant mingled with a large number of small shining crystals of salt of tartar. As this thick yeast still contains about half its volume of wine it is pressed to recover as much as possible of the latter. The residue is either worked up at once or thoroughly dried for keeping. Wet wine yeast putrefies very readily, the putrefaction rapidly destroying its most valuable constituent, the tartar. The dry yeast is carbonized in tubes similar to those used for the calcination of lamp-black. The charred mass is put in a vat of cold water, where it soon falls to a fine powder. When this occurs the liquid is stirred well for a time, and allowed to settle, finally the liquid is drawn from above the sediment of carbon.

The tartar which separates out with the yeast during the fermentation consists chiefly of the tartrates of potash and lime. These salts are decomposed by the calcination and converted into the corresponding carbonates. Carbonate of potash is very soluble in water, so that it will be found in the water drawn off from the vat just mentioned and may be recovered by evaporation. The carbonate of lime being insoluble in water, hydrochloric acid must be used to get rid of it. Washing with water will then give an unusually finely-divided carbon of superfine colour.

Both dried and freshly pressed yeast or wine lees are used in chemical factories for the preparation of tartaric acid. This is done by treating the yeast with hot hydrochloric acid, which dissolves the lime and potash salts, leaving the organic matter of the yeast unaltered. The liquid is then filtered and the yeast remaining in the filters is rejected as worthless. It ought, however, to be dried and carbonized, and would then give, after mere washing with water, a pigment of very superior quality. In the factories where tartaric acid is made from yeast, expense is incurred in disposing of this waste yeast, therefore the advisability of utilizing it as above described will be at once manifest.

In breweries and spirit distilleries during fermentation enormous quantities of yeast are produced, far more than can be used as such. At present the best use that can be found for it is

to boil it and mix it with cattle fodder. It contains large quantities of albuminoids, so that the employment of it for this purpose is quite legitimate. But the quantities of yeast produced in a large brewery are so great that it is scarcely possible to use all of it for fodder. The rest might quite well be carbonized and made into a pigment in the following way:—

The pasty yeast is freed as much as possible from water by pressing, then completely dried and carbonized in iron pipes. Although the carbon obtained does contain a certain amount of mineral salts, especially phosphate of potash, nearly all of these are removed by simply washing with water. After this washing nothing remains to be done but to dry the carbon..

CHAPTER XIV.

MAKING LAMP-BLACK PIGMENTS.

THE manufacture of lamp-black pigments in general, i.e. printing inks, is carried out in a similar manner to that in which ordinary paints are prepared. The solid pigment, in this case the lamp-black, is mixed in the proper proportions with a specially prepared oil by machinery until a perfectly homogeneous mass is formed. The homogeneity of the mixture is of greater importance in printing ink than with any other pigment. A printing ink which has not been properly mixed produces at those places where there is too much lamp-black and too little oil a deep black wide impression, and at those where there is too much oil and too little lamp-black a grey and narrow mark. Hence it is impossible to use such an ink for printing purposes, especially for art printing. Some copies will come out deep black with wide lines, and others grey with narrow lines. If the very finest and most purified lamp-black is examined under the microscope, it will be observed that the pigment is not, as might have been expected, in particles of equal size and shape, but in masses showing great differences in both respects. The larger masses consist of aggregations of the smaller ones which cohere together with some tenacity, so that pressure on the cover glass breaks up the lumps only imperfectly. Long narrow flakes will also be seen, which are the remains of the large flakes seen under the microscope in unpurified lamp-black. Both the lumps and the flakes would inevitably cause unevenness in the appearance of the finished printing.

PAINT MILLS.

In order to obtain printing inks conforming to the requirements above indicated, the best means available must, of course, be adopted. It is absolutely necessary to grind them in a paint

mill until all the particles visible in the field of the microscope appear of the same size.

There are many types of paint mill, and although there is a number of differences in detail, they can all be classed under three well-marked categories. A cone mill is represented in Fig. 58.

One part of the grinding arrangement is an obtuse cone with a fluted surface. Over it is a hollow cone into which the other

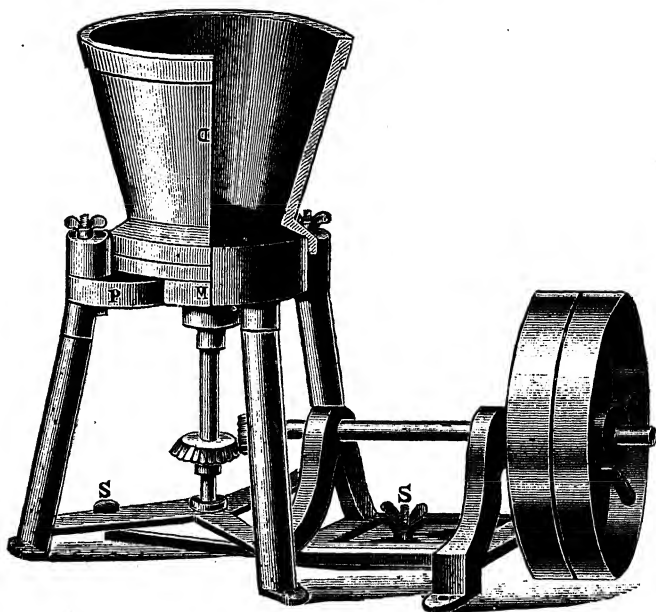


FIG. 58.

fits, and the distance between the two can be regulated at will. The grinding is effected between the two conical surfaces.

Fig. 59 represents a plate machine.

The grinding is here done between two horizontal plates provided with radiating ribs. In some cases one plate is fixed while the other revolves. In other machines both revolve, but in opposite directions. The roller machines illustrated in Fig. 60 form a third type.

The rollers are of steel, porcelain, or hard stone. They are truly cylindrical, and polished. A special arrangement permits

the exact regulation of the distance between the rollers, which also revolve at different speeds or move laterally while revolving.

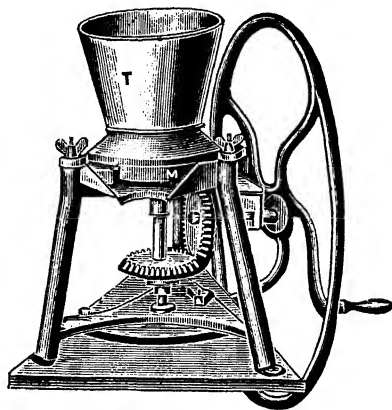


FIG. 59.

Hence the mass passing between the rollers is rubbed as well as pressed.

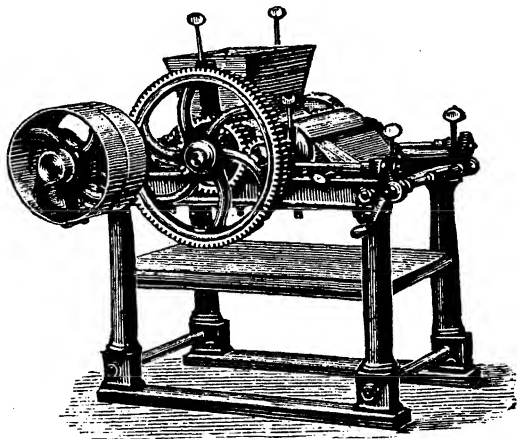


FIG. 60.

A machine of any one of these types will serve to produce homogeneous paints, if it is constructed with sufficient care, but for making printing inks the roller machine is the one to be preferred. These turn out the mass in a proper state more quickly

than any of the others, but in working on a large scale it is advisable to give the lamp-black and oil a preliminary mixing with a cone or plate mill, and to complete the process in the roller mill.

ROLLER MACHINES.

The best roller machines are those which have a large number of pairs of rollers arranged step-wise one over another in such a way that the mass scraped by the stripper from the uppermost pair passes through the second pair, and from them to the third, and so on. The separate pairs are so geared together that the lower rollers move somewhat faster than the upper ones, and that at every rotation one of each pair of rollers moves a little to one side, and then back again.

The distance between the rollers of each pair must be capable of exact adjustment by means of fine screws. As the lower rollers have to be closer together than the upper ones, there is a tendency for the mass to accumulate upon them. This is prevented by running them faster than the upper rollers, so that the mass passes along uniformly.

The material at present used for the rollers is hard stone or porcelain. Stone rollers are made of porphyry or granite, but the stone must, in any case, be a very fine grained one. Experience has shown that both coarse grained porphyry and coarse grained granite are harder in some places than in others. Hence the stone wears faster in the soft than in the hard parts. The latter are, therefore, brought into relief. Such a want of uniformity in the surface, even if imperceptible to the eye, is enough to seriously affect the proper working of the machine. Nothing can then be done but to trim the rollers on a lathe, or to put in new ones.

Porcelain rollers consist of a thoroughly uniform mass at least as hard as porphyry or granite. Being uniform in structure they wear evenly and work even better after long use than when new, as small irregularities of the surface left by the turner become smoothed away. Hence roller machines with porcelain rollers are certainly to be preferred to machines with stone or metal rollers.

CHAPTER XV.

MANUFACTURE OF PRINTING INKS.

QUITE a number of materials for the manufacture of printing ink are given in recipes; it is impossible, however, to discover what use many of these serve. The following is a list of the articles now employed in the manufacture of printing ink:—

Boiled linseed oil, boiled without driers.

Rosin oil from the dry distillation of rosin.

Rosin itself, especially American pine rosin.

Soap, usually rosin soap, but occasionally ordinary soap.

Lamp-black and various other pigments.

The art of making printing ink remained at a very low stage of development for a considerable period, the inks used during the first half of the nineteenth century probably differing little in composition from those which were prepared by the inventor of printing. Linseed oil was very slowly heated over an open fire until it ignited. It was allowed to burn for a time and then extinguished by putting a lid on the pot. In this way a liquid was obtained coloured dark brown or black owing to decomposition and the separation of carbon, its consistency varying with the period of heating, the longer the heating was continued the thicker it became. If necessary, the liquid was then thinned with unboiled, or only very slightly boiled, linseed oil. Lamp-black in the proper quantity was added, and the mixture worked with a muller upon a stone in small quantities at a time to make it uniform. It was impossible, however, in this way to get uniformity of composition throughout a large mass of ink, as may be observed by examining old books, when it will be noticed that some pages are of a uniform deep black while others are of a greyish tint.

PRINTING INKS.

With the exception of inks required for colour printing, all printing inks are black, owing their colour to finely-divided carbon made from pine-wood, rosin oil, etc., according to the quality of the ink desired. The finest inks for art printing, lithography, and copperplate are made from flame lamp-black. When we consider the great variety of uses to which printing inks are put and how cheap many of them need to be, the reason for the vast number of published recipes will be very evident. Up to the middle of the nineteenth century there was but one kind of printing ink, nowadays there are a great many, their composition varying considerably. A very great influence on the development of the trade in printing ink was exercised by the spread of periodical literature during the second half of last century. This caused a gigantic increase in the amount of printer's ink used, the demand having grown steadily for the last fifty years.

The qualities of a printing ink depend upon the use to which it is to be put. There are, however, certain requirements which apply to all printing inks alike, these being as follows: The ink must be a thick and perfectly homogeneous liquid, it must contain no solid matter other than finely-divided carbon, and every drop when examined microscopically must appear as a clear liquid containing black grains uniformly distributed through it.

The consistency of a printing ink must be such that it passes on to the printing rollers at the proper rate. It will thus be obvious that various consistencies are demanded according to the nature of the machine used by the printer. For a rotary machine which prints many thousands of copies an hour a consistency will be necessary very different from that required for art printing or for ordinary work. As regards colour, ordinary printing ink should be a pure black. For economy's sake, however, newspaper printers often use an ink so diluted that it does not appear deep black, but has a greyish-black tint, especially in large type.

The question of the time the ink takes to dry on the paper is a very important one, especially with ink used for printing newspapers which are folded and despatched as soon as printed. If the ink does not dry sufficiently quickly, the whole impression

smudges and "sets off" to such an extent that it becomes illegible in places.

Although it is essential to employ a quick drying ink for this purpose, it is dangerous to go too far, for an ink which dries too quickly would make the paper stick to the formes and tear it. A last condition which must be fulfilled by a good printing ink is that it must be easy of removal from the type, which has to be used again.

It is easy to see from a review of all these considerations that no one composition will answer every requirement and that a number of different inks are required. Makers of printing inks are obliged therefore to work from definite recipes in order to be able to turn out uniform products. They make newspaper ink for rotary presses, book-printing inks and art inks. As the recipes employed in the trade have been attained by long, laborious, and costly experiments, it is obvious that the makers are not disposed to communicate their knowledge to the public, the recipes that are offered and published must therefore be looked upon with caution as many of them are of little or no value. In the recipes for printing inks given below, the intention is to give hints only as to their general composition, but the practical man will easily discover if modifications need to be made in any recipe for his special purpose.

The first real improvements in making printer's ink consisted in the introduction of rational methods of boiling the oil, and of mechanical mixing appliances. The latter were at first ordinary cone or plate colour mills. The roller machine is of more recent date. A great improvement was made about 1850 when rosin oil was first used in place of part of the linseed oil and when rosin soap was added to the ink. It thus became possible to make inks much cheaper than could be made with linseed oil alone. This was a very important matter for newspaper printing, the amount of ink used in printing even a single day's issue of a large journal being considerable, a saving of only 1 or 2 per cent on the cost of the ink amounts to an appreciable sum of money.

BOILING THE LINSEED OIL.

This process although known as boiling is not a true boiling, but a heating having for its object the initial oxidation of the oil, so that it will dry better. Linseed oil is typical of the drying

oils, since on exposure in thin coats to the air it absorbs large quantities of oxygen, and is thereby converted into tough solid sheets having properties very similar to those of soft india-rubber. The process proceeds much faster with the aid of heat than at the ordinary temperature, and the rate at which the boiled oil will dry when made into ink can be exactly regulated by heating it for a longer or shorter time.

Prolonged heating yields an oil which will dry very quickly on exposure in thin coats to the air, the shorter the heating of the oil the more slowly will the ink made with it dry.

Linseed oil must always be boiled in vessels of considerable capacity, the oil soon swells up on heating and begins to decompose so energetically at a particular temperature that there is considerable risk of its boiling over and catching fire. Various contrivances have been devised for boiling large quantities of the oil with safety, such as pans with an outlet pipe in the side, through which the oil escapes when it rises too high instead of flowing over the edge of the pan, and fires built on a trolley running on

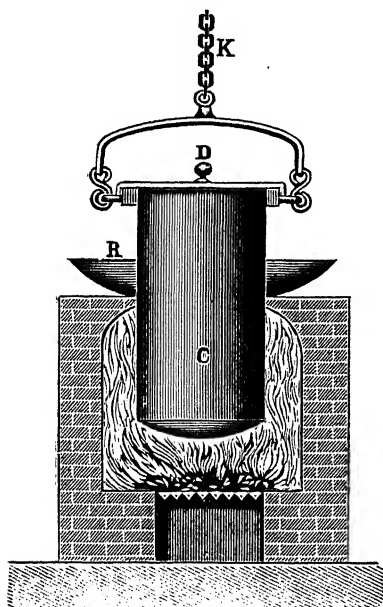


FIG. 61.

rails so that they can at once be moved from under the pan if there is any probability of the latter boiling over. The apparatus most suitable for preparing thickened linseed oil is undoubtedly one in which the oil offers a very large surface to the air, and on that account requires to be moderately heated only. The oil soon becomes very thick under these conditions and if necessary can be diluted to any required consistency with unboiled oil.

In boiling linseed oil down to the proper thickness by the old method there are two points demanding special attention. One is the liability of the oil to boil over, and the other the develop-

ment of large quantities of vapour, mostly of acrolein, which has a most powerful and disagreeable smell, and an intense action upon the eyes. The attendant must be protected from these fumes, and the boiling must therefore be done where there is a strong draught to carry away the fumes as fast as they are produced. There are various contrivances to cope with oil boiling over. That invented by Andres is shown in Fig. 61.

The pan C is suspended by the chain K, by which it can be lifted out from the hearth. A rather large dish-like arrangement R surrounds C and the lid D closes C securely. If the oil boils

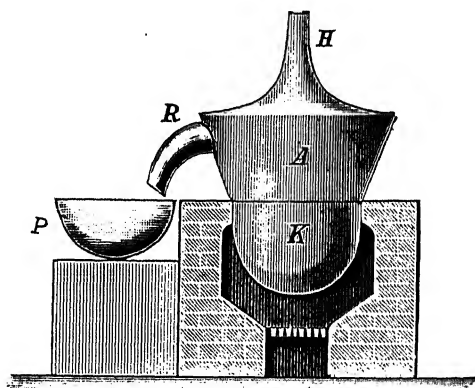


FIG. 62.

over it is caught in R. When the oil takes fire, the flame is extinguished by the lid D and the pan is lifted from the fire as quickly as possible, not being replaced till the oil has cooled considerably.

Fig. 62 shows an arrangement for boiling linseed oil which not only prevents any injury to the workmen from the fumes of the oil but obviates any fear of loss by the oil boiling over. The pan, which can be filled nearly to the brim with the oil to be boiled, has above it an enlargement A in the shape of a truncated cone which bears the conical head H connected to a chimney in which there is a good draught. A rather wide side tube R proceeds from the side of A and is bent over an empty pan P.

When oil is heated in this apparatus all the fumes pass through H into the chimney. The shape of A allows full scope

for the oil to expand, but if this should not be enough, the oil boils over through R into P and is not lost. When the oil has ceased frothing, any oil in P can be put back into K, the apparatus, simple though it is, preventing all risk of fire or loss of oil.

The time during which the oil requires to be heated depends upon the quantity, on the power of the fire, and on the consistency to which the oil has to be brought. No hard and fast rules can therefore be laid down. The longer the heating continues the darker and thicker the oil becomes and the quicker it dries in thin layers.

TESTING THE BOILING OIL.

To find out the condition of the hot oil at any given moment it is usual to take a sample from time to time and pour it in a thin stream into a very thin metal dish floating in cold water. The oil thus rapidly cools to the ordinary temperature and can then be tested. A very favourite test with practical men is to touch the oil in the metal dish with the finger, and slowly raise it, the longer the thread which can be drawn from the surface of the oil without breaking, the thicker the oil has been boiled.

A skilled workman can judge the consistency of oil very well in this way, but great experience is required to do so. A far more reliable and at the same time as simple a method is to take the specific gravity of the oil.

The more it has been boiled, the higher its specific gravity. As, however, the indications of an ordinary immersion hydrometer would be unreliable in such a thick liquid as boiled linseed oil, another method which gives very accurate results can be recommended. Take out about a pint of the hot oil with a ladle and cool it quickly by pouring it into a metal dish floating on cold water. Then fill with the oil a flask holding exactly 500 c.c. when filled to the mark, and weigh the 500 c.c. of oil on a delicate balance. The weight of a litre (1000 c.c.) of the oil in grammes will then be the difference between the weight of the full and the empty flask multiplied by two, and the specific gravity of the oil will be one-thousandth part of the weight of the litre of oil.

When a number of determinations of specific gravity have been made of the finished oil, the average of the numbers obtained

will give a normal specific gravity which can be worked to in all future cases, boiling the oil till the specific gravity reaches what is regarded as the normal amount. Heating darkens the oil, but that is of no consequence with oil to be used for making printing ink, on the other hand it is of very serious importance in making inks which are not to be black, especially for delicate shades in colour printing. In this case only oil of the very palest colour can be used, and it is best not to boil the oil but to thicken it by another process which we now proceed to describe.

THICK OIL.

As above stated, the thickening of linseed oil results from the absorption by it of oxygen from the air, and by polymerization, which change is greatly promoted by heating. There is, however, another way of accelerating the absorption. The oil is but gently heated and is then allowed to fall in a shower through a chamber in which an upward current of warm air is travelling. An apparatus for carrying this out is shown in Fig. 63.

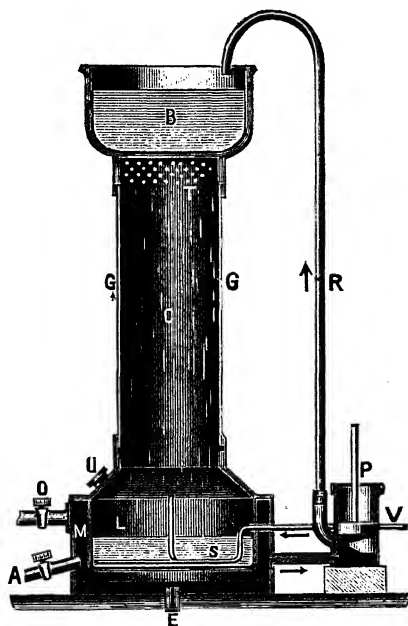


FIG. 63.

L is a shallow cylindrical dish of metal which can be filled with oil through the opening at O. L is completely enclosed below and at the sides in a second vessel M, but with a space between forming a jacket into which steam can be admitted to heat the oil in L. The condensed water escapes from the opening at E. A pipe coil lies on the bottom of L and terminates in the middle of L in a vertical pipe, the opening of which lies under a conical iron cover H. The end V of the coil outside the apparatus is connected with a fan which drives a continual

stream of air through it. The air is warmed by passing through the coil immersed in the warm oil and escapes from under H. Above the vessel L is a cylindrical chamber G several yards high, made with glass sides so that the drops of oil falling down are exposed to the action of daylight. Thus the apparatus gives a combination of all the conditions conducive to the oxidation of oil; considerable surface, heat, and plenty of air and light.

Over the tall glass case is a reservoir B of about the same capacity as L. This vessel has a perforated bottom which allows the oil to drop through it in the form of a very fine rain into L. The warm air rising through G escapes at openings shown at T just below the upper reservoir. The pump P driven by a small motor continually pumps the oil back again into B, the oil being returned to B again and again until it has acquired the desired consistency. In a few hours the oil is generally so far thickened that it spins threads through the holes in the bottom of B, but the time naturally varies with the temperature and the height of the fall. Samples for judging the progress of the operation are taken from the filling opening at O. Oil prepared in this way is only very slightly darker than the original, and can be used for the preparation of coloured inks.

BOILED OIL AND ROSIN.

To make an ink which will not spread at the edges of the letters with nothing but pure linseed oil and pigment it is necessary to use an oil which has been very considerably thickened by one of the processes already described, and the resulting ink, although perfect in its way, is very expensive. In the cheaper inks thickeners are added to the drying linseed oil, and in this way inks suitable for ordinary printing are made.

The thickeners used are both rosin itself and rosin soap, and when the ink has not to be of specially fine quality, a linseed oil which has been only slightly thickened by oxidation can be used. The process of adding the thickeners is not difficult but requires some care since they must be quite free from solid particles.

The rosin is melted in a pan with constant stirring, and then the rosin soap is gradually stirred into it a little at a time, waiting till each lot is dissolved before adding more. The soap must

be quite dry and should be added in the form of thin shavings. While the soap and rosin are being mixed, the linseed oil is being heated up in another pan over which is hung a closely woven linen filter. Into this the rosin and soap are poured and carefully stirred into the hot oil as they drip through. From time to time a sample of the oil is taken and its consistency when cold is noted. If it is too thick it can be diluted with more oil. If it is too thin, the addition of the rosin and soap is continued. It is possible to get a single mixing which will answer every purpose. It is usual to prepare three stock mixtures, weak, medium, and strong. The following recipes show how these mixtures may be prepared, but the proportions may be altered so as to produce intermediate kinds if desired. It will be observed that rosin oil is used in some cases. Like the drying vegetable oils it thickens and dries by absorbing oxygen from the air. It will dry very fast when spread thinly on paper. This property of rosin oil inevitably led to its being tried by makers of printing ink as a partial substitute for the dearer linseed oil. These attempts met with so much success that inks are now made with very little linseed oil in them. Since the purification of rosin oil has been perfected the objectionable smell which was at one time an obstacle to its use can now be almost totally removed. Cheap inks, such as are used for newspapers, are now all made in this way.

RECIPES.

A. Linseed Oil Vehicles.

I.

	Weak.	Medium.	Strong.
Thick boiled linseed oil	100	100	100
Rosin	25	25	25
Rosin soap	—	—	3
Thin linseed oil	1-7	4-5	—

II.

Thick boiled linseed oil	100	100	100
Rosin	50	50	50
Rosin soap	10	10	10
Thin linseed oil	8-9	6-7	0-1

III.

	Weak.	Medium.	Strong.
Thick boiled linseed oil	100	100	100
Rosin	75	75	75
Rosin soap	7½	7½	7½
Thin linseed oil	10-12	8-9	1-1½

B. Linseed and Rosin Oil Vehicles.

I.

Weak Composition.

	Weak.	Medium.	Strong.
Thick boiled linseed oil	100	100	100
Rosin oil	100	100	100
Rosin	50	100	150
Rosin soap	6	10	15
Thin linseed oil	6-7	15-18	10-12

II.

Medium Composition.

Thick boiled linseed oil	100	100	100
Rosin oil	100	100	100
Rosin	50	100	100
Rosin soap	6	10	15
Thin linseed oil	7-8	10-12	15-18

III.

Strong Composition.

Thick boiled linseed oil	100	100	100
Rosin oil	100	100	100
Rosin	50	100	150
Rosin soap	6	10	15
Thin linseed oil	4-5	2-3	—

C. Linseed and Rosin Oils Compositions with Turpentine.

I.

Weak Composition.

	Medium.	Strong.
Raw linseed oil	100	35
Rosin oil	200	100
Rosin soap	4	7
Rosin	—	100
Turpentine	4	2

II.

Medium Composition.

	Medium.	Strong.
Raw linseed oil	100	100
Rosin oil	25	10
Rosin soap	1	1
Rosin	—	10
Turpentine	1	1

III.

Strong Composition.

Raw linseed oil	30	3
Rosin oil	25	10
Rosin soap	1	1
Rosin	—	10
Turpentine	1	—

TINTED PRINTING INKS.

Printers' inks consisting solely of purified lamp-black and vehicle give, of course, impressions which are pure black. It is, however, well known that a black which has to a practised eye a tinge of blue in it looks much better than a pure black. To make such a tinted ink many makers mix the lamp-black with a blue pigment, which is added in very fine powder before the first grinding. Prussian blue is the pigment usually chosen and gives very attractive results. Prussian blue is, however, not a remarkably stable substance, as it is very apt to turn brown from the formation of ferric oxide. Hence an ink made with Prussian blue, although it may have a good appearance at first, often assumes a dull brown hue in the course of time. Excellent substitutes for Prussian blue are to be found in the Induline blues. These are very fast dyes, and inks tinted with them do not change colour. As pure indigo is now made artificially and sold at a reasonable price, this extremely fast dye can also be used for tinting inks made with purified lamp-black.

MAKING PRINTING INKS.

The manufacture of printing inks involves two operations, mixing the pigment with the vehicle and making the mixture homogeneous.

When it is a question of mixing in mineral pigments which usually have a considerable specific gravity, the work is simple enough. The vehicle being in a vat the finely powdered pigment is poured into it in a thin stream with constant stirring to get rid of air bubbles, and to mix it as perfectly as possible.

The pasty mass formed then goes straight to the colour mill. It is a better plan, however, to effect the preliminary mixing itself by mechanical means rather than by hand. Such machines can be procured and their use facilitates the passage of the ink through the colour mill. The case is different when the pigment to be mixed is lamp-black. In this case the particles are very minute, and of low specific gravity and contain quantities of entangled air. When the mixture is stirred it will be found that there are several practical difficulties. The lamp-black floats obstinately on the surface of the vehicle, is scarcely wetted by it, and even after long stirring the mixture is anything but satisfactory, at the same time there is great loss of lamp-black, which flies into the air in dust. The best procedure is to put the lamp-black into the mixing vessel first, and stir in enough vehicle to make a thick paste, to which the rest of the vehicle is then added.

Under any circumstances, however, the manufacture of large quantities is inconsistent with hand labour, and machines are used which mix well and prevent all loss of lamp-black. The amount of lamp-black required for a given quantity of vehicle depends upon the nature of the lamp-black, and the kind of ink to be made, varying from 20 to 30 per cent of the weight of the finished ink. For making ordinary newspaper and poster inks, common lamp-black is used, while for book-printing the ink is made from purified lamp-black, as the common sort would show brown on the white paper. The very finest lamp-black is used for the highest class of letterpress and art inks. Then, too, a blue black is often preferred to a full deep black, for the sake of appearance, this being usually imparted by means of the purest Prussian blue.

MIXING MACHINES.

The machinery used in printing ink manufacture may be divided into two groups—the preliminary mixers, and the mills for making the rough mixture homogeneous. The preliminary mixer ought, however, to save a good deal of the work of the mill, whereby a large amount of time is saved. The mixer most suitable to use depends a good deal upon the amount of power available. If there is plenty of power at command at a cheap rate, such as water power, rapid work is not so important as when more expensive sources of power such as steam engines are used.

THE ROLLING CASK.

If water power is at hand, this form of mixing machine is much to be recommended. It is represented in Fig. 64.

It consists of an ordinary barrel or large drum *a*, through the ends of which runs the axle *e e'*, which does not, however, pass through the centre of the ends, but on a slant. On turning the crank shaft *c*, each end of the drum is lifted in turn, and the contents violently agitated. The materials are put in through

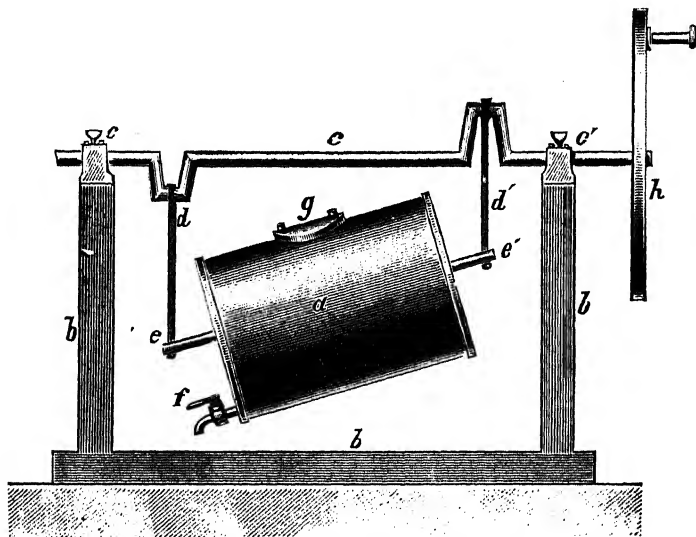


FIG. 64.

the opening at *g* which is then securely closed by means of a cover bolted on. One end of the drum is fitted with the tap *f* to draw off the finished mass. The axle of the drum is put into connection with the motor, and the cask is moved not too fast, but at about twenty turns of the shaft per minute. This is quite fast enough to get good mixing. How long the shaking needs to be kept up to get a good mixture depends, of course, on the size of the drum and the amount of material in it. The drum should not be more than two-thirds full. To ascertain the time required, a sample is taken from the drum every half-hour, the drum being kept going, until a sample spread on glass laid upon white paper

shows no visible drops of vehicle or lumps of pigment. The mass can then go to the colour mill.

Many industries require machinery for mixing powders together or for mixing solids with liquids, therefore machine makers have devised a variety of apparatus for this purpose. We now proceed to describe some of the types.

MIXING AND KNEADING MACHINES.

A very suitable mixing machine is that of Quack, shown in Figs. 65 and 66.

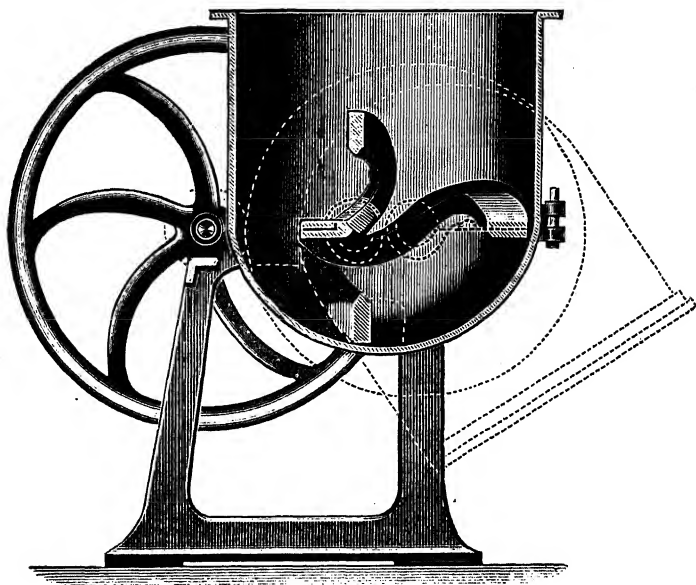


FIG. 65.

The mixer in this machine is a cylinder with a hemispherical bottom. Two curved blades are rotated inside this by means of a fly-wheel worked by hand, or, if power is used, by a belt and pulley. When the contents of the vessel have been thoroughly mixed by the blades, they are turned out by tilting the vessel. The two blades rotate in opposite directions, thus effecting a very perfect mixing in a comparatively short time. If the machine is used for mixing the lamp-black for printing ink, it must be closed

with a well-fitting lid while at work, otherwise large quantities of lamp-black will escape as dust when the mass is thrown about by the rotating blades.

An excellent mixing and kneading machine, which is now much favoured in factories, is that of Werner and Pfeleiderer. The construction of the machine is such that the motion of hand-stirring with a spoon in semicircular sweep can be imitated with the same precision as that with which it kneads a pasty mass. These machines were at first made chiefly for the use of bakers, enabling them to turn out perfectly mixed dough in a much less time than by hand labour. Fig. 67 shows the essential feature of this machine, namely, the specially-formed stirrer, which rotates in the trough. As this comes very close to the bottom of the

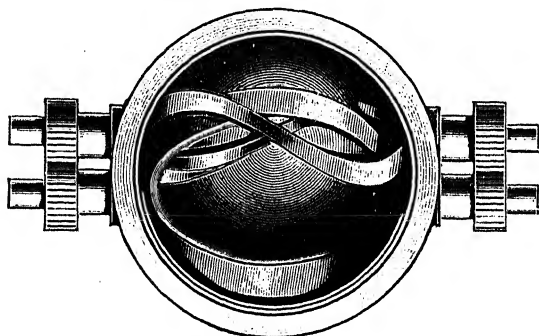


FIG. 66.

trough, it seizes upon the mass put into it, crushing and kneading it in a similar fashion to the hands. The mass passes over the stirrer, and falls back to the bottom of the trough, where it is again kneaded, and so on, uninterruptedly, as long as the machine is in movement. In machines intended for mixing fine powders with liquids, the trough is provided with a well-fitting lid, which can be entirely removed when the machine is to be cleaned.

In using this machine for mixing lamp-black with a vehicle, it is better to proceed somewhat differently than with other mixing machines. Instead of putting powder and liquid together into the trough, and then running the machine until the mixing is complete, the whole of the lamp-black should first be put into the trough with just enough vehicle to convert it into a rather stiff paste. The rest of the vehicle is added at intervals during

the working of the machine. In this way a mixture may be produced which in many cases is quite as good as that produced with

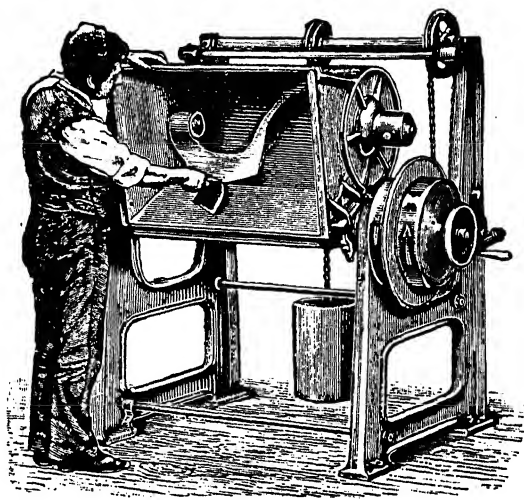


FIG. 67.

a roller colour mill, such as shown in Fig. 68, and a perfectly satisfactory printer's ink will be the result.

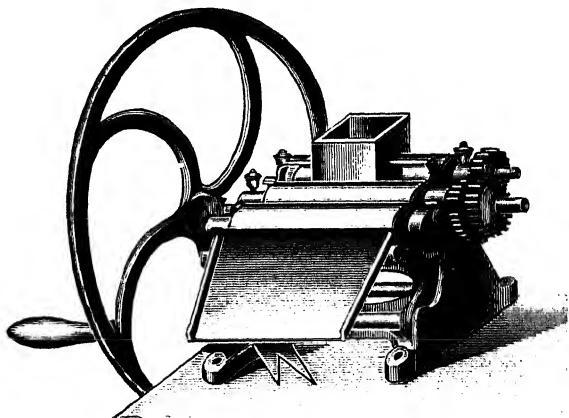


FIG. 68.

In a printing-ink factory care must be taken to have one preliminary mixer large enough to keep all the colour mills going.

When this is the case, both power and machinery are employed to the fullest advantage, and the maximum of output can be obtained.

PRINTING INKS OF SPECIAL COMPOSITION.

We have now given the most approved compositions for inks for books and art printing, and supplied instructions for making them in a way which will meet with every requirement. Nevertheless new recipes are continually appearing, many being patented, for the manufacture of printing ink, making use of all sorts of substances, very different from those generally employed. It is perfectly reasonable to regard these recipes with a certain amount of suspicion, it is therefore quite unnecessary to fill whole pages of this book with them. We shall confine ourselves to a selection of a few recipes, which in our opinion will really give useful inks. Among the inks deserving attention are those made with oleic acid, or with tar oil, which will now be briefly described.

OLEIC ACID INKS.

Oleic acid or oleine is the liquid obtained in stearine candle factories by pressing the cakes of fatty acid, obtained from the crude fat, in a hydraulic press. Stearic acid and palmitic acid being crystalline solids at the ordinary temperature, remain in the press, the pressure driving out the liquid oleic acid at first mixed with them. Oleic acid is a yellow oily liquid, known as oleine in commerce. A property of oleic acid, important for our purpose, is the ease with which it can be emulsified with solution of carbonate of soda. This permits of the oleic acid ink being easily cleaned off the types.

RÖSL'S OLEIC ACID INK.

Mix together 9 lb. of Austrian turpentine, 10 lb. of soft soap, 4 lb. of oleic acid, and 4 lb. of lamp-black (more if a very black ink is wanted) by the aid of heat, and pass the whole through an ordinary paint mill. The type is cleaned after the use of this ink with a 1 per cent solution of washing soda.

ARTUS'S OLEIC ACID INK.

Heat 6 lb. of Venice turpentine with 3 lb. of oleic acid. Then mix in thoroughly 8 lb. of soft soap. Then mix in 5 lb. of lamp-

black, 4 lb. of Prussian blue, 2 lb. of oleic acid, and 2 lb. of water. This does not differ greatly from Rösl's ink. It must be remembered that the oleic acid added last will not dissolve in the water added with it, so that all the oleic acid might as well be added at the first. The Prussian blue must be in the finest possible powder.

COAL-TAR OIL INKS.

When coal tar is distilled, a whole series of products of various degrees of consistency is obtained, from liquids like water to thick oils. These products are separated by taking advantage of the difference in their boiling points and are distinguished by their specific gravities; those oils having specific gravities between 0.85 and 0.89 can be used for making printing ink.

According to one recipe, an excellent vehicle is prepared by boiling 100 lb. of linseed oil with 6 lb. of litharge, until a cold sample can be drawn into fine threads. Then are added 40 lb. of rosin and 20 lb. of coal-tar oil. These are boiled to the desired consistency, adding a little coal-tar oil occasionally if the mass is too thick. The ink is made by mixing lamp-black with this vehicle in the usual way.

G. THENIUS'S PRINTING INK.

This is a coal-tar oil ink, prepared according to the following remarkable recipe: Boil 25 lb. of linseed oil with 3 lb. of litharge until a cold sample is fairly thick. Then add 10 lb. of pale American rosin previously melted. When all the rosin is dissolved add 5 lb. of coal-tar oil. Then remove from the fire and stir till cold. Before the coal tar can be used, it must be purified by mixing every 100 lb. of it with $\frac{1}{2}$ lb. of bichromate of potash, $\frac{1}{4}$ lb. of manganese peroxide, and 2 lb. of sulphuric acid, in a vessel lined with lead. After stirring up well, let the mixture stand for a few hours. Then draw off the clear liquid from the sediment, and wash the liquid till it is quite neutral, first with dilute caustic soda, and then with water. This treatment of the coal-tar oil with powerful oxidizing agents is probably intended to destroy the powerful odour which the crude oil possesses.

CHAPTER XVI.

OTHER LAMP-BLACK INKS. .

BESIDES the lamp-black coloured masses used for letterpress printing inks, there are some others used for different graphic purposes which differ materially in their composition from ordinary printing inks. These products include Indian ink, and lithographic inks and "chalks". As regards the first article it came originally from China, where as well as in other Asiatic countries it is employed for the purpose of writing. In Europe it is chiefly used for engineering and architectural designs, and in the plans drawn for the sale of estates. Lithographic inks are liquids which can be used either for drawing or for writing, and differ in two respects from ordinary writing inks. In the first place they must resist the action of certain reagents, and in the second they must be entirely removable from the stone by proper solvents. The lithographic "chalk," erroneously so called, is a substance with which one can write on stone as with a pencil on paper and must have the two properties above mentioned. Both in lithographic and in Chinese inks, the colouring matter is finely-divided carbon, the preparation of which has already been described. They can be prepared with any carbon pigment, vine black, yeast black, bone black, etc., etc., provided the pigment is sufficiently finely divided. The art of preparing lamp-black for special purposes, especially for Chinese ink and the finest art printing inks, is the trade secret of many manufacturers. Anyone who has properly learnt the methods of lamp-black making, however, will see that there can be no secret about the matter, for every pure lamp-black consists of the same substance, viz. amorphous carbon.

In former times the idea was expressed that everything depended upon what raw material was used for the making of the lamp-black, but it is now known that this is a secondary matter, the great secret lying in freeing carbon from the impurities which

are mixed with it when it is first made. Now the impurities depend upon what raw material is used. Those adhering to lamp-black made from rosin are different to those it contains when made from rosin oil, and these are again different from the contaminations inseparable from the preparation of lamp-black from petroleum, while the foreign matters in raw lamp-black made from fats are different again. Hence a certain amount of experience will enable one to tell by smelling the crude carbon from what raw material it was prepared. Whatever the raw material may be the treatment above described with caustic soda removes all the impurities and the final result is then the same in all cases.

It will now be clear that a maker of lamp-black ought to choose a raw material containing the largest percentage of carbon in proportion to the price so as to give the largest yield of lamp-black and must take great care to free his lamp-black from impurities by a proper treatment with caustic soda. Another important matter in the manufacture of Indian ink and ordinary printing inks of good quality is the thorough amalgamation of the lamp-black with the vehicle. If this point is neglected, the very finest lamp-black will be wasted with the production of very inferior inks.

MANUFACTURE OF INDIAN INK.

The lamp-black used for this purpose is commonly quoted as an example of a special kind of black. Indian ink came to us first from China where it is used for writing after having been rubbed up with water. For a long time after it was imported into Europe nothing was known of the method of manufacture. Since China has become more accessible, the process of manufacture has been discovered, and it may be briefly described as follows:—

In a small brick stove connected with a pipe having a gentle upwards slope sesame oil is burnt in a primitive lamp consisting of an oil holder and a wick. The gases from the smoky flames pass up the inclined pipe. This pipe is lengthened by paper tubes stuck end into end until no visible smoke appears, the carbon being all deposited in the pipes. When a certain amount of oil has been burnt, the operation is suspended, the tubes farthest from the stove being first taken down, those namely which contain the finest particles of lamp-black. Only the very finest particles

are used for making the ink. The rest of the product is coarser and is rendered more impure by tarry matters. This is used for the manufacture of coarser and cheaper pigments.

The unpleasant smell of acrolein, a decomposition product of all fats, adhering even to this very finest lamp-black, the Chinese manufacturers hide it by adding a little camphor and musk. The work in China is all hand labour. The lamp-black is mixed with gum solution to form a thick paste which is rolled into sheets with wooden rollers. The sheets are folded up and rolled out again, again folded, and again rolled, and so on till the mass is perfectly uniform. It is then pressed into moulds, and dried in the air. Any cracks which appear in the pieces are stopped with some of the fresh paste. The fully dry sticks, which are rather hard, have hieroglyphics painted on them in gold for the best sorts, and are packed in tissue paper.

To ascertain whether the Chinese method really gives better Indian ink than that prepared in Europe from highly purified lamp-black we carried out the Chinese process exactly as above described, burning sesame oil and following every detail exactly. The finest of the lamp-black was moulded with the best gum arabic and tragacanth mucilage and scented with a little of the tinctures of musk and camphor. The rolling was done by hand exactly as described. The result was a product quite equal to the finest Chinese manufacture in every respect. Another lot of paste was made, mixing the materials by machinery. Microscopic examination showed, as might have been expected, that the machine-mixed sample was much more uniform than that mixed by hand after the Chinese fashion. Finally, a mass was prepared with lamp-black prepared from fish oil, carefully purified with caustic soda. The three sorts were then compared, that made in China, that made by us from sesame oil in the Chinese way, and that made from fish oil. No difference between the three inks could be detected. This shows that if a product is carefully made from purified lamp-black the possible limit of excellence has been reached.

It has been reported by various travellers who were afforded the opportunity of visiting Chinese Indian ink factories, that different raw materials are used for making the lamp-black. Oils, fats, and the resins of various trees are all mentioned. As even in China itself these inks are met with in very different qualities, we may take it for granted that oil or fat lamp-black is used for the finer

sorts and the coarser resin lamp-black for the inferior kinds. Common Chinese inks show clearly the characteristic brownish mark produced by unpurified lamp-black. The art of purifying lamp-black by calcination or by treatment with caustic soda seems unknown to the Chinese.

The lamp-black is bolted through very fine silk cloth, boiled with glue water with constant stirring and then kneaded with the hands exactly like dough. When the mass is uniform it is heated to facilitate the shaping of it, and pressed into moulds where it is allowed to dry slowly.

Fine sorts of Chinese inks are always very carefully got up. The sticks generally bear a large number of Chinese characters painted in blue and red and are often wrapped in real gold leaf.

On attempting to make the inks by this Chinese method it will be found that the setting of the glue hinders the mechanical working of the mass. This can, however, be easily avoided by preventing the glue from gelatinizing by the use of a little acetic acid. The small amount added evaporates during the drying of the ink, but to prevent it from attacking the metal moulds, the insides of these are lightly rubbed with fine wood oil.

LITHOGRAPHIC INKS AND CHALKS.

Lithography consists essentially in making a drawing with lithographic ink or chalk on a specially prepared fine grained limestone known as a lithographic stone. A liquid is then poured on which dissolves the surface of the stone, except where it is protected by the ink. The stone is then rinsed free from the etching liquid and a new liquid poured on. This dissolves the ink, so that the parts which it covered remain in relief when the stone is cleaned with a sponge. If then a printing roller is passed over the stone, it leaves the ink on the raised parts from which paper can be printed in a press.

There is a very large number of recipes for lithographic inks, differing, however, more in the relative proportions than in the nature of the ingredients. Most of these compositions contain wax, soap, and shellac, together with fine lamp-black as a pigment. Many of them contain spermaceti also, but this can be replaced by tallow without seriously deteriorating the quality of the ink.

In trying a new recipe always commence by using very small quantities. An ounce or so will show whether the material answers its purpose. If it does not do so it is as well to try the effect of varying proportions of the ingredients. When success has been achieved it will be time enough to commence making a large quantity. The reason why several attempts have usually to be made before a satisfactory result can be obtained, even with an approved recipe, is that the ingredients vary more or less in quality. The soap used may contain more water than that demanded in the recipe. The wax often shows very different properties according to the degree of bleaching it has undergone, and the shellac may not be quite the same.

Most recipes which really give good results direct that the ingredients should be heated strongly enough to catch fire, and should be allowed to burn for a short time. We have, however, convinced ourselves that this burning is nothing more or less than sheer waste of valuable material. It is sufficient to heat to close upon the ignition point without actually reaching it.

Hence a metal pot with a well-fitting lid should always be used for the preparation of lithographic inks. The lid will at once extinguish the flame if the ink should by chance catch fire. When the flame has been put out the pot must be taken from the fire and allowed to cool a little before removing the lid, otherwise the ink may again take fire when it is exposed.

RECIPES FOR LITHOGRAPHIC INKS.

1. *German Recipe.*

Bleached virgin wax	80 lb.	
White grain soap (tallow)	20 „	as free from water
Ruby shellac	20 „	as possible.
Finest flame lamp-black	20-25 „	

The soap must first be dried. This is done by shaving it in fine shreds with a carpenter's plane, the shavings being spread out on paper near a stove. As the soap loses its water, the shavings rapidly shrink and finally form a mass easily rubbed to powder. The dried soap must be kept from the air in well-closed vessels, as it soon absorbs water vapour if exposed to it.

Having first melted the wax in the pot, heat it till it begins to develop the characteristic smell and then gradually add the

soap. An assistant continually stirs the mass all the time with a wide paddle. When the mixture heats up till white fumes begin to rise, this marks a close approach to the ignition point, so that on the appearance of the fumes the pot is removed from the fire and the lamp-black is stirred in in small quantities at a time. The pot is then replaced on the fire and heated till the mass is permanently fluid. The stirring must be kept up till a sample spread out thinly on a sheet of glass appears quite homogeneous. If the mixture is not homogeneous the final product will be wanting in uniformity and be blacker in some places than in others. The shellac is next scattered in fine powder over the hot mass which is vigorously stirred all the time. When a sample on glass appears uniform, allow the mass to cool till it is just liquid enough to be poured into moulds, into which it is run and soon sets into hard shining masses.

The following six recipes are made up exactly as above directed, the quantities being in pounds avoirdupois:—

2. *English Recipes.*

	1	2	3	4	5	6
Yellow wax	40	—	140	18	6	100
Mastic	10	60	—	24	6	—
Gum lac	22	—	100	—	—	—
Tallow soap	22	60	70	18	6	100
Lamp-black	9	50	32	15	3	50
Shellac	—	300	—	36	30	100
Soda ash	—	60	—	—	6	50
Tallow	—	—	—	18	—	50
Turpentine	—	—	—	3	—	—
Rosin	—	—	10	—	—	—

The chief difference between English and German recipes for lithographic inks is that the latter often contain fat, usually mutton suet. Soda is used along with this and forms an emulsion with the fat. Generally speaking English lithographic inks are rather softer than those made from German recipes.

LITHOGRAPHIC CHALKS.

Chalks or crayons for lithography closely resemble in composition the lithographic inks, and like them must be easily removable from the stone after resisting the action of the etching liquid. They must in addition be capable of being sharpened with a knife like a lead pencil. The mass for moulding is made by melting

the ingredients together and stirring them well until the mixture is quite uniform. It is then cast into moulds and when it has set to a certain extent it is rolled out into thin rods. We sub-join four recipes with quantities in pounds avoirdupois:—

1. *For Strong Etching.*

Wax	64	64
Oil soap	22	48
Tallow	24	—
Saltpetre	2	3
Lamp-black	15	24
Spermaceti	—	32
Shellac	—	16

2. *Hard Chalk.*

Wax	50	60
Shellac	35	25
Soap	35	45
Soda	5	5
Tallow	5	10
Lamp-black	20	20

CHAPTER XVII.

INKS FOR TYPEWRITING MACHINES.

IN the typewriter steel type at the ends of levers strike against a dyed silk ribbon, forcing the part of the ribbon struck against the paper which is supported by an india-rubber roller so as to make an impression of the letter on the paper. To avoid changing the ribbons frequently they are made very long, 20 yards or more. Every tap on a lever rolls the ribbon up a little so that the next type strikes it in a fresh place. In later makes of machine the broad ribbon has also a lateral movement, so that the types do not hit only on one line on the ribbon, which would soon wear it out. Hence the places struck form a wavy line on the ribbon, so that the ribbon can be used for a long time as the blows rarely hit exactly the same part of it again.

It is easy to see that unless the ink used is one that goes a very long way it will soon give out in spite of these ingenious contrivances. Each letter made uses some of it. Hence for dyeing typewriter ribbons the colours must be chosen which are distinguished by a high degree of colouring power, so that a slight blow of the smallest steel type is sufficient to make a distinct impression on the paper. Even the most powerful colour would, however, not last long if it simply lay upon the face of the ribbon.

The ribbon must store up considerable quantities of colouring matter in its pores which will replenish the surface when it is exhausted, so that as long as there is any dye in the ribbon it is distributed uniformly through the fabric. A properly prepared ribbon 22 yards long will suffice to print thousands of pages of forty lines of seventy letters each before the dye is so far exhausted that the ribbon must be changed for a new one.

It will readily appear from the foregoing that in making typewriter ribbons attention must not be confined alone to the

colouring matter, the textile fabric must possess sufficient porosity to serve as a reservoir for a considerable quantity of dye-stuff.

TYPEWRITER RIBBONS.

Choose a thin but closely woven material of which both warp and weft must be silk (cotton tape is, however, usually employed). This fabric, which must have at least the ribbon length of 22 yards, is cut into strips a little narrower than the distance between the flanges of the reels which are to take the ribbon. In cutting the strips care must be taken to cut exactly parallel to the direction of the warp, or some of the warp threads will work loose when the machine is used, catch in the mechanism and affect the running at last to such an extent that the whole machine will require a thorough cleaning. In a properly cut ribbon no threads get loose even with long-continued wear, and no harm is done to the machine. No silk fabric containing any sort of size or dressing whatever can be used for typewriter ribbons. Not only is a dressed or weighted silk too hard, but it is not sufficiently porous. To test a piece of silk wash it first in lukewarm water, and then with lukewarm soap and water, rinse, and dry stretched on a frame. When dry it must have exactly the same feel and appearance as at first.

THE INKS.

As already mentioned, inks for typewriters must go a long way and must be such as will distribute themselves through the silk in a permanently liquid form. There is only one variety of colouring matter which possesses the first quality to a sufficient degree, the coal-tar dyes, which surpass all other colouring matters immeasurably in strength. For this reason no other inks except those for non-copying are used for typewriter ribbons. The dyes used are either blues or violets, several of these being suitable. A water soluble blue or methyl violet are most commonly employed. But other coal-tar dyes can be used if desired, whether they are soluble in water or otherwise, for those insoluble in water may be dissolved in spirit. As, moreover, most coal-tar dyes are soluble in glycerine, which must always enter into the composition of a typewriter ink, the maker has a fairly free hand in his choice of a dye.

It is often desirable to have a black ink for typewriters ; such a one can be made with nigrosine, but it must not be forgotten that this dye, although it may be very finely divided, does not form a real solution. This property makes it very difficult to prepare a typing ink from it which will give clean impressions. If the ink is made with an induline blue, the colour of the writing is so deep that it appears nearly black, so that these blues are very suitable for use when very dark letters are required.

To make the ink, weigh out enough of the dye to serve for a number of ribbons. One hundred grammes (about $3\frac{1}{2}$ oz.) is enough for a great many ribbons. Then take the same weight of pure glycerine and dilute it with its own weight of water. The glycerine must be weighed in a tared vessel, the amount of glycerine used being estimated by a second weighing. The dye is put into a porcelain basin and moistened with about half the dilute glycerine. The basin is then gently heated, stirring the contents with a glass rod. Most coal-tar dyes are freely soluble in glycerine, the solution in the basin being promoted by warming. If the dye is one which is insoluble in water and but sparsely soluble in glycerine, add a little strong spirit, but not while the basin is over a flame, otherwise it would take fire.

To ascertain when all the dye is dissolved, try if any solid particles can be felt with the end of the glass rod and let a drop of the mass from the end of the rod into a glass of clean water. The drop must form a perfectly transparent thread of clear colour and sink to the bottom. On stirring, the whole of the water must become uniformly coloured and no solid particles must be seen floating in it. When this test shows that complete solution has occurred stop heating and allow the mixture to cool. In cooling the material often becomes gritty. This shows that some of the dye has crystallized out because there is not enough glycerine to keep it in solution at the ordinary temperature. If this occurs add some more of the dilute glycerine and heat up again, for as long as there is solid matter in the cold mass it is unfit for use. When the mass no longer becomes gritty on cooling it is ready for the ribbons. Dye a sample piece of ribbon a few yards long in the mass and dry it in a stretched state. It should then yield dye to the finger when lightly pressed. The ribbon is then put on a typewriter and tested by actual use. If

it gives weak and thin letters there is not enough glycerine in the ink. If, on the other hand, the impressions are broad and letters which enclose a space, such as o, b, a, and e, have the space filled up with dye there is too much glycerine present, therefore the dye smudges.

The function of the glycerine is to keep the ink liquid. As the ink dries on the ribbon, the water or spirit used as a solvent gradually evaporates, and the ink would get quite dry were it not for the fact that the glycerine does not evaporate but, on the contrary, absorbs water from the air. The ink, which is for the most part dissolved in the glycerine (a little may in time separate in small crystals), is kept by it distributed through the whole substance of the ribbon. — When the type impinges on the ribbon, ink is transferred to the paper from the surface of the ribbon, but is immediately replaced by ink from the interior of the silk. We see here the reason why many typewriter ribbons give much better impressions after having been in use for a time than they did when new. The ink has to be made rather too fat, i.e. with a small excess of glycerine. When by use some of the ink has been removed from the ribbon, the ink in the pores of the fabric again spreads uniformly and has again acquired the proper consistency for giving very clear impressions.

Once the right composition of the ink has been hit upon by means of the above mentioned tests, a formula can be made for use on future occasions. As above stated, the initial quantities were 100 grammes of coal-tar dye, 100 of glycerine, and 100 of water. If it is found that of the 200 grammes of liquid 156 have been used, the formula will be as follows :—

Dye	100 grammes	} 256
Glycerine	78 "	
Water	78 "	

The inks when properly made are usually too thick to be easily used on the ribbons. All then that requires to be done is to dilute them with water or spirit to the proper consistency. When the ribbon is dried the extra water or spirit evaporates, but the amount of dye remains the same and so does that of the glycerine. Hence the proper proportion between dye and glycerine does not change. Nevertheless the ink should not be diluted more than is absolutely necessary to get it into the ribbon, for


an over-diluted ink would adhere so weakly to the silk that extra dye would then have to be painted on to the ribbon, a very troublesome and lengthy process.

INKING THE RIBBONS.

The ribbons are not properly prepared until the ink is uniformly distributed over the surface and through the entire thickness. This result can be secured only by a special process. If the ribbons are stretched out and then painted with the ink with a brush, they can in this condition be used, but a comparison of several pages typed in succession will show that the strength of the impression varies very much. This indicates that there is too much ink in some parts of the ribbon and too little in others, which results in some of the writing being too heavy and some too light.

THE INKING APPARATUS.

The inking is best done by dipping the ribbons and then pressing them. For this purpose a very simple apparatus may be used whereby the ribbons can be inked very uniformly and rapidly. It consists of a rectangular dish of glass or porcelain to hold the ink. Over one of the ends of the dish a glass rod is held horizontally by supports. Twelve to sixteen inches above the middle of the dish is a wringer consisting of two rollers of soft vulcanized rubber. One of the rollers has fixed bearings, but the other can be adjusted by means of springs so as to press with more or less force against the first. The ribbons are laid in the ink so that they can be lifted out without getting entangled. This is best done by putting them in layers one above another parallel to the length of the dish. A ribbon is left to soak for several hours. One end of it is then put between the rollers, and the pressure is regulated by screwing up the springs till, although the superfluous ink is squeezed out, the ribbon comes from between the rollers quite wet as if it had been drawn through water. The excess of ink falls back into the dish as the rollers turn and the ribbon passes between them. On leaving the rollers the ribbon is at once stretched out so that it cannot shrink on drying and is kept stretched for at least twelve hours. It is

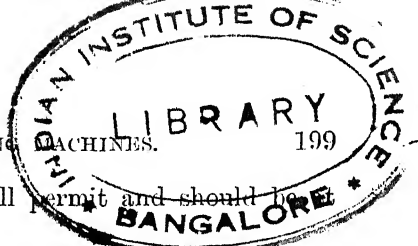

then as dry as the glycerine in it will permit and should be once rolled up.

Many typewriters have two fixed reels, the ribbon being reeled on to one as it leaves the other. Ribbons intended for such a machine are rolled up on a wooden reel and then packed for dispatch. In machines of more recent construction the ribbon reels can be taken out, the ribbons being sold on the reels which have to be used in the typewriter.

The finished ribbons must be packed in such a way that they are preserved from damage during transit and from the access of dust. A good plan is to wrap the rolled ribbon in paraffined paper with a stronger wrapper over that. The parcels thus made should be packed in metal boxes, and will then be safe from dust or damage.

MAKING CARBON PAPERS.

Modern typewriters are so made that copies can be taken at the same time that the original typing is being done. With good carbon papers as many as six copies can be obtained at one operation. The copying process is as follows: Under the paper which is to receive the original is laid a carbon paper with the prepared side away from the first paper. Next to this coloured side is a second sheet of white paper. If the keys are struck with some force the carbon paper will mark the second paper exactly as the ribbon marks the first. If the carbon paper is very thin and the copying paper also, it is possible to get six quite distinct copies. Even more can be made, but the impressions are less distinct, and, moreover, in taking several copies much force has to be used on the keys of the machine which throws severe tax on the endurance of the mechanism.

CARBON PAPER.

A very careful choice of paper must for this purpose be made. The sheets to be made into carbons must be soft and thin, and at the same time very strong. It is evident that this is a rare combination of qualities, therefore anyone who wishes to make carbon papers on a large scale must come to some agreement with the paper-maker.

Hitherto the papers chiefly used for the purpose have been

made from a very long stapled material without any sizing. Such papers answer the purpose fairly well. Of late, however, a paper has been made for this use far surpassing all others that we have had the opportunity of trying. It is made by steeping a thin, fine, long stapled silk paper in a solution of viscose. When thoroughly soaked the paper is removed and spread out flat. After lying like this for a time the paper assumes the appearance of a very thin gelatinized skin. Before it is quite dry it must have weights piled on it or be run between rollers to prevent the surface from corrugating. The viscose solution is made by putting fine and well-cleaned cotton into a porcelain vessel and treating it with strong caustic soda lye. The cotton is well stirred and kneaded with a glass or porcelain pestle to ensure its thorough penetration by the lye. When this has been done the vessel is left in a cool place at a temperature not exceeding $5-6^{\circ}$ C. for a few hours. At this temperature the cellulose of the cotton combines with soda forming soda-cellulose, which does not differ in appearance from ordinary cellulose. When it has been formed the excess of lye is squeezed out very thoroughly so that the mass appears scarcely damp. It is then at once put into a glass vessel which can be tightly closed with a well-fitting stopper. Here it is treated with a weight of bisulphide of carbon equal to about 10 per cent of that of the original cotton. The stopper is firmly inserted and the vessel is put in a cool place. Bisulphide of carbon is very volatile and inflammable, and should never be poured on to the cellulose by artificial light. After the bisulphide has been in contact with the soda cellulose for about twelve hours the mass turns yellow from the formation of viscose. The stopper is then removed, and when the excess of bisulphide has evaporated water is poured over the viscose. Soon after this has been done, the mass swells up considerably and dissolves to form a thick, sticky liquid, which, when exposed to the air, decomposes, reproducing pure cellulose. Hence by pouring it over a glass plate a perfectly transparent skin of pure cellulose can be obtained. When the silk paper is soaked in viscose this penetrates completely into the paper, so that when it decomposes it fills all the pores of the paper with cellulose, giving it the leathery nature above alluded to, making it very strong, while it remains soft, thin, and supple, and thus possesses the very qualities required for a carbon paper.

INK FOR CARBON PAPER.

This ink is made exactly in the same way as that for typewriter ribbons, except that once the proportions between glycerine and dye have been arrived at, no water is used, nothing but dye and glycerine.

The simplest method is to take a large porcelain basin, put the weighed amount of glycerine in it, and heat slowly to 100° C. The dye is then stirred into the hot glycerine and the stirring is continued until solution is complete. The finished ink must be thick, but on no account gritty from undissolved dye. If this should, however, be the case, a little more glycerine will put matters right. Many makers add a little fatty oil to the ink, but the quantity must be very small or the impression from the paper will probably show an unsightly greasy border. Three to four per cent of the total is the extreme limit allowable, the oil being preferably castor oil, an oil which dissolves readily in spirit, whereby its thorough amalgamation with the ink is made easy. The dye having been stirred into the glycerine, the castor oil is added last in solution in spirit, and the whole mass is worked till quite homogeneous. During the stirring most of the spirit evaporates and a very brief heating of the finished ink will free it from all spirituous smell.

The ink is spread as uniformly as possible with a wide brush over a level plate of stone or glass, and rolled out uniformly with a printing ink roller so that a rather thick coating of the ink remains on the roller. The sheet of paper to be inked is also laid on a level plate under a sheet of strong paper in which a rectangular opening is cut a little smaller than the paper to be inked. The object of this upper sheet is to prevent any ink getting on the under side of the sheet to be inked. It is important that the ink should only be upon one side, otherwise the paper would make impressions where they were not required. The inked roller is then passed over the sheet to be inked, which becomes penetrated with colour to a certain depth. The ink must, however, not be thin enough to pass right through. The roller is then again inked and passed over the paper in a direction at right angles to the first to ensure the distribution of ink as uniform as possible. The rolling is continued, re-inking the roller each time, until the ink on the paper is thick enough to

appear as a uniform shining layer which can for the most part be shaved off the paper with a thin knife blade. No ink must stick to a finger passed lightly over the paper. The finished carbon papers should be kept in a well-closed box to prevent them from getting too dry, and in the box should be interleaved with ordinary writing paper.

When a copy has been taken the mark of every letter can be plainly seen on the carbon paper by looking obliquely at the inked surface. The parts where the types have struck are dull instead of shining, having lost a large part of their ink. If the carbon is to be used a second time it is put into the typewriter so that the types will strike between the lines formed on the paper the first time. In this way the sheet of carbon can be used again and again until its whole surface has been brought into requisition.

RUBBER STAMP INKS.

The ink used on vulcanized rubber stamps should be such that when applied to a suitable pad it remains sufficiently fluid to adhere to the stamp. At the same time the fluidity should cease when the stamp is pressed upon an absorbing surface such as paper.

Formerly these inks were made by rubbing up pigments in fat to a paste. Such inks can, however, rarely be prevented from making impressions surrounded by a greasy mark caused by the fat spreading through the pores of the paper. Now, however, most stamping inks are made without grease, and a properly prepared stamping ink contains nothing but glycerine and coal-tar dye. As nearly all these dyes dissolve in hot glycerine the process of manufacture is simple enough. The dye, fuchsine, methyl violet, water blue, emerald green, etc., is put into a thin porcelain dish over which concentrated glycerine is poured, and the whole is heated to nearly 100° C. with constant stirring. It is important to use no more glycerine than is necessary to keep the dye dissolved when the ink is cold. If the mass turns gritty on cooling it must be heated up with more glycerine till solution is perfect.

In dealing with coal-tar dyes insoluble in glycerine, or nearly so, they should first be dissolved in the least possible quantity of

strong, hot alcohol. Then the glycerine is added and heat applied till the spirit is evaporated.

To see whether the ink is properly made spread some of it on a strip of cloth and try it with a rubber stamp. On paper, the separate letters should be quite sharp and distinct. If they run at the edges there is too much glycerine in the ink and more dye must be added to it. If, on the contrary, the impression is indistinct and weak, the ink is too thick and must be diluted by carefully adding glycerine.

INDELIBLE STAMPING INKS.


Stamp inks made with coal-tar dyes can often be removed by washing with spirit or with lye. The so-called indelible marking inks made with nitrate of silver can be absolutely removed from the fabric with cyanide of potassium solution.

For many trade purposes, e.g. when a manufacturer sends his goods to be bleached or dyed, it is of importance to stamp them with an ink which cannot be removed by washing or by treatment with any chemical. A stamping ink answering to this description is nigrosine, a black compound which cannot be destroyed in a fabric. But to make nigrosine adhere to the fabric in really indestructible fashion it must be developed in the fibre. To do this cut a stencil in strong cardboard, making a hole in the centre just large enough to receive the stamp. Then make a solution of 4 oz. of sulphate of copper in a mixture of 20 oz. of water and 2 of glycerine. Paint the solution on to the fabric through the hole in the stencil and let it dry on. In the meantime prepare a solution of aniline salt in distilled water and thicken it with gum until it will give a sharp impression with the stamp. If the stamp wetted with the aniline solution is pressed on the treated part of the fabric, nigrosine is generated in the fibre and the impression is absolutely indelible.

Another equally indelible stamping ink is made by thoroughly rubbing up a concentrated solution of viscose with fine lamp-black or any other finely-powdered pigment. When this ink is used with a stamp the decomposition of the viscose forms cellulose which encloses the colouring matter, fixing it to the fabric, and the cellulose envelope cannot be destroyed without also destroying that part of the fabric to which it adheres.

STAMP INK FOR GLASS.

This special stamp ink is an etching ink used to produce indestructible marks or writing on glass by chemical means. The ink develops hydrofluoric acid which corrodes the glass. To make it, prepare separately a solution of 30 oz. of sodium fluoride and 7 of potassium sulphate in 500 of water, also one of 14 oz. of solid zinc chloride and 65 of concentrated hydrochloric acid in 500 of water. The two solutions are then mixed. If a goose quill is dipped in the mixture it will write on glass, and a dull etched place appears wherever it touches. The mixture can also be used with a rubber stamp. When the ink has been applied it is left untouched for a few hours to etch deep enough and is then rinsed off with water. Rubber stamps used with this ink must be thoroughly cleaned with weak lye directly after using as they are rapidly destroyed by prolonged contact with the ink.

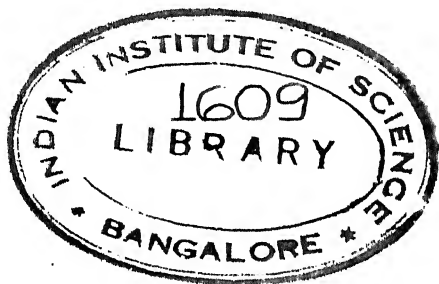



INDEX.

A.

	PAGE
Acaroid resin	7
Accra copal	5
Accroides	7
African balsam	10
Alsace turpentine	9
Alumina, rosinate of	100
— enamel	100
Amber	4, 21, 48
American frankincense	8
Ammoniac	12
Ammoniacum	12
Angola copal	5
Apparatus, vacuum	68
Asafoetida	12
Austrian turpentine	9

B.

Balsam, African	10
— Canada	9
— copaiba	10
— Gilead	9
— Illurin	10
— of fir	9
— of Peru	10
— of Tolu	10
Bdellium	11
Benguelo copal	5
Bismuth enamel	110
Black, bone	161
— carbon	119
— grease	91
— lamp	117
— vine	162
— yeast	168
Blue cart grease	89
Boiled oil and rosin	177
— — testing	174
Boiling linseed oil	172
— pans	95, 96, 97
Bone black	161
Bordeaux turpentine	9
Brewers' pitch	20
Burner for lamp-black	127, 184, 186, 188, 140, 141, 142, 143, 145

C.

	PAGE
Cadmium enamel	112
Camphene, purification of	75
Canada balsam	9
Carbon black from resinous woods	119
— papers	199
— — ink for	201
— — making	199
— pigments	159, 161, 162, 163
Cart grease filling	92
— — making	92
— — manufacture of	89
— — patent	97
— — black	91
— — — blue	89
— — coloured	90
— — yellow	91
Cask, rolling	181
Chemical purification of lamp-black	157
Chios turpentine	9
Chromium enamel	112
Coal tar oil inks	186
Cobalt enamel	112
Cod oil, manufacture of	82
Collection of rosin	14
Colophony	7, 13
Coloured cart grease	90
Common rosin	1
Congo copal	5
Constituents of rosin oil	71
Copaiba balsam	10
Copal	24
— Accra	5
— Angola	5
— Benguelo	5
— Congo	5
— Demerara	5
— distillation of	33
— drying	29
— East Africa	4
— Loango	5
— Manila	5
— Sierra Leone	5
— South American	5
— West African	4
— Zanzibar	4, 43
Copals	4
Crude products, nature of	70
— — yield	67

D.

Dammar	6
Demerara copal	5
Didecene	72
Dissolving apparatus	38, 39
— resin	37

	PAGE
Distillation of hard resins	27, 33
-- plant	36, 37, 46, 47, 54, 56, 57, 59, 60, 61, 62, 63
-- products of	43
-- of rosin	15, 45, 51
Distilled resin, dissolving	87
Diterbenthyl	72
Diterbenthylene	72
Dragon's blood	10
Drying copal	29
-- stove	30

E.

East African copal	4
Electric thermometer	31
Elemi	8
Enamel, alumina	110
-- bismuth	110
-- cadmium	112
-- chromium	112
-- cobalt	112
-- gold	113
-- iron	111
-- lead	111
-- platinum	112
-- uranium	111
Enamels	109
-- metal	112
Euphorbium	12

F.

Fats, lamp-black from	139
Filling cart grease	92
Filtering resin solution	40
Finland turpentine	9
Fir, balsam of	9
Flame lamp-black	144
-- -- purification of	155
Frankincense	11
French turpentine	9

G.

Galbanum	12
Gallipot	9
Gamboge	11
Gas black	144
-- from rosin	45
German turpentine	9
Gilead, balsam of	9
Glass, stamp ink for	204
Gold enamel	113
Grease, cart	89
Grinding machine	184
Guaiaacum	11
Gum benzoin	8
-- resins	3, 10
-- thus	8

H.

PAGE

Hard resins	21
— — distillation of	27
Heat, effect of	43
Herrburger purification method	77
Hoffman purification method	80
Hungarian turpentine	9

I.

Illurin balsam	10
Indelible stamping inks	203
Indian ink, manufacture of	188
— olibanum	11
Ink for glass	204
Inking apparatus	198
— typewriter ribbons	198
Inks	195
— Artus's	185
— coal tar oil	186
— for typewriting machines	194
— G. Thenius's	186
— Indian	188
— lithographic	190, 191, 192
— oleic acid	185
— other lamp-black	187
— printing	169, 178, 179, 185, 186
— Rösli's	185
— rubber stamp	202
Insoluble rosin soaps	99
Introduction	1
Iron enamel	111
Ivory black	161

J.

Jura turpentine	9
---------------------------	---

K.

Kauri resin	5, 43
Kelbe purification method	79
Kneading machine	182, 183, 184
Kramer and Flammer purification method	78

L.

Lamp-black burners	127, 134, 136, 138
— — chambers	119, 121, 124
— — flame	144
— — from liquids	136
— — — rosin	134
— — — oil	137
— — inks	179, 187
— — liquid fats	139
— — manufacture of	117
— — pigments	160
— — purification of	122, 155, 157

	PAGE
Larch turpentine	9
Lead enamel	111
Linseed oil, boiling	172
Liquid fats, lamp-black from	189
— storax	10
Liquids, lamp-black from	136
Lithographic chalks	190, 192, 193
— inks	190, 191, 192
— varnishes	171
Loango copal	5
Lubricants, manufacture of	87
— patent	87

M.

Machines, mixing	180, 181, 182, 183, 184
— roller	163
Manila copal	5
Mastic	6
Mills for grinding resins	28, 29
— paint	160, 161, 162
Mixing machines	180, 181, 182, 183, 184
Myrrh	11

N.

Naphtha, retin	71
— rosin	71

O.

Oil, boiled	177
— rosin train	72
— thick	175
Oils, constituents	71
— lamp-black from	139
— manufacture	58
— rosin	51, 71
— yield	67
Oleic acid inks	185
Oleo resins	3, 8
Olibanum, Indian	11

P.

Paint mills	160, 161, 162
Paints, resinate	107
Pans for boiling	95, 96, 97
Papers, carbon	199
— — ink for	201
Patent blue cart grease	89
— cart grease	92
— lubricants	87
Peru, balsam of	10
Pigments, carbon	159, 161, 162, 163
— rosinate	113
Pinoline, purification of	75
Pitch, brewers'	20
Platinum enamel	112

S.

	PAGE
Sandarac	6
Scammonium	12
Scammony	12
Shaking machine	38
Shellac	7
Sierra Leone copal	5
South American copal	5
Stamping inks	202
— — indelible	203
Stamp ink for glass	204
Stills, resin	36, 37
Storax	10
— liquid	10
Strasburg turpentine	9
Sulphate of alumina	101
— — zinc	104

T.

Tallow, rosin	72
Testing boiled oil	174
Thenius' printing ink	186
Thermometer, electric	31
Thick oil	175
Tolu, balsam of	10
Train oil, rosin	72
Turpentine, Alsace	9
— Austrian	9
— Bordeaux	9
— Chios	9
— Finland	9
— French	9
— German	9
— Hungarian	9
— Jura	9
— Larch	9
— Russian	9
— Strasburg	9
— Venice	9
Typewriter machines, inks for	194
— ribbons	195
— — inking	198

U.

Uranium enamel	111
--------------------------	-----

V.

Vacuum apparatus	63
Varnishes, resinate	105
Venice turpentine	9
Vine black	162

	PAGE
Printing inks	169, 179, 185
— making	179
— manufacture of	169, 178, 179, 185, 186
— tinted	179
Products of distillation	43

R.

Resinate paints	107
— varnishes	105
Resinates	94
Resin, acaroid	7
— dissolving	37
— kauri	5
— oleo	3
— proper	3, 4, 5, 6, 7, 8
— properties	3
— solutions, filtering	40
— stills	36, 37
Resineon	72
Resinon	72
Resinous woods, carbon black from	119
Resins, changes on heating	43
— distillation of	27, 33
— gum	3
— hard	21
— mills for grinding	28, 29
— sources	3
Resisterene	72
Retin naphtha	71
Retinol	72
Retinyl	71
Roller machines	163
Rolling cask	181
Rosinate of alumina	100
— paints	115
— pigments	113
— zinc	103
Rosin, collection of	14
— common	1, 7, 13
— distillation of	15, 45, 51
— gas from	45
— lamp-black	134
— naphtha	71
— oil, constituents of	71
— — lamp-black from	137
— — purification of	74, 76
— — varnishes	85
— oils	51
— — manufacture	53
— — properties	83
— — rectification	73
— — rectifying	58
— — yield	67
— soaps	94
— — insoluble	99
— tallow	72
— train oil	72
Rubber stamp oil	202

W.

West African copal	PAGE 4
------------------------------	-----------

Y.

Yeast black	163
Yellow cart grease	91
Yield of crude products	67

